



# MANUAL for the 2026 season and onwards

ONTOUR A | C | T | PRESTIGE T | MAXIA T

Version 02/2026



**Hobby**  
BUILT FOR LIFE



Dear Camper,

Congratulations on the purchase of your new Hobby motor home. The trust you have placed in us is both an incentive and an obligation to continuously implement new ideas, technical innovations and fine touches to make our motor homes even better. Our fully fitted and highly sophisticated models enable us to offer you the perfect setting for the most enjoyable days of the year.

Please read this user manual carefully, even if you have already been using a motor home for quite some time. This will help to prevent operating errors and damage to the vehicle and its equipment. Handling all of the technical details correctly will increase the pleasure you get from driving and using this vehicle and help to retain the value of your motor home.

If this user manual should be unable to provide the required assistance, a close, pan-European network of dealers is available for further help. Take advantage of your authorised dealer's experience and technical knowledge - we recommend speaking to them in detail before taking your first trip with your Hobby motor home.

We wish you and your fellow travellers many enjoyable trips and hope you will always have a safe journey with your new Hobby motor home.

Your

Hobby – Wohnwagenwerk

Ing. Harald Striewski GmbH

**Chapter 1: Introduction**

|     |                                                 |   |
|-----|-------------------------------------------------|---|
| 1.1 | General information.....                        | 4 |
| 1.2 | Key to using these operating instructions ..... | 5 |

**Chapter 2: Safety**

|       |                                                |    |
|-------|------------------------------------------------|----|
| 2.1   | Intended use .....                             | 7  |
| 2.2   | General information .....                      | 7  |
| 2.3   | Fire protection .....                          | 8  |
| 2.4   | Equipment .....                                | 10 |
| 2.4.1 | Emergency equipment.....                       | 10 |
| 2.4.2 | Vehicle tool kit.....                          | 11 |
| 2.5   | Before driving.....                            | 11 |
| 2.5.1 | What to observe before your first journey..... | 11 |
| 2.5.2 | Before each journey .....                      | 12 |
| 2.6   | Whilst driving .....                           | 14 |
| 2.7   | After driving .....                            | 17 |

**Chapter 3: Chassis**

|       |                                                            |    |
|-------|------------------------------------------------------------|----|
| 3.1   | General information .....                                  | 18 |
| 3.2   | Vehicle identification number (VIN).....                   | 18 |
| 3.3   | Loading.....                                               | 19 |
| 3.3.1 | General information .....                                  | 19 |
| 3.3.2 | Information on vehicle weights and weightrelated data..... | 20 |
| 3.4   | Tow bar.....                                               | 23 |
| 3.5   | Automatic transmission.....                                | 24 |

**Chapter 4: Wheels, tyres**

|     |                     |    |
|-----|---------------------|----|
| 4.1 | Wheels .....        | 26 |
| 4.2 | Tyres .....         | 26 |
| 4.3 | Tyre pressure ..... | 27 |

|     |                                        |    |
|-----|----------------------------------------|----|
| 4.4 | Tyre tread depth and age of tyres..... | 28 |
| 4.5 | Wheel rims .....                       | 29 |
| 4.6 | Changing a tyre .....                  | 30 |
| 4.7 | Fast tyre repair kit.....              | 31 |

**Chapter 5: Exterior Structure**

|     |                                            |    |
|-----|--------------------------------------------|----|
| 5.1 | Ventilation .....                          | 32 |
| 5.2 | Opening and closing doors and lockers..... | 34 |
| 5.3 | Entrance step.....                         | 41 |
| 5.4 | Tail supports.....                         | 42 |
| 5.5 | Roof.....                                  | 43 |
| 5.6 | Sun awning.....                            | 44 |
| 5.7 | Aftermarket Modifications .....            | 45 |

**Chapter 6: Interior Structure**

|      |                                                     |    |
|------|-----------------------------------------------------|----|
| 6.1  | Opening and closing doors, lockers and drawers..... | 46 |
| 6.2  | Articulated TV Bracket .....                        | 50 |
| 6.3  | Worktop extension.....                              | 52 |
| 6.4  | Tables.....                                         | 53 |
| 6.5  | Seating arrangements and sleeping areas.....        | 55 |
| 6.6  | Rearranging the cushions.....                       | 66 |
| 6.7  | Washroom.....                                       | 68 |
| 6.8  | Windows.....                                        | 69 |
| 6.9  | Blind system for driver's cab .....                 | 74 |
| 6.10 | Thermal curtain for driver's cab .....              | 75 |
| 6.11 | Skylight.....                                       | 77 |
| 6.12 | Seats in the driver's cab .....                     | 79 |
| 6.13 | Construction of the seats .....                     | 80 |
| 6.14 | Seatbelts in the motor home.....                    | 81 |
| 6.15 | Overview of the seating arrangements .....          | 82 |

**Chapter 7: Electrical Installations**

|       |                                                   |     |
|-------|---------------------------------------------------|-----|
| 7.1   | Safety instructions.....                          | 84  |
| 7.2   | Elements of the electrical system.....            | 84  |
| 7.3   | Control panel/7" Touch control control panel..... | 86  |
| 7.3.1 | HobbyConnect.....                                 | 99  |
| 7.3.2 | Remote control.....                               | 109 |
| 7.4   | Smart-Trailer-System.....                         | 111 |
| 7.5   | Electric power supply.....                        | 113 |
| 7.6   | Electrical system.....                            | 124 |
| 7.7   | Connections.....                                  | 128 |
| 7.8   | Special lights.....                               | 132 |
| 7.9   | PIONEER media system.....                         | 133 |
| 7.10  | Subsequently installed devices.....               | 135 |

**Chapter 8: Water**

|     |                          |     |
|-----|--------------------------|-----|
| 8.1 | General information..... | 136 |
| 8.2 | Water supply.....        | 136 |
| 8.3 | Toilet.....              | 142 |

**Chapter 9: Gas**

|     |                                                   |     |
|-----|---------------------------------------------------|-----|
| 9.1 | General safety rules when using LPG fittings..... | 146 |
| 9.2 | Gas supply.....                                   | 148 |
| 9.3 | External socket for gas.....                      | 156 |
| 9.4 | Gas warning system.....                           | 157 |

**Chapter 10: Built-in devices**

|        |                                              |     |
|--------|----------------------------------------------|-----|
| 10.1   | General information.....                     | 158 |
| 10.2   | Heating.....                                 | 158 |
| 10.2.1 | Truma-Combi Heating System C4/C6 E/D6 E..... | 158 |
| 10.3   | Refrigerator.....                            | 173 |

|      |                       |     |
|------|-----------------------|-----|
| 10.4 | Gas cooker.....       | 180 |
| 10.5 | Fume hood.....        | 182 |
| 10.6 | Oven.....             | 184 |
| 10.7 | CAMPERNET.....        | 185 |
| 10.8 | Satellite system..... | 191 |
| 10.9 | TV.....               | 192 |

**Chapter 11: Accessories..... 194****Chapter 12: Maintenance and Care**

|      |                                                                    |     |
|------|--------------------------------------------------------------------|-----|
| 12.1 | Maintenance.....                                                   | 196 |
| 12.2 | Brakes.....                                                        | 197 |
| 12.3 | Changing the rear light bulbs.....                                 | 197 |
| 12.4 | Changing the battery and maintenance of the<br>smoke detector..... | 199 |
| 12.5 | Airing.....                                                        | 200 |
| 12.6 | Care.....                                                          | 201 |
| 12.7 | Winter Lay Up for the Motor home.....                              | 206 |
| 12.8 | Winter Operation.....                                              | 207 |

**Chapter 13: Sanitation and Environmental Protection**

|      |                                    |     |
|------|------------------------------------|-----|
| 13.1 | The environment and traveling..... | 210 |
| 13.2 | Returning the vehicle.....         | 213 |

**Chapter 14: Technical Data**

|      |                                    |     |
|------|------------------------------------|-----|
| 14.1 | Chassis data.....                  | 214 |
| 14.2 | Load increased.....                | 216 |
| 14.3 | Vehicle and equipment weights..... | 217 |
| 14.4 | Tires and rims.....                | 218 |
| 14.5 | Tyre pressures.....                | 219 |

|            |     |
|------------|-----|
| Index..... | 220 |
|------------|-----|



# Chapter 1: Introduction

## General information

Our motor homes are continuously being updated and for this reason we must reserve the right to make changes to the equipment, shape and technology.

Certain kinds of accessories are also described in this user manual that are not part of the standard scope of delivery. For this reason, no claims may be asserted against Hobby based on the contents of this user manual.

Those accessories that are available at the time of going to print are described here. They have been applied on a par for all floor plans. Please note that it was not possible to describe all of the individual variations here.

If you have any special questions concerning accessories or the technology of the vehicle, your dealer will be happy to answer them.

Your Hobby motor home has been built in accordance with the latest technology and approved safety regulations. Despite all precautionary measures, however, it is possible that passen-

gers may be hurt or the motor home damaged if the safety instructions in this user manual and the warning stickers placed throughout the motor home are not observed.



We would explicitly like to point out that we do not accept any liability for damages or malfunctions that arise because these operating instructions have been ignored.

- Please use the motor home only when it is technically in top condition.
- Any defects that affect the safety of passengers or the motor home should be remedied immediately by trained personnel.
- The brake system and the gas system may only be inspected and repaired by an authorised specialist.
- Specified inspection and MOT deadlines must be met.

## Before making your first journey

Please do not consider this manual to be just a means of reference, but familiarize yourself thoroughly with it before making your first journey.

Fill out the guarantee cards in the different manuals for the installed equipment and fittings and send them to the manufacturers. This will ensure guarantee claims for any of the equipment. Your Hobby dealer will fill out the warranty registration card for your motor home.



In accordance with guarantee conditions, Hobby gives you a 12-year guarantee through your dealer against leaks in the mobile home's structural connections. Maintenance must be carried out regularly and maintenance intervals observed - this is a prerequisite for ensuring warranty. Maintenance must be carried out by an authorised Hobby dealer and documented by him in the Hobby Customer Service History booklet. In addition, all inspections are reported to Hobby by the dealers.



**Annual leak checks are not free of charge.** If a consistency test has not been carried out, you will forfeit any claims for a 12-year guarantee on consistency.

## 1.2 Key to using these operating instructions

This manual explains the motor home in the following manner:

### Texts and illustrations

Texts that refer to illustrations are found directly below the illustrations.

Details in illustrations (here: Habitation door) have been given item numbers .



Indicating details with the help of position numbers

## Lists

Lists are given in the form of key words and shown as bullet points using „•“.

## Operating instructions

Operating instructions are also given in the form of key words beginning with the symbol „●“.

## Notes



Notes point out important details that ensure your motor home and its fittings will function perfectly. Please remember that there may be some differences in description to the various kinds of equipment that can be supplied.

## Warnings



Warnings point out dangers which, if they are not followed, could cause damage to equipment and/or injury to persons.

## Environmental Tips



Environmental tips give you possibilities for lessening the impact on the environment.

## Optional Extras

You have selected a motorhome that is equipped to taste.

This user manual describes all of the models and equipment offered within the same season. Therefore, it may include equipment that you have not selected.

Differences and, thus, all of the optional extras are marked with an asterisk „\*“.

For technical reasons, optional extras cannot always be installed in all models. Should you have any questions, please speak to your Hobby dealer.



Should there be any equipment or a model that is not described in this user manual, please note the enclosed additional operating instructions.

## Relevance of This Manual

The high level of quality and security for motorhomes is ensured by means of continuous improvements and development. In very rare cases, there may be a difference between the description and the mobile home itself.

## Chapter 2: Safety

### 2.1 Intended use

This motorhome has been designed as a mobile travel accommodation for private, not commercial use. This is a recreational vehicle that is fit for habitation. It offers accommodation that can be used temporarily or seasonally and which meets the requirements for the construction and use of the vehicle on the road. It is not intended for permanent residence. Furthermore, no more than the number of people for which this motorhome has been designed may spend the night in the vehicle. When the motorhome is on the road, it may only be used in accordance with road traffic regulations and national vehicle safety standards.

This motorhome may not be used for the commercial transport of people/animals and/or goods. On public roads, the motorhome may only be used for carrying personal equipment. Transporting unsecured loads and/or packages is forbidden.

Each person travelling in the motorhome must sit on a seat that is equipped with a seatbelt and wear the seatbelt whenever the vehicle is moving. The number of people travelling in the motorhome may not exceed the number of seats equipped with a seatbelt.

Please ensure that the technically permissible maximum weight of the motorhome and the permitted axle load(s) per axle are not exceeded.


No use of the motorhome other than that described here is permitted; any other use is regarded as contrary to the intended use.

### 2.2 General information

- The motorhome may only be driven on public roads by someone with a valid driving licence category for such vehicles.
- Operating and user instructions for built-in equipment (refrigerator, heating, cooker, etc.) as well as for the basic vehicle must be observed at all times.
- If accessories or optional extras have been fitted, this may change the measurements, weight and road performance of the motorhome. Some accessories that are fitted after purchase of the vehicle must be entered in the registration document.
- Use only tyres and rims that have been approved for your motorhome. Information on tyre and rim sizes can be found in the user manual or in **Chapter 14.4 Tyres and rims**.



Warnings and information labels are attached both inside and outside the vehicle. These are meant for your safety and must not be removed.

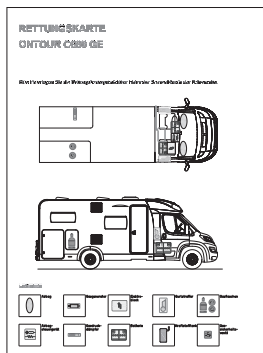

Example of a safety information sheet

## Safety information sheets

A safety sheet for each vehicle should be stored behind the sun visor. The rescue sheets are available for downloading from Hobby's homepage under [www.hobby-caravan.de](http://www.hobby-caravan.de) (language: German). Should there be an accident, the emergency services can obtain all of the important information for this specific model from the safety sheet.



Treat the safety sheet with care; do not make it illegible and always store it in the designated place in the sun visor.

## 2.3 Fire protection

### Precautions against fire

- Never leave children and vulnerable Individuals alone in the vehicle.
- Keep inflammable materials away from all heating and cooking devices.
- Any changes to the electric system, gas system or built-in devices may only be carried out by an authorised person.
- Keep an ABC dry powder fire extinguisher by the entrance door.
- Ensure that everyone is familiar with the operating instructions on the fire extinguisher.
- Store a fire blanket near the cooker.
- Do not block any escape routes.
- Familiarise yourself with all safety measures for the vehicle and camp site.

### Fighting fire

- Immediately evacuate all passengers.
- Close the main stop valve on the gas bottle and the individual gas taps for any gas appliances installed.
- Gas bottles that cannot be removed should be cooled with water.
- Turn off the electric supply.



- Sound the alarm and call the fire department.
- Only fight the fire yourself if you can do so without risk.

## Smoke detector



Smoke detector

The motorhome has been fitted with a battery-operated smoke detector on the ceiling. Should smoke be detected inside the vehicle, a loud alarm will go off, warning any passengers of a possible fire.

The detector's own electricity supply is powered by a 9V block battery, ensuring that the smoke detector will function independent of the vehicle's electric system, even if the power supply has been switched off.

- To activate the smoke detector, pull the protective foil off the block battery and insert the battery.
- Use the test button to test the smoke detector ①.



Please refer also to the device manufacturer's operating manual.

For more information on using and changing the battery, please refer to Chapter **12 Maintenance and Upkeep**.

A smoke detector will not prevent fires or put them out. If it is working properly, it will merely provide you with those possibly decisive seconds to save yourself and notify emergency services.

## 2.4 Equipment

### 2.4.1 Emergency equipment


To ensure that you are prepared for an emergency, always carry the following three rescue devices with you and make sure you are familiar with how to use them.

#### First-aid kit

The first-aid kit should always be at hand and have a fixed position in your motor home. If things have been removed from the first aid kit or used they must be replaced as soon as possible. Expiry dates should be checked regularly.

#### High visibility jacket\*

In accordance with individual country regulations, carrying a high-visibility warning vest on board and wearing it in accordance with DIN EN 471:2003+A1:2007 or EN ISO 20471:2013 is mandatory when leaving the vehicle.

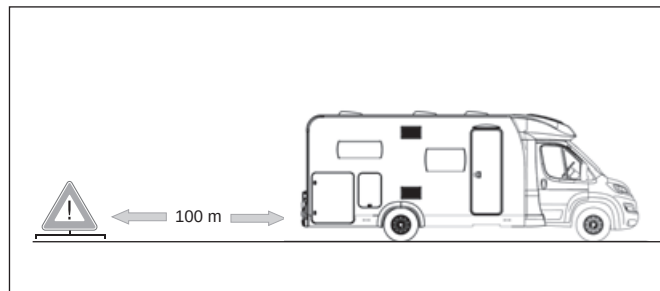

Minimum distance between warning triangle and motorhome

#### Warning triangle

The warning triangle should also always be at hand and have a fixed position in your motor home, preferably together with the first-aid kit.

#### In an emergency

- Set up the warning triangle at least 100 m ahead of the danger zone!



Please observe the national regulations of the countries you are driving through with regard to carrying and wearing emergency equipment.

Motorhomes with a technically permissible maximum weight of more than 3.5 tons must also carry a flashing warning light; with a technically permissible maximum weight of more than 4 tons they must also carry at least two (2) chocks (not included in the standard equipment.).



Tool bag

### 2.4.2 Vehicle tool kit

Each vehicle comes with individual basic equipment including a vehicle tool kit and accessories. The tool bag is included separately in the vehicle. When the vehicle is delivered, it is located in the passenger door.

## 2.5 Before driving

### 2.5.1 What to observe before your first journey

#### Vehicle registration (in Germany)

Every vehicle that drives on public roads must be registered. This also applies to your new motorhome. Apply for registration at your local Driver and Vehicle Licensing Agency.

The following documents are required to initiate the registration process:

- Motor Vehicle Registration Certificate Part II and/or Certificate of Conformity (CoC)
- Electronic Insurance Certificate/eIC Number
- personal identification or proof of residence
- possibly, power of attorney to have someone else register the vehicle
- if applicable: direct debit mandate for taxes

#### General inspection (in Germany)

In common with passenger cars new motorhomes with a permissible total weight up to 3.5 tonnes do not have to undergo a MOT (German equivalent) for the first three years after initial registration. Check with an approved MOT test centre to find out when and how often mobile homes with a permissible maximum weight of 3.5 tons must be checked in the UK. After this a MOT (German equivalent) must be carried out every year.

The MOT (German equivalent) can be carried out by the German Technical Surveyance Association (TÜV), the German Engine Vehicle Surveyance Association (DEKRA) or an officially approved expert.



Any changes made to the vehicle that underlie German Road Traffic Licensing Regulations must be officially authorised!

Please inform yourself abroad about any national regulations that may apply with regard to registration and general inspection of your motorhome.

If you have any further questions or difficulties, your authorised Hobby dealer will always be available to assist you!



- Use a torque wrench to check the wheel nuts after driving the first 50 miles with your motorhome.
- Switch off the gas-operated built-in appliances before refuelling the vehicle.

## 2.5.2 Before each journey


### Road safety

- Before driving, check that the signalling and lighting systems (switch on battery circuit breaker, **see Chapter 7**), steering and brakes function correctly.
- If the vehicle has been standing for a longer period of time (approx. 10 months) have an authorised workshop check the brake system and the gas system.
- Set up (re - position) the vehicle's wing mirrors.
- Open the blinds on the front and side windows fully and secure. Should there be a thermal curtain\*, remove and store it.

- In winter, the roof must be cleared of snow and ice before driving.
- Regularly check the tyre pressure before driving. Incorrect tyre pressures can cause excessive wear, damage to the tyres or even lead to a puncture or blow out (**see also Chapter 14.5**).
- Check liquids such as oil, coolant, brake fluid and windscreen washer fluid and top them up if necessary.



Only begin to drive when your motorhome fulfils all of the conditions for roadworthiness.

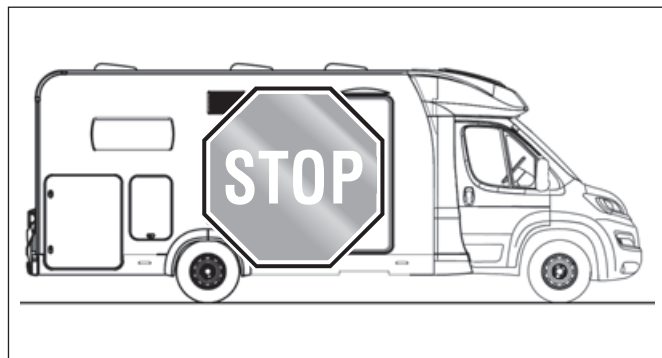

**Prepare the vehicle before driving!**

As the owner / driver of the vehicle, you are responsible for the state of the vehicle. Please observe the following points:

## Battery



- Fully charge the batteries before each journey. See also “Ancillary battery” in Chapter 7.
- Switch on battery circuit breaker.

## Driver's cab

### Do not forget the following

- Position the driver's seat correctly to enable you to drive safely.

## Interior

### Preparing the interior

- Close all of the windows in the vehicle as well as the roof bonnets and roof windows and lock them securely.
- Sort loose objects and stow them in the compartments.
- Store heavy and / or large objects (e.g. TV, boxes of wine or cases of beer) safely before you start your journey, securing them to prevent them from moving around (see also Chapter 3.3 Loading).
- If necessary switch the refrigerator to 12 V operation (**exception:** if the refrigerator is running in automatic mode, the device will automatically select the most suitable form of energy).
- Ensure that no liquids, including those in the refrigerator, will leak.
- Unless the vehicle has been equipped with a gas pressure regulator for use while driving (e.g. Control CS), close all of the emergency shutoff valves on the individual gas devices.

- Close doors (including refrigerator door), drawers and lockers firmly (if necessary, lock the central lock on the kitchen drawers).
- Secure the table and, if possible, lower it.
- Should there be an overcab bed, move it to the upright position and lock it into place.
- If necessary, secure the articulated TV bracket\* and if possible, remove the TV\* and store it in a safe place.
- Turn off interior lights.
- Fully open and secure the darkening system for the driver's cab.
- Should there be a thermal curtain\*, remove it from the driver's cab.
- If fitted, secure the shower doors.



Do not overload the vehicle! It is imperative that you do not exceed permissible axle loads, the technically permissible overall mass as well as the permissible height, width and length of the motor home.

Gas bottles must be placed and secured correctly in the gas box only.

Ensure that there is sufficient ventilation. Never cover up built-in forced ventilation (skylights with forced ventilation). Ensure that forced ventilation is not covered by snow or leaves.  
**Danger of suffocation.**



The mass when ready to drive indicated in **Chapter 14 “Technical Data”** was calculated based on the fresh water tank holding 10 % of a full tank. The fresh water tank should be drained before starting to drive so that it holds only the recommended 10 litres (see **Chapter 8 “Water”**).


Place a note with all important measures and weights in a visible place in both the motor home and the driver's cab.

## Preparing the vehicle

Check the exterior of the vehicle and carry out the following preparations before driving:

### Preparing the vehicle

- If necessary, fold up the tail supports\* have been extended, retract them.
- If necessary, retract the entrance step (automatic).
- If necessary, switch off the awning light.
- If necessary, pack away the the awning and stow the winding handle securely in the storage area of the motor home.
- If necessary, lower the satellite dish\*.
- Close and lock the entrance door and the locker doors.
- Close the drain valve for the waste water tank.
- Secure gas cylinders.
- If connected remove the 230 V electric cable from the exterior socket.

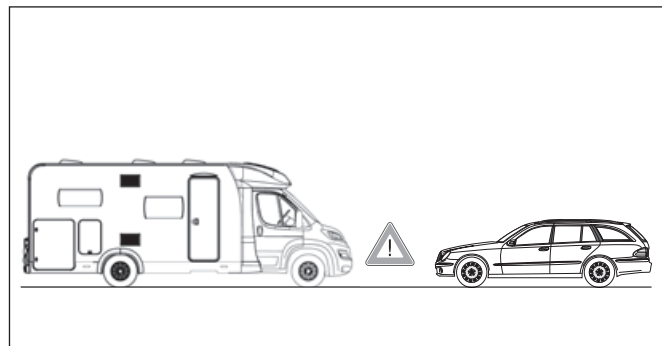

Observe the specific features of the motorhome's driving performance!

## 2.6 Whilst driving

### Your motor home is not a car!

In many situations, it reacts very differently to a “normal” car. Therefore, you should be prepared for the following differences:

### Passenger safety

#### The following applies when driving

- Only those seats equipped with seat belts may be used by passengers.
- People may not be lying in the beds while driving.
- Passengers must remain in their seats with their seat belt on!
- Only fit children's car seats on seats that have been fitted by the manufacturer with three-point belts.

- Turn the cab seats to face forward and lock them into place. The seats may not be turned when the vehicle is moving.
- Do not open the door latch!
- You must only have the same number of passengers as seats with seatbelts fitted.

## Driving

Before the first longer journey, take a test drive or complete a safety training course to familiarise yourself with the motorhome's driving and handling characteristics. Remember to practise reversing. The base vehicle is a commercial vehicle; adjust your driving style accordingly.

### The following applies for driving

- Do not underestimate the length and width of the motor home. Due to the relatively long rear overhang larger vehicles can veer to one side and, on uneven ground, the rear can hit the ground.
- Be careful when driving into inner courtyards and through entrance gates.
- The motor home may start to sway from side to side in crosswinds, on wet or icy roads.
- If the motor home starts to swing, step carefully but firmly on the brake to stabilise the vehicle.
- **Never** accelerate if the motor home starts to sway.

- Adjust your speed to take road and traffic conditions into account.
- Long descents with a slight gradient can become dangerous. Adjust your speed from the very beginning to allow you to speed up if necessary without endangering other road users.
- As a general rule, never drive faster downhill than uphill.
- The motor home may be caught in air suction when overtaking or being overtaken by lorries or buses. This effect is counteracted by lightly counter-steering.
- Use foresight while driving; take regular breaks on longer journeys.

## Driving around corners

Due to its height, a motor home becomes unstable more quickly than a car.

### The following applies for driving around corners

- Never drive sharply or too quickly into a bend!
- When turning off the road, always pull out a little more to ensure a larger curve radius. Please note that, depending on the model, the rear end of the motor home may swing out.
- Please note that, depending on the model, the rear end of the motor home can swing out.

## Driving economically

The engine of your motor home has not been designed to drive constantly under a full load.

### The following applies when driving

- Do not keep your foot down on the accelerator!
- The final 20 km/h before reaching top speed require up to 50 % more fuel!

## Braking

A motor home has a different brake response than that of a car. For this reason, inexperienced drivers in particular should carry out several test braking manoeuvres in a suitable location before driving on the road. The braking distance of the motor home is longer than that of a car. Furthermore, it is strongly influenced by how heavily the vehicle has been loaded.

### The following applies for braking

- Note the longer braking distance, especially on wet roads.
- When driving downhill, select a gear that is not higher than when driving uphill.



Should there be any defects or malfunctions in the driving performance of the motorhome, please notify roadside assistance and have any maintenance and repair work carried out by an authorised specialist.

## Reversing/Manoeuvring

Your motor home is far larger than a car.

### The following applies to reversing/manoeuvring

- Even if the wing mirrors are correctly adjusted there is a significant blind spot.
- When reversing or parking in places with poor visibility get help to guide you in.

## Refuelling

A number of devices that use an open flame have been built into your motor home.

### The following applies when refuelling

- Switch off all gas devices (heating (**model-specific**), cooker, etc.)!
- Turn off all mobile phones!
- Fill only diesel fuel or AdBlue in the appropriate tank opening, as set out in the manufacturer's operating manual.
- Never mistakenly fill the fresh water tank with fuel.



## 2.7 After driving

### Selecting a parking space

The following applies for selecting a parking space

- Select a parking space that is as level as possible.
- If possible, pick your spot in daylight.
- Use the front step as a control point to check that your motor home is standing in a horizontal position (important to ensure that the refrigerator functions correctly).
- Compensate for inclinations by placing suitable boards or wheel levellers under the wheels.

### Pitching or siting the vehicle

The following applies when pitching or siting the vehicle

- Put the vehicle in gear (automatic transmission = selector lever P).
- Pull on the handbrake.
- If necessary, lower the rear corner steadies<sup>\*</sup>.
- Only extend the tail supports<sup>\*</sup> to the point where the axle still assists in bearing the weight.
- If the ground is soft, place supports underneath the tail supports<sup>\*</sup>.
- If necessary, use blocks (not included in the standard equipment.)



Do not use the tail supports<sup>\*</sup> to compensate for any differences in height.

When turning the driver's seat, ensure that you do not accidentally disengage the handbrake.



Should the temperature be around 0° C or less, only pull lightly on the hand brake and always shift into a gear (automatic transmission = set selector lever to P) so that the hand brake does not freeze!

### Switching to mains hook up

The following applies when to mains hook up

- Open the main stop valve on the gas bottle and the gas stop valve on the appliance required.
- If necessary, switch the refrigerator from 12V to gas or 230V, because the 12V supply will automatically be switched off after a brief period of time (**exception:** when running in automatic mode, the device turns itself off).

### Water installation

Water left standing in the fresh water tank or the pipes quickly becomes undrinkable.



Please empty any residual water from the water tank before filling it with fresh water.

Therefore, check the water pipes and the fresh water tank before each journey to ensure they are clean. Disinfect and rinse the drinking water system regularly, and always before each journey.

## Chapter 3: Chassis

### 3.1 General Information

The chassis includes parts of the frame and the axles. No technical changes may be made, as otherwise the general type approval will no longer apply or be valid!!



Technical changes may only be carried out after being released by the manufacturer.

For further information, please refer to the operating instructions for the base vehicle.



VIN of the base vehicle Fiat




VIN of the base vehicle Citroën

### 3.2 Vehicle identification number (VIN)

The 17-digit vehicle ID number has been applied to the inner wheel arch on the passenger's side.

To identify it more easily, the VIN can also be found on a label on the nearside of the windsreen at the bottom, which is legible from outside the vehicle. In addition, the VIN is also given on the type plate of the base vehicle as well as on the Hobby type plate (on the right-hand B-pillar, located in the middle above the lock on the door).

Always have your VIN at hand whenever you have a question or visit your dealer/contractual partner.

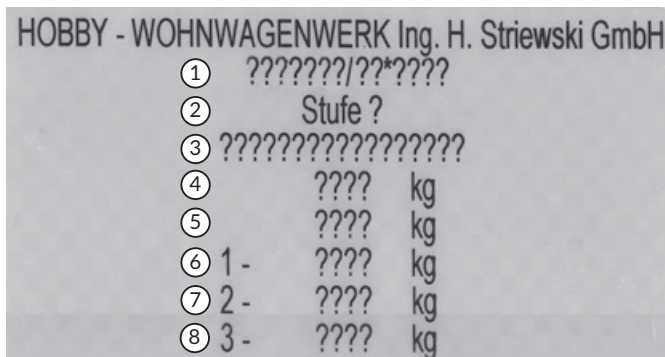

Hobby name plate

### Name plate

- ① Approval number
- ② Manufacturer's version
- ③ Vehicle identification number (FiN)
- ④ Permissible maximum weight
- ⑤ Technically permissible maximum laden mass of combination
- ⑥ Permissible axle load, 1st axle
- ⑦ Permissible axle load, 2nd axle
- ⑧ Permissible axle load, 3rd axle



Do not remove or change the name plate.

There is an additional adhesive label next to the Hobby name plate. You'll find the address of the Hobby factory on it. **Do not remove this adhesive label!** Without this label, the operating licence for the vehicle will immediately expire.



Two name plates are always mounted on the vehicle: one for the first stage of approval (on the basic vehicle) and one for the second stage (Hobby). The data on the name plate for the second stage of approval is relevant for the registration of the motor home.

## 3.3 Loading

### 3.3.1 General information

#### Rules for loading:

- Spread the load evenly between the left and right-hand side of the motor home. Heavy or bulky objects should be placed in the lower storage compartments and near the axle.
- Never overload the rear of the motor home because this will have a negative influence on its driving performance.
- The lower the motor home's centre of gravity, the better its driving performance and response will be in when cornering.
- Store baggage in the interior in cupboards and storage compartments.
- Heavy objects should be stowed securely to prevent them from moving.
- Lighter objects (clothing) should be stowed in the wall cupboards.
- Secure doors and lockers.
- Check the technically permissible maximum weight and the axle load(s) after you have finished loading.
- Secure the bed frames and mattresses if they have been put in the travelling position (e.g. lower children's bunk bed)

### Rear garage (model-specific)

When loading the rear garage adhere to the permissible axle loads and the technically permissible total mass. Distribute pay-load evenly. Items with sharp edges will damage the floor covering.

All of the equipment carried in the external storage locker must be securely fastened using lashing eyes and suitable retaining straps.



- The maximum permissible load for the rear external storage locker or garage is 150 kg.
- On no account should the permissible rear axle load be exceeded.
- Due to the weight transfer from the front axle, it is considerably more difficult to handle the vehicle when the rear garage is fully loaded.
- Always check that the lashing rings are firmly locked before you start your journey.
- The owner/driver of the vehicle is always responsible for ensuring that loads transported in the rear garage have been correctly secured. As far as possible, always use tension belt systems licensed for this purpose.
- Never use bungee straps. Remember that exceptionally strong driving dynamics can occur in dangerous situations or when you are forced to slam on the brakes.



The maximum axle loads as well as the technically permissible overall mass entered in the vehicle's documents must not be exceeded

Overloading can cause the tyres to break down or even burst! This increases the danger that you may lose control of the vehicle. Therefore, you endanger yourself and other road users.



If you are not sure whether or not you have overloaded the vehicle, you should have it weighed at a public weighing facility.

### 3.3.2 Information on vehicle weights and weight-related data

The legal requirements for vehicle weights are set out in Commission Implementing Regulation (EU) 2021/535 of 31 March 2021, which is valid throughout the European Union.

#### 1. Maximum technically permissible laden weight of the vehicle

The "technically permissible maximum weight" is the maximum weight specified by the manufacturer which the loaded vehicle may have when driving. Note that exceeding the technically permissible maximum weight when driving can be a safety risk which, in many European countries, entails a fine. We recommend, therefore, that the vehicle should be weighted before every journey to ensure that the technically permissible maximum weight is not exceeded.

## 2. Mass when ready to drive

Basically, the “mass when ready to drive” is the weight of the standard empty vehicle as specified by the manufacturer. According to the German legal definition for mobile homes and vans, this includes the petrol tank when filled to at least 90 %, the mass of the driver (calculated at a flat rate of 75 kg) and the liquids as well as the mass of the superstructure, the driver’s cab, the tow-bar (provided this is standard equipment) and the tyre repair kit.

Note that the information given in the technical data regarding the mass when ready to drive refers to calculated values from the type-approval procedure. These are subject to legally permissible tolerances of up to  $\pm 5 \%$ , which can have a direct impact on the remaining loading capacity of the individual vehicle.

Example:

Mass when ready to drive acc. to technical data: 2,939 kg

Legally permissible tolerance of  $\pm 5 \%$ :  $\pm 147$  kg

Legally permissible range of mass when ready to drive: 2,792 to 3,086 kg

Since the occurrence of legally permissible tolerances has a direct impact on the remaining loading capacity of the individual vehicle, these tolerances must already be taken into consideration when configuring the vehicle.

Example:

If legally permissible tolerances in the amount of  $+ 1 \%$  occur in the mass of the vehicle from the example above when it is ready to be driven, the mass when ready to drive increases from 2,939 kg to 2,968.4 kg. This means that the loading capacity of the vehicle is reduced by 29.4 kg.

## 3. Actual mass of the vehicle and standard equipment/ optional extras

The “actual mass of the vehicle” includes the mass when ready to drive plus the optional extras built in at the factory.

“Standard equipment” refers to the basic configuration of a vehicle equipped with all of the features which are required by law. This also includes all of the equipment fitted as standard.

“Optional extras” refers to all of the equipment not included in the standard equipment, which is built into the vehicle at the factory under the manufacturer’s responsibility and which can be ordered by the customer. On the other hand, other accessories which are fitted by the manufacturer, their partners or the customer themselves after the vehicle has been delivered are not included in the optional extras.

Note that the installation of optional extras always reduces the loading capacity (cf. no. 5.).

#### 4. Mass of the passengers

The mass of the passengers is calculated using the permitted number of people when driving the vehicle. A flat rate of 75 kg is calculated for each person in the vehicle, irrespective of how much each passenger actually weighs. However, since the weight of the driver was already included in the mass when ready to drive, it is not added to the mass of the passengers. Thus, in a vehicle with a permitted number of 4 people when driving the vehicle, the mass of the passengers is 225 kg (3 x 75 kg).

#### 5. Loading capacity and minimum loading capacity

The “loading capacity” refers to the difference between the technically permissible maximum weight when the vehicle is loaded and the mass when ready to drive, plus the mass of the passengers and the mass of the optional extras.

For all of the vehicles built by HOBBY, Commission Implementing Regulation (EU) 2021/535 stipulates a fixed “minimum loading capacity” for baggage and other objects which are not part of the optional extras fitted at the factory. This is meant to ensure that personal baggage and food (e.g. clothing, toiletries, kitchen equipment, food, camping equipment or toys) may be taken along without exceeding the maximum technically permissible laden weight of the vehicle.

For the motor homes and vans built by HOBBY, this minimum loading capacity is calculated using the following formula:

Minimum loading capacity in kg  $\geq 10 \cdot (n + L)$

$n$  = highest number of passengers plus the driver and

$L$  = total length of the vehicle in meters

Example: The minimum loading capacity for a mobile home with 4 permitted seats and a length of 7 m is 110 kg ( $10 \cdot [4 + 7]$ ).

#### 6. Maximum mass for optional extras

To ensure that the technically permissible maximum weight of the vehicle, taking the mass when ready to drive, the mass of the passengers and the legally required minimum loading capacity into account, is not exceeded by the installation of optional extras, HOBBY has limited the installation of optional extras and, as manufacturer, specified a “maximum mass for optional extras”.

This is calculated by subtracting the mass when ready to drive as well as the mass of all passengers and the minimum loading capacity from the technically permissible maximum weight.

Since the mass when ready to drive is a calculated value which is subject to the legally permissible tolerances of up to  $\pm 5 \%$ , and

the occurrence of these tolerances can mean that the minimum loading capacity is actually undercut, the legally permissible tolerances are also included as a precautionary measure when calculating the maximum mass for optional extras. Furthermore, special features for country-specific/special models which are not part of the standard equipment are also taken into consideration.



Tow bar

### 3.4 Tow bar \*

The maximum towing weight, trailer load and tow bar load are set out in **Chapter 14 "Technical Data"**.



Please ensure that the permissible tow bar load, maximum towing weight and rear axle load for the vehicle are not exceeded, especially when you are loading the rear garage. Simultaneous use of the tow-bar and the cycle carrier\* is not permitted.

While manoeuvring to hitch and unhitch loads, ensure that no-one is standing between the motor home and the trailer.



Due to stipulations by the manufacturer of the basic vehicle and the fixing of the so-called D value of the tow bar no additional loading of the towing loads is possible.

If the technically permissible maximum weight is increased, the trailer load is reduced, respectively. Again, in this case the trailer load cannot be increased.



Selector lever on the automatic transmission

### 3.5 Automatic transmission (\* /model-specific)



Never leave the vehicle when the gear is in the neutral position N. The vehicle can roll downhill, irrespective of whether or not the engine is running.



Do not use the accelerator pedal as a means of holding the vehicle in one spot (e.g. on a slope). Instead, use the brake pedal and step on the gas only when you start to drive.

For further information, please refer to the operating instructions for the base vehicle. Please familiarise yourself sufficiently with the operation of the automatic transmission before you use your vehicle the first time.

As an option, your motor home may be fitted with a fully automatic 8-speed automatic transmission which can be operated both **automatically** and **manually**.

Since the clutch is engaged and released by means of an electro-hydraulic unit that is controlled by the transmission's control unit, the clutch pedal is superfluous and, therefore, it has been removed. Both the selected method of operation as well as the gear you are driving in are shown on the multifunction display panel.

The gearshift lever on the dashboard has the following positions:

- D: for selecting the forward gear,
- N for selecting the neutral position (engine is idle),
- R for selecting the reverse gear,
- P: for parking the vehicle.

#### Automatic

When driving, the control module selects the appropriate gears for the different driving conditions, depending on the speed, load and gradient.

#### Manual mode

Should it be necessary to change gears frequently, and under especially difficult conditions (e.g. steep gradients), the manual mode enables you to use a lower gear, providing better performance both up and down hills. No overheating.



- This driving mode is activated by pushing the lever to the left and then forwards and backwards, allowing you to change gears.

### Kick Down

If the accelerator pedal is suddenly fully depressed, e.g. when overtaking, the transmission shifts to a lower gear to achieve better acceleration.

### Drive Mode

Three different operational modes can be set:

- Normal
- Power (if carrying a full load or driving down a steep descent)
- Eco (driving on the motorway at cruising speed)



- The on-board electronic system ensures that the drive mode set will achieve the best performance.
- The activated mode is shown on the dashboard.
- After the vehicle has been started, the system is always set to the normal function.

If the vehicle is not moving and you have already selected a gear, always press the brake pedal until you have decided to start driving. Only then should you release the brake pedal and slowly step on the gas pedal.



If the vehicle is not moving and the engine is running for a longer period of time, we recommend that you select to neutral (N).

If you want to select first gear when in reverse gear (R) or vice versa, the gearshift lever may only be moved when the vehicle is standing completely still and you are pressing down the brake pedal.

## Chapter 4: Wheels and Tyres

### 4.1 Wheels

#### The following applies for wheel studs

If you are driving a new vehicle, or after changing a tyre, tighten the wheel studs or nuts after you have driven the first 50 km and then again after the following 100 km. For your safety, do not use any tyres or wheel studs other than what was originally stipulated. Wheel bolts and nuts should then be checked regularly to ensure that they fit tightly.

#### Tightening torque for wheel nuts and studs:

| Rim size | Wheel bolts    | Tightening torque |
|----------|----------------|-------------------|
| 16"      | M16 x 1,5 x 32 | 180 Nm            |



Check the tightening torques every 5,000 km or at least once a year.

### 4.2 Tyres

Use only tyres that have been entered in the vehicle's documents. Other tyre sizes may only be used if they have been permitted by the manufacturer of the basic vehicle.

- Check tyres regularly to ensure that the tread is worn down evenly; check tread depth; check for external damages.
- Always use the same make and model of tyres (summer or winter tyres).
- Drive carefully on new tyres for a distance of approx. 100 km to enable them to develop a full road grip.

#### Driving to protect your tyres

- Avoid braking sharply and racing starts.
- Avoid long journeys on poor roads.
- Never drive an overloaded vehicle.



Tubeless tyres have been mounted on your Hobby motor home. Under no circumstances may tubes be inserted in these tyres!



#### Winter tyres are mandatory in many EU countries!

In bad weather conditions (snow, ice and slush), all vehicles must have tyres with the "Alpine" icon: a mountain pictogram



with a snowflake. Failure to comply with this obligation can lead to penalties by the legislator.

If applicable, please observe national regulations in foreign countries.

## 4.3 Tyre pressure

### The following applies when checking tyre pressure

- Check and correct the tyre pressures every four weeks (but at least every three months) and before every drive.
- You should only check tyre pressures when the tyres are cold.
- If checking or correcting the pressure of a warm tyre, the pressure must be 0.3 bar higher than for a cold tyre.
- If driving on low tyre pressure is unavoidable (i.e., from the campsite to the nearest service station), you should drive at a maximum speed of 20 km/h.

## Snow chains




Never drive faster than 50 km/h.

Do not use snow chains on snow-free roads.

Snow chains can only be fitted to wheels and tyres that are the same sizes as originally fitted to the vehicle.

Snow chains may only be fitted on the front drive wheels; it is strictly forbidden to mount snow chains on the rear wheels.

Any wheel trims\* must be removed before putting on snow chains.

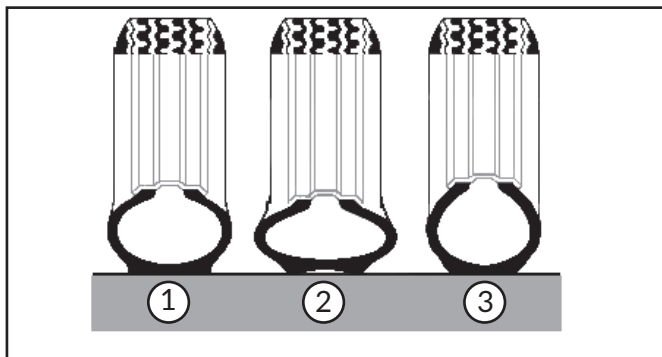

Different tyre pressures

#### The following applies for inflation pressure

- correct inflation pressure ①
- inflation pressure too low ②
- inflation pressure too high ③



If the pressure is too low, this may cause overheating of the tyre, possibly resulting in severe damage to the tyre. If the tyre pressure is too high, this will lead to increased wear and tear of the tread and may cause damage to the wheel suspension.



For the correct inflation pressure, please refer to the table „Tyre pressure values“ in the chapter 14 on “Technical Data” or the operating instructions for the basic vehicle.

## 4.4 Tyre tread depth and age of tyres

The law states that tyres must be replaced when the tread depth gets to 1.6 mm.



**The minimum tread depth gives you only the barest amount of safety while driving.!** The following recommendations must be observed:

Safety limit in summer: 3.0 mm

Safety limit in winter: 4.0 mm

Tyres should never be exchanged from one side to the other, i.e. from the right-hand side of the vehicle to the left-hand side and vice versa.



Tyres age even if they are seldomly used or not at all.

#### Tyre manufacturers' recommendations

- Irrespective of their tread depth, tyres should be changed every 6 years.
- Avoid hard impacts against curbs, potholes or other obstacles.



DOT number

### Age of tyres

Tyres should be no more than 6 years old. The material becomes brittle with age or when the vehicle has not been driven for a longer period of time. The four-digit DOT number on the side of the tyre (it may be necessary to check the inner side) indicates the date it was manufactured. The first two digits refer to the manufacturing week, the last two digits to the manufacturing year.

#### Example:

DOT 2925 means week 29 in the year of manufacture (here: 2025).

## 4.5 Wheel rims

Only use the rims noted in the registration documents.



Adaptations are only permitted if these have been released by the manufacturer.

## 4.6 Changing a tyre

### Preparing to change the tyre

- Park the vehicle on a surface that is as level and firm as possible.
- Should there be a blowout on a public road, switch on the warning lights and set up the warning triangle.
- Pull the hand brake, select first gear and align the wheels so that they are straight. Vehicles with automatic transmission\*: set the gearshift lever to "P".
- If necessary, place chocks in front of and behind the wheel that is still in good order so as to secure the vehicle.

### Changing a tyre

- Place a firm base, such as a piece of wood, underneath the car jack (not included in the scope of delivery) if the vehicle is on soft ground.
- Insert the car jack into the appropriate mounting holes.
- Turn the wheel spanner one full circle to loosen the wheel bolts, but do not turn it any further.
- Jack up the vehicle until the wheel is 2 -3 cm above the ground.
- Reset the car jack if it slips while the vehicle is being jacked up.
- Remove the wheel studs/nuts and lift off the tyre.
- Place the spare tyre (not included in the scope of delivery) on the wheel hub and align it.

- Screw the nuts on and tighten them in a diagonal sequence.
- Lower the car jack and remove it.
- Tighten the wheel nuts evenly with the wheel brace. Please refer to the operating instructions for the base vehicle for the specified torque setting for the wheel nuts (**or Chapter 4.1**).



After changing the tyre, the wheel nuts must be examined (after a 50 km drive) to ensure that they are tight enough (tighten if necessary).

The car jack (not included in the scope of delivery) must only be inserted in the appropriate mounting holes! If the car jack is attached in other places, this may cause damage to the vehicle or even accidents if the vehicle falls off the jack!

The car jack is to be used only for changing tyres. It may never be used when working underneath the vehicle!

#### **Danger of death!**

The tail supports\* may not be used as a car jack!



When changing a tyre, please also observe the vehicle manufacturer's operating instructions.

You should have a functional spare tyre available at all times. Therefore, have the spare tyre replaced without delay.



Fast tyre repair kit

## 4.7 Fast tyre repair kit

The standard version of your motor home does not have a spare tyre. Instead, a fast tyre repair kit is included. Upon delivery, it is located in the passenger door.

Do not use the fast tyre repair kit if the tyre was damaged by being driven when insufficiently inflated. If the tyre rim is damaged (i.e. if the rim flange is deformed so that air escapes) it is not possible to repair the tyre. Small punctures, especially in the tyre tread (with a max. diameter of 4 mm) can be sealed using the fast tyre repair kit. Do not remove foreign matter (e.g. a screw or nail) from the tyre.



There is an expiry date on the sealant. Therefore, please note this date. It is not possible to guarantee that the tyre repair kit will function properly if the sealant has been used after the expiry date.



Do not leave the compressor continuously switched on for more than 20 minutes. There may be a risk of overheating.

Using the fast tyre repair kit will only help to make the tyre temporarily usable. The tyre should, however, be checked and repaired as quickly as possible by an experienced technician.

Please refer to the enclosed guidelines for instructions on how to use the fast tyre repair kit.

## Chapter 5: Exterior Structure

### 5.1 Ventilation

#### The following applies for ventilation

Ventilation is important if you want to feel comfortable in your motor home. Draft-free ventilation is integrated in your motor home via the traction unit; de-aerating via the roof bonnets. Do not interfere with their mode of operation!




Never cover the safety ventilation, not even partially. Keep the vents and coverings clean and dust-free. When using an awning, ensure that there is good ventilation if the fridge vents and other fixed ventilation points are located inside the awning.



We recommend that you open the roof lights whenever you are using the motor home.

Condensation is produced while cooking, from wet clothes, etc. Every person produces up to 35 g of water vapour per hour. Therefore, depending on the relative humidity, the windows and skylights must be opened for further ventilation (see also 12.8 "Operating in Winter").

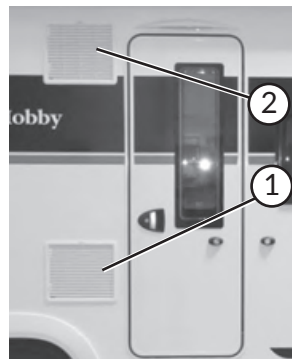

Ventilation grille,  
absorber refrigerator

#### Absorber refrigerator (model-specific)

Ventilation grilles ensure the supply of fresh air for the absorber refrigerator so that there is sufficient cooling capacity. The lower fridge vents ① is located at the bottom of the outer wall of the vehicle. The top vent ② is located above the condensor on the rear of the fridge.

Ventilation and de-aerating of the motor home is a prerequisite for sufficient cooling capacity. When the refrigerator is not being run, the ventilation grilles can be closed using the appropriate covers.






Do not block the refrigerator's ventilation grill so as not to restrict cooling performance and the functions of the refrigerator.

Use the special cover panels for the air vents on the side of the vehicle when operating the motor home in winter. These winter panels are a chargeable option; they can be obtained from your dealer.

Please also note the information on the covers. For further information, please check the operating instructions supplied by the refrigerator manufacturer.

If the temperature outside is very high, we recommend that you park the mobile home in the shade to ensure that the refrigerator continues to work properly.

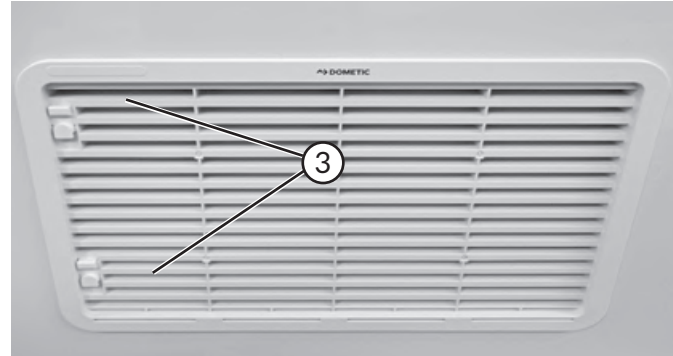

**Locks for ventilation grill**

### **Removing the ventilation grills during maintenance and repair**

- Push the locks ③ as far up as they will go.
- Carefully pull the left side of the vent cover away from the body of the motor home.
- Then pull the vent to the left to release the right side of the vent from its retaining lugs.



The ventilation grills must be firmly mounted while driving or when it is raining.

The compressor on the back of the refrigerator gets very hot when the device is running. Protect yourself from touching parts that conduct heat when the ventilation grills have been removed.



Heating flue

## Heating

Air for the heating system is supplied from outside using combustion air ①. At the same time, the exhaust air from the heating system ② is ducted outside.



Blocked ventilation openings can cause malfunctions and may channel exhaust fumes inside the motor home. **Danger of suffocation!**

When operating in winter ensure that the flue outlet is not blocked.

Danger due to hot surfaces and exhaust fumes. Never touch the area around the wall flue when the device is operating and do not lean any objects against the wall flue or the vehicle.

## 5.2 Opening and closing doors and lockers

### Keys to the vehicle

The following keys are delivered with the motor home:

- two keys to fit the following locks on the base vehicle:
  - driver's and passenger's doors and filler cap.



Note the manufacturer's operating instructions for the basic vehicle.

- two keys that fit the following locks on the structure:
  - entrance door,
  - toilet cassette locker door,
  - Gas box door,
  - Garage door (model-specific),
  - fresh water filler cap.



Habitation door from the outside

## Habitation door

### Opening

- Use key to unlock door.
- Pull on door handle.
- Open door.

### Closing

- Close door.
- Turn key until you hear the bolt lock into place.
- Turn key back to vertical position and pull it out.



The entrance door is your escape route in an emergency. Never barricade the door from the inside or the outside! The habitation door must always be kept closed and locked while driving.



To prevent any damage, never use the guide rails for the fly screen as a handle for helping gain access to the vehicle.



Habitation door from the inside

## Habitation door internal

### Opening


- Pull on the handle ① until the door opens.

### Closing

- Pull the long handle ② to close the door until it locks in place.

### Locking


- Press the handle ① into the recess (Fig. Habitation door from the inside).

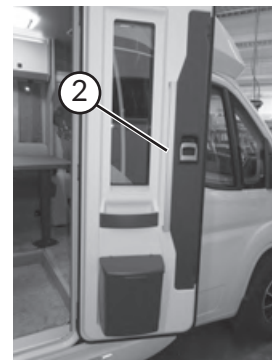

Habitation door



This allows a door which has been locked from the outside to be opened from the inside.

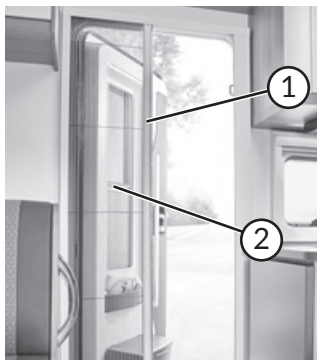

Habitation door

### Pleated blind\* and fly screen



Pull the blind and the fly screen on the habitation door to the desired position. To open, carefully guide the rail back to the original position in order to fold the blinds correctly.



The fly screen may only be pulled down when the door is open so as not to prevent an escape route in an emergency and avoid any damage to either the entrance door as well as the fly screen. Only shut the door after the insect screen has been pushed back into its original position.

- ① Guiding rail for fly screen
- ② Guiding rail for pleated blind



Emptying the waste bin

### Waste bin



The waste bin can hold a maximum load of 3 kg.



Broom and dustpan

A hand broom and dustpan have been integrated in the lid of the disposal bin. They can be removed as required.

### Emptying the waste bin

- To empty the waste bin, first open the lid.
- Carefully release the grey mounting frame from its position.
- The bin can then be opened by folding it down and the contents can be removed.



Garage (storage locker) door



Garage locked



Garage unlocked

### Garage flap/ Stowage flap (model-specific)




The maximum load for the external garage is 150 kg.

#### To open

- Unlock both locks with the key.
- Turn the handles 180° to the left so that the red background ① above the lock is visible.
- Open the door to the side.

#### To close

- Close the door.
- Turn the handle 180° to the right.
- Lock both locks with the key.

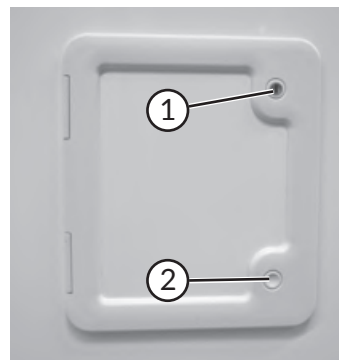

Toilet cassette door

### Toilet door

#### Un-Locking

- Use the key to unlock the door. ①.
- Press both buttons (① and ②) and open the door to the side.

#### Locking

- Close the toilet door and push until it clicks into place.
- Use key to lock ①.



Gas bottle box door

### Gas-bottle box door



The ventilation grill(s) in the gas-bottle container must not be closed or covered.

#### To open

- Open the lock with the key.
- Turn the handle 180° to the left so that the red background ① above the lock is visible.
- Swing the flap to the side until the flap retainers interlock.

#### To close

- Lower the door until it is closed.
- Turn the handle 180° to the right and use the key to lock the locker door.



Two piece door retainer



Magnetic door retainer



Door retainer

### Retaining devices for locker and habitation doors

Some external flaps can be fastened with the help of retainers, which are located on the inside of the flap or on the outer wall of the motor home. The habitation door of the motorhome is held in place by means of a special magnetic door retainer.

#### Holding the external doors in place

- Open the door 180°.
- Push the two parts of the door retainer together. Take care to ensure that it clicks firmly into place.
- Press the flap into the final position of the door retainer (model-specific).

**To unlock**

- Pull the door until the two parts of the door retainer come apart.
- Carefully pull the flap out of the final position of the door retainer.

**Holding the habitation door in place**

- Open the door through 180°.
- Press the magnetic door holder that is fastened to the door onto its counterpart (fastened on the outside wall of the motor home) until the magnets stick together.

**Releasing the magnetic door holder**

- Pull the magnets apart by slowly starting to close the door, using only a small amount of pressure.



Doors and flaps must always be closed before driving.



Some doors and flaps have a pneumatic strut that prevents the door or flap from falling shut accidentally.



Cover flap

**Cover flap**

The access to water, gas or electrical components is covered by these flaps; for example:



the fresh water filter point



external socket and antenna terminal\* in the awning



external gas socket\*



Mains hook up

### Opening

- Grasp the cover flap at the bottom of the latch and pull it up.

### Closing


- Grasp the latch of the cover flap and close it until it clicks into place.

Please refer to the appropriate chapters on water (**chapter 8**), gas (**chapter 9**) and electricity (**chapter 7**) for information on handling the individual components.



When driving, the cover flaps must always be firmly shut.

**Never fill any type of liquid (e.g. diesel, oil or cleaning solutions) other than water into the fresh water tank.**

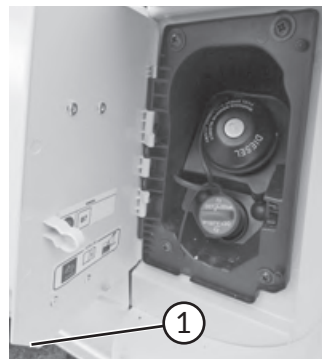

Fuel cap

### Fuel filler neck

The black fuel cap is covered by a flap located on the left side of the vehicle behind the door in the lower section of the B-pillar. The AdBlue tank can be found directly beneath this.

### Opening

- Open the flap by placing a finger in the notch ① and pulling out/forwards.

### Closing

- Push the flap until it locks.



Please refer to the operating instructions from Fiat or Citroën for information on how to operate the petrol cap and the AdBlue tank.





Extended entrance step

Double entrance step  
(MAXIA T)

### 5.3 Entrance step

The motor homes are equipped with an electrically extendable entrance step ①. The models in the MAXIA T series have been fitted with a double entrance step.



Do not step on the entrance step until it has been completely extended!




Mind the different heights of the steps and ensure that the ground in front of the entrance is firm and level.

Following a short delay after the motor is started, the step is automatically retracted.



Retracted entrance step

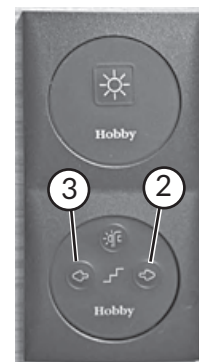

Switch for step tread

#### To open

- Press the switch ② in the entrance area.  
The entrance step will be extended automatically.

#### To close

- Press the switch ③ in the entrance area.  
The entrance step will be retracted automatically.




Make sure that when you press the switch you are not standing in the way of the entrance step as it is extended. **You could be seriously injured! ! Alternately make sure that nobody is standing on the step as it is retracted.**



The action of the buttons may vary, depending on the model.

Continue pressing the switch until the step has completely folded in or out.

If, due to dirt or frost, the entrance step does not function properly or at all, the hinges must be cleaned or defrosted. Please observe the enclosed manufacturer's operating instructions.

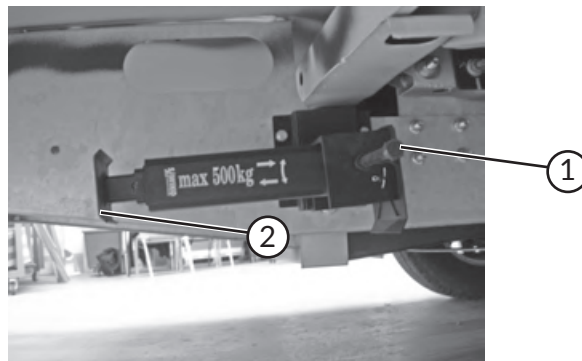

Tail supports folded in

### 5.4 Tail supports\*

The tail supports are located in the rear area by the frame extension.

#### Folding out tail supports

- Place the winding handle on the hexagon head ① .
- Turn the winding handle to move the support to a vertical position.
- If necessary, secure the foot ② to prevent it from sinking into the ground and place it on a firm base.
- If the tail support is in a vertical position, the leg is extended like a telescope.
- Use the crank to level the tail supports until the vehicle stands level.



Tail supports folded out

### Folding in tail supports

- Use the crank to release the tail supports.
- Turn the crank steadily until the tail support has reached its original horizontal position.



- Do not use the tail supports as a car jack. Their sole purpose is to stabilise the motor home when it is parked.
- Always load the tail supports evenly (max. 500 kg per support).
- Always retract the tail supports and secure them before driving.
- All of the tail supports' movable parts should be cleaned regularly or as required.



The telescopically adjustable foot must only be extended as far as the yellow marking!



Curved edges of roof



## 5.5 Roof

### The following applies for the roof load

The roof has not been made for concentrated loads. Place a cover or board to spread your weight and protect the roof surface before standing on the roof. Materials with a soft and smooth surface (such as a large piece of styrofoam) are suitable for this purpose.

- Use only standardised and licensed ladders that can be positioned firmly to climb onto the roof.
- Do not stand too close to the sky lights on the roof (stay at least 30 cm away).
- Do not stand on the rounded areas at the front and rear ends of the motor home.



The maximum total load for the roof rail is 80 kg!



Be careful when standing on the roof. There is a great danger that you will slip if the roof is wet or icy.




Awning

### 5.6 Sun awning



- An awning offers protection from the sun, not against the elements.
- Do not place people or obstacles in the extension/retraction area of the awning.
- The awning winding mechanism is fitted with a mechanical block control to limit the extent to which it can be extended. Never attempt to exceed the block control by force.
- Always support the awning with the built in adjustable legs when extended.
- The awning must always be completely retracted and secured before driving.

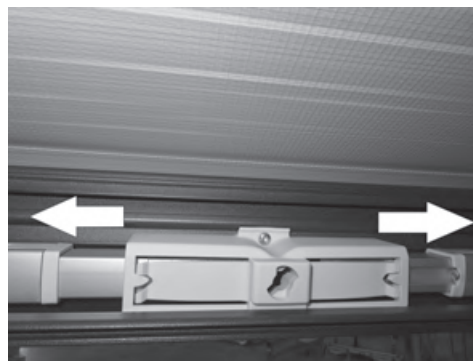

Telescopic supports

#### Extending

- Insert the hook on the winding handle into the grommet ① on the winding mechanism.
- Hold the handle with one hand on the upper twist grip and the other on the lower twist grip. During the operating procedure gently pull the handle towards you and hold it as vertically in the grommet as possible.
- Turn the handle clockwise until the awning has been rolled out about 1 m.
- Unfold the adjustable legs on the inside of the drop tube and use them to support the awning. To fold out, pull the supports to the right and left, respectively, out of the fastening (see illustration “Telescopic supports”).
- Insert the fastening hook ③ .

- Only then should you roll out the awning to the desired position.
- Remove the handle.
- Fold out and secure the legs which are also located on the inner side of front awning profile.

### Retracting

- Release the support legs and fold them in.
- Insert the hook on the handle into the grommet on the winding mechanism.
- Turn the connecting rod anti-clockwise until the awning has been rolled in except for the last meter.
- Remove the fastening hook ③.
- Lift up the adjustable legs, fold them up and secure them.
- Only then should you roll in the awning completely and secure it.
- Remove the handle and store it in the vehicle.



If the canvas is slack when extended, retract the awning until the canvas is tightly stretched again.

Please read the manufacturer's separate operating instructions before use.

## 5.7 Aftermarket Modifications

### Registering accessories in the vehicle's documents

- Have your Hobby dealer fit your aftermarket modifications.
- Take your motor home to a technical support organisation or technical service provider (e.g. MOT).
- The technical support organisation will approve the fittings and draw up a certificate.  
(road traffic authorities)
- Take the certificate and the Motor Vehicle Registration Certificate Part I to the national vehicle registration authority (Driver & Vehicle Licensing Agency). They will enter the change in the registration document.



When subsequently installing additional equipment, please refer to the equipment manufacturer's operating instructions.

If applicable, please observe national regulations in foreign countries.

Please remember that the tow bar, motorcycle carrier, pneumatic suspension and/or additional leaf springs must be entered in the registration document.

Please note that fitting additional equipment reduces the load your motor home can carry.

Please also observe the information given in **Chapter 11 Accessories**.

## Chapter 6: Interior Structure

### 6.1 Opening and closing doors, lockers and drawers

#### Furniture doors with a locking mechanism



Store only light objects in the upper storage cabinets.



Please observe the maximum load of 15 kg per drawer.



Furniture door for MAXIA T

#### MAXIA T

##### To open

- Press on the handle of the furniture door (middle of the lower edge of the flap) and pull up to open.

##### To close

- Shut the furniture door and let the handle latch into place. It is clearly noticeable when the door has latched.



**Pushlock**

### **Pushlock fitted to kitchen drawers**

Each individual furniture door/flap and drawer is secured by its own pushlock (press-lock knob).

#### **To open**

- Press the pushlock so that the button pops out.
- To open the door or drawer, pull carefully.

#### **To close**

- Shut the door/flap or drawer.
- Press the pushlock until the button stays in the closed position and the door or drawer is securely closed.



**Mirror cabinets**


### **Mirror cabinets washroom**

#### **To open**

- Open the door of the mirror cabinet by pressing the lower edge of the lock ① from behind.

#### **To close**

- Push the door of the mirror cabinet back to its original position until it noticeably locks itself into place.

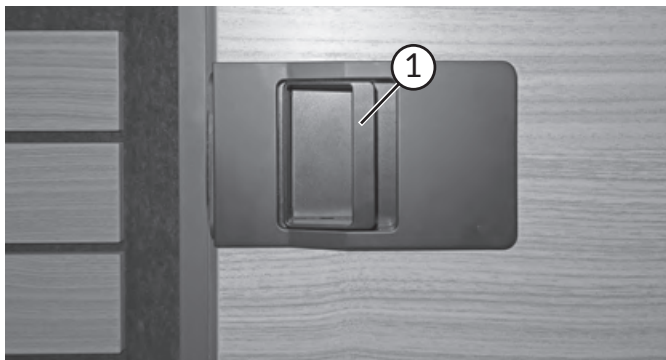

Washroom door handle

### Washroom door

- Mechanism ① for opening and closing the door.



Olive-shaped handle

### Furniture doors with turning handle

#### Wardrobe (model-specific)

- Turn the handle 90° to open or shut the door.





Basic furniture door

## Further furniture doors

### Other furniture doors

#### To open


- Pull on the handle and twist the door open.

#### To close

- Use the handle to press the door shut until you can feel it lock into place.



Only stow lightweight articles in cupboards with simple furniture doors.

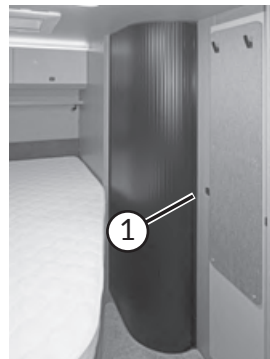

Sliding door in washroom

## Sliding doors

#### To open

- Grasp the frame ① of the door and push it open.

#### To close

- Grasp the frame ① of the door and push it closed until it clicks into place.



Fixed coat hooks




Fold-away

## Coat hooks

Different types of coat hooks have been mounted in the vehicle.



Please ensure that the hooks are not weighed down while driving.

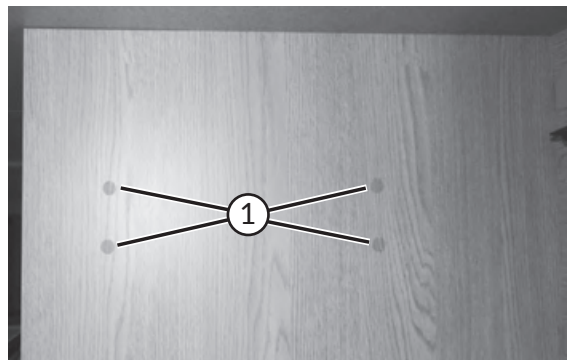


Preparation for TV mounting bracket

## 6.2 Articulated TV bracket\*

The standard equipment in each model includes preparation for a TV mounting bracket in the form of insert nuts. The drilled holes are covered by decorative plaster ①.

230V sockets and the antenna terminal for the TV and the receiver are located directly next to the place of installation for the TV (model-specific location).

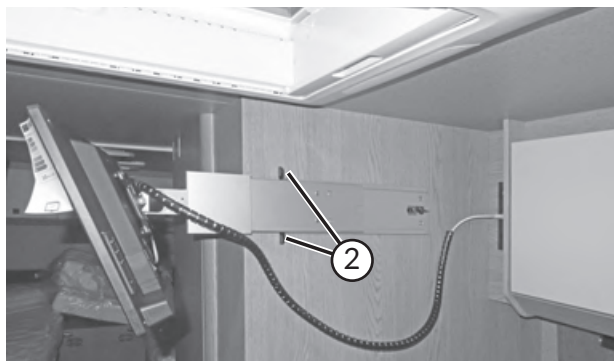

Articulated TV bracket, folded out

### Extendable arm for flat screen TV

- To unlock, press the metal rail ② and, at the same time, extend the TV mounting bracket.
- To retract the extendible shelf, push it back to its original position until it noticeably locks into place.



When driving, the extendable arm must always be locked in its original position.

Please measure the installation dimensions of your motor home before you buy or install a television. The measurements depend on the model and optional extras. The maximum dimensions of the television are 535 x 351 x 50 mm. The designated mounting position for the extendable arm provides space for a diagonal screen of up to 22".

The mounted TV must not weigh more than 8 kg.

When driving, we recommend that you remove the TV from the extendable arm and store it securely.



For information on LED flat screen TVs please refer to **Chapter 10.9**.




Worktop extension folded in

### 6.3 Worktop extension (model-specific)


#### Worktop extension for the kitchen

- Using slight pressure, lift the lowered extension ② to release it from its magnetic anchoring ③.
- Place the extension leaf in a horizontal position. Take care to ensure that the table support ① audibly clicks into place.

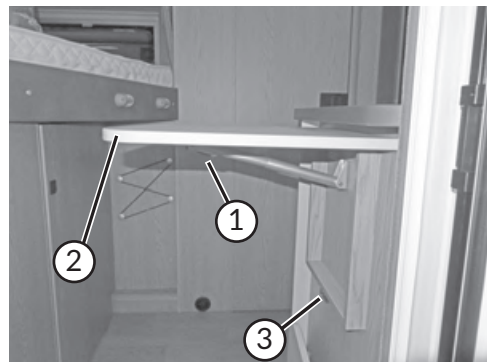

Worktop extension unfolded

To return the worktop extension to its original position, press the locking knob ① on the table support and fold the extension ② down so that the magnetic anchoring ③ clicks into place.

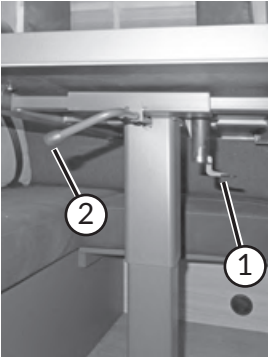

Elevating table



Elevating table, lowered

## 6.4 Tables



We recommend that the table be removed and stored safely in the vehicle when driving.

### Elevating table (model-specific)

The elevating table can be lowered, moved aside and swivelled 360°.

#### Moving and swivelling the table

- Pull the lever ① so that the table top can be moved along the pillar in a freely adjustable manner.
- Push the lever ① back into place to lock the table top into the desired position.
- Use only light force to turn the table top in the desired direction.


#### To lower the table

- Pull the lever ② all the way to the other side to unlock the table.
- Use both hands to push the table top down.
- Pull the lever ② back into its original position to lock the table into the desired position.



To lower the table all the way to the down, the table top must be positioned in such a way that it doesn't get caught on the seat bases.

The swivel lock on the table pillar has a mechanical resistance to prevent it from turning on its own.

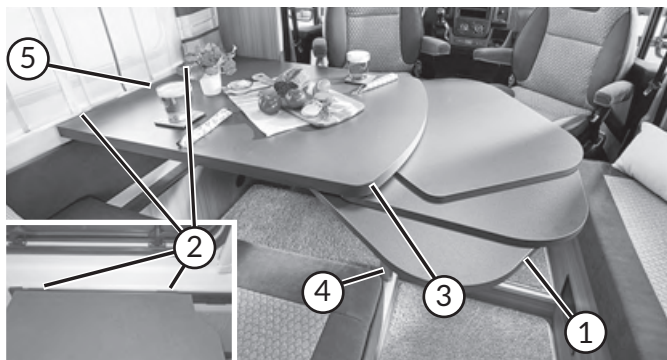


Hanging table with extendable table top

## Hanging table

The lower table top of the hanging table can be turned out. When lowered, the hanging table can be used as a base frame for the bed.

### To lower the table

- Fully close the lower, extendable table top ① until it locks into place by itself.
- Press down the table holder on the left and right ②.
- Raise the front end of the table top ③ by approx. 30°.
- Pull down the lower section of the table leg ④ and remove it.
- Pull the left and right side of the table holder ② out of the upper wall bracket ⑤ (table rail).

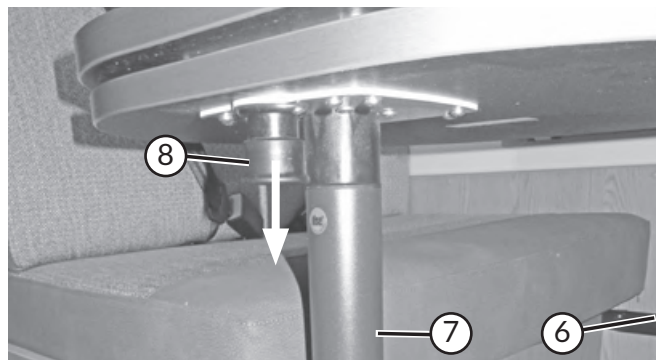

Locking pin underneath the table top


- Hang the left and right side of the table holder ② in the lower wall bracket ⑥ (table rail) (model-specific).
- Place the shortened supporting leg ⑦ at the front edge of the table top on the floor.

### To swing out the table top

- Pull the locking pin ⑧.
- Swivel the lower table top ① to the desired position.



In models with alcove beds, the hanging table cannot be lowered, because there is no need to convert it into a bed as you have the alcove bed.

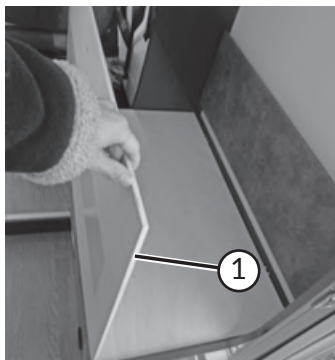

Occasional bed

## 6.5 Seating arrangements and sleeping areas



Please observe the maintenance information in **Chapter 12.6**.


Some seating arrangements can be converted to beds. Before driving, return all converted areas to their original position and store any loose objects securely in the vehicle.

### Creating the extra transverse bed (model-specific)

In order to use the additional bed, the transverse seat must be created.

#### Modification

- Remove the base and back cushions.
- Lower the table (**Hanging table**: the table extension must be pulled out).
- Fold the side seat base board ① over by 180° and place it on the table.

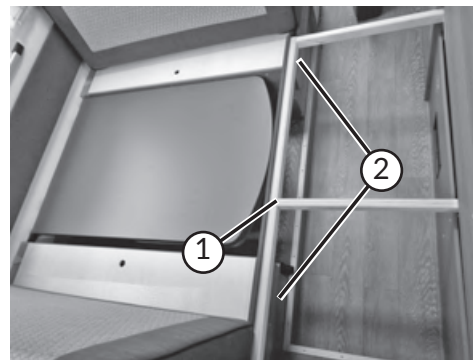

Extendable frame

### Modification seating arrangement A 720 GFM\*

#### Modification

- First, remove the cushions.
- Then hang the table in the lower guiding rail. Proceed with care when doing so.
- There is a frame ① in the transverse seating arrangement that can be pulled out. Pull this frame out until it hooks into the two bench seat supports ②.




Wooden plank, folded out



Positioning the additional cushion

- Then fold out the wooden plank ③ of the transverse seating arrangement so that it rests on the frame ① that was previously pulled out.
- Then arrange the cushions and additional cushions.

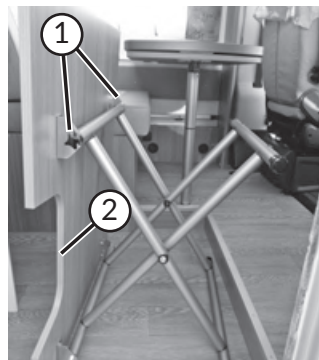

Setting up the foldaway frame




Positioning the additional cushion

### Modification seating arrangement C 680 GE (F) / C 700 GQ / T 710GE\*


#### Modification

- First, remove the cushion.
- Then hang the table in the lower guiding rail (see 6.4 Hanging table).
- The optional extra includes an additional foldaway frame. Set this frame up as you would a folding chair and tighten both turn screws ① so that the frame is stable.
- Place the frame in such a way that the cut out ② rests against the dustbin.
- Then arrange the cushions and additional cushions.



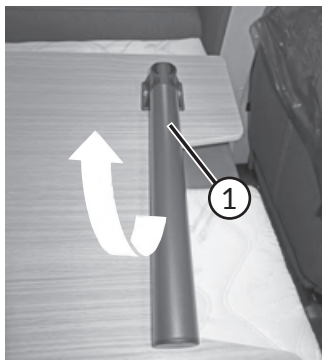


Converting

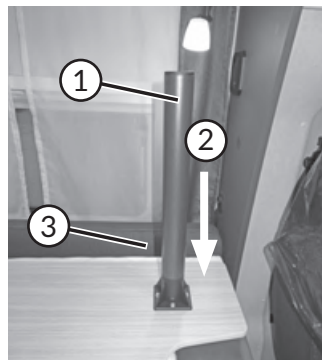

### Converting the seating arrangement ONTOUR/ MAXIA T\* (model-specific)

#### To convert into a bed

- Lock the elevating table in the lowest position or move the hanging table to the lowest position (see 6.4 Tables). Unfold the plank located underneath the cushion of the small bench seat to provide more support. Place it on the table top. Place the larger cushion (included in the delivery package) on the table (see 6.6 Rearranging the cushions).
- The optional extra includes an additional table leaf with a fold-down table leg. This leaf can be found in the external storage locker (page 58). Fold down the table leg (1) and

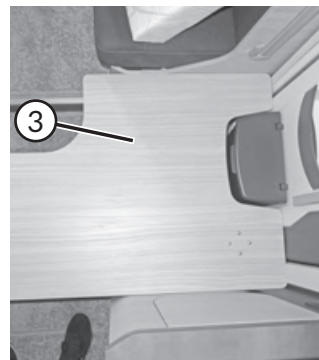

Positioning the table leaf



Positioning the additional cushion

press on it towards the table leaf to lock it into place (2).

- Place the leaf (3) with the unfolded table leg in the entrance area and push the leaf underneath the cushion in the centre seating area. The leaf should also lie on the support bars of the small seating area.
- Place the supplied cushion (4) with the cut-out facing the entrance door.



Position the leaf/ the foldaway frame carefully to prevent the surrounding furniture from being damaged.

**Please note: there is a risk of crushing your fingers!**



Optional extra: converting the seating arrangement in the rear external storage locker to beds

- Before driving or when the vehicle is not in use, the frame and the cushions must be stored in the designated place in the external storage locker (**model-specific**) and secured by means of the strap provided.




Cab bed

### Converting the cab bed\*

This optional extra includes cushions fitted to the space in the cab as well as two wedges to fill the empty spaces and a safety belt that ensures that the cushions are perfectly aligned and stable.

#### To convert into a bed

- Turn the driver's and passenger's seats in the direction of traffic and lock the seats into place.
- Then fold up the arm rests.
- Place the enclosed wedges ① on the driver's and passenger's seats as illustrated.
- Position the cushion as illustrated.

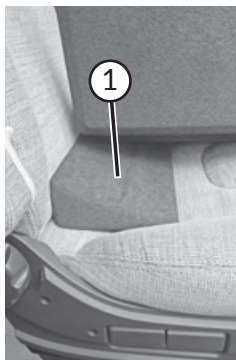


Wedges




Cushion in the correct position




- Guide the safety belt provided (2) through the eyelet (3) underneath the bed and the belt to the handle (4).

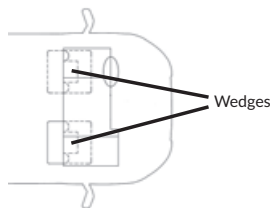

The cab bed can support a maximum load of 100 kg.  
Never convert or use this bed while the motor is running!

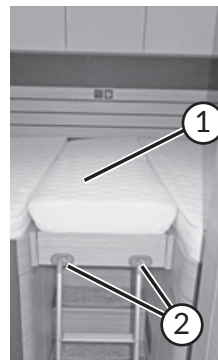

Converted bed

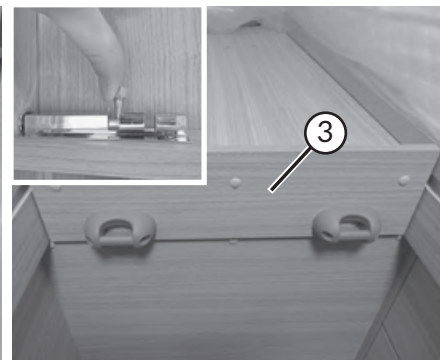

Extension and deadbolts in the MAXIA T

### Converted bed(model-specific)


In models with individual beds above the external storage locker, the two beds can be joined by widening them.

- First, release the deadbolt so that the extension plank (3) can be pulled out. These are located either on the front panel (ONTOUR C/T/PRESTIGE T) or on the back of the front panel of the extension plank (MAXIA T).
- Insert the additional mattress (1) provided for this purpose in the space between the beds.
- Attach the ladder to the ladder supports (2).



Extension piece and deadbolts in the  
ONTOUR C/T/PRESTIGE T

- To return the extension plank ③ to its original position, first remove the ladder as well as the mattress, then release the deadbolt and push the extension plank so far back that the deadbolt can be fastened again.

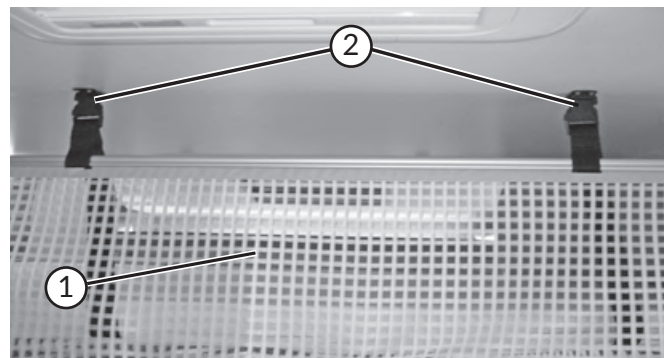

Safety net

### Drop down/Queen-size bed, crossways/ Overcab bedbed

Parents are responsible for ensuring that small children do not fall out of high up beds. If there are small children in the drop down, elevated queen-sized beds above the garage or on the overcab beds, the safety nets ① must be pulled up and fitted in the brackets ② as a protection against falling out.

The floor of the alcove can be folded up to give you more indoor space. Take hold of the bed frame with both hands and press it upwards at a 45° angle. To return the floor of the alcove to a horizontal position, take hold of the bed frame and fold it down again.



Alcoves in a horizontal position



Alcoves folded up



Wardrobe

### Wardrobe under the bed (model-specific)

There is a practical wardrobes under some beds in which bed linen or towels can easily be stored. This compartment can be reached by swinging the slatted frame and mattress up and to the side (see photograph).




When raising or lowering the alcove curtains, ensure that they are not trapped by the bed frame.



All overcab, Island, single and double beds have been designed and tested to hold up to 100 kilos per person.

The floor of the alcove must never be folded up while driving. Excess motion while driving could cause it to drop down, which might damage it.

If you have put small children in the upper berths, secure them against the danger of falling out!

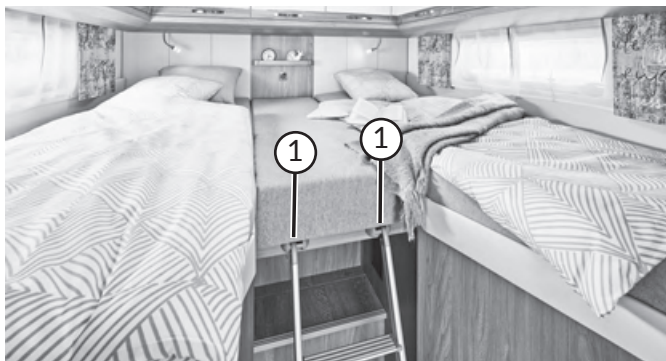

Ladder securing

### Access ladder


Ladders are used to access alcoves, upper bunk beds, alcove beds and beds at the rear end of the motor home (model-specific).

- Hook the upper end of the ladder firmly into the handle provided or into the retaining fixtures ① (model-specific).
- Place the ladder firmly on the floor.



Ensure that the ladder cannot slip.

- Before driving, the ladder for the alcove bed must be stored in the wardrobe.
- Before driving, the ladder for the height-adjustable bed, the bunk bed or the transversal bed in the rear must be stored/wedged underneath the mattress.
- Before driving, the ladder for the single bed with the bed expansion must be stored in the space for the extension.

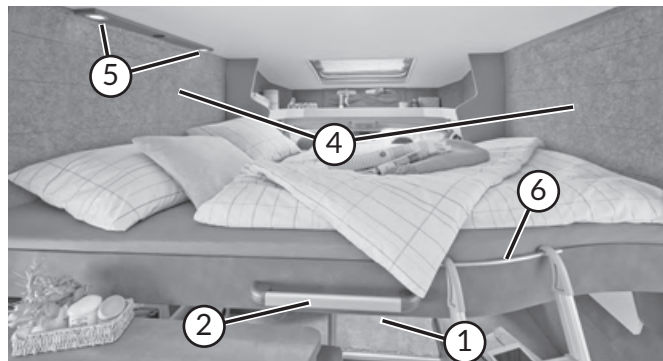

Drop down bed, lowered

### Alcove bed (model-specific)


#### To operate

- If necessary, remove the head rests from the seating bench.
- Switch off the reading lamps and the lighting underneath the alcove bed.
- Pull the grip plate ① underneath the bed frame towards you and, while continuing to pull on the grip plate ①, use the manoeuvring handle ② to lower the alcove bed to its final position.
- Hook the ladder into place on the aluminium rail ⑥ next to the manoeuvring handle.
- When sleeping, always clip the netting that protects you from falling out ③ into place (located underneath the mattress).



Grip plate for the alcove bed

- Before driving, return the alcove bed to the original upper position by once again pulling the grip plate ① towards you and using the manoeuvring handle ② to push the alcove bed up. Whereby it must be ensured that, with the exception of the mattress, no further objects are stored on the bed. This includes pillows and blankets.

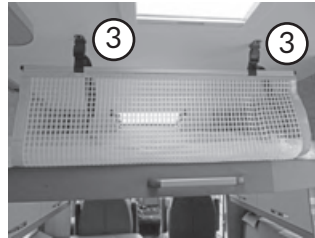

Netting to protect from falling out



The lighting ⑤ on the overcab bed must be switched off when it is moved or when it is in the upper position.

When the motor home is not in use, lower the alcove bed at least halfway or remove the mattress from the drop down bed to ensure there is enough air circulation in this area of the vehicle.

Do not reach into the space between the bed and the side wall while raising or lowering the bed - **there is a danger that your fingers will be crushed!**

No one must be on or underneath the alcove bed while it is being raised or lowered. Keep the space required to lower the bed free of any objects.

The alcove bed is not suitable for unsupervised use by children under the age of 6.

Loading the wall cabinets below the alcove bed has an effect on the operation of the alcove bed. Place only light objects in the wall cabinets and distribute them evenly on both sides.



Maximum load for the drop down bed: 200 kg.



Before driving, the alcove bed must be returned to the highest position and locked into place.

When returning the drop down bed to its storage position, ensure that the fabric facing on the sides ④ does not slip out and behind the bed, where it would get caught in the mechanical system.





Children's beds




Converting the lower bunk bed

## Children's beds

Windows next to bunk beds can only be opened slightly to effectively prevent children from falling out.

The lower bed can be folded away to the side, allowing you full use of the space in the external storage locker.

- Slightly lift the left side of the slatted frame and, at the same time, push it away towards the right ①.
- Use the locking device ② to secure the slatted frame that has been folded away to the side.

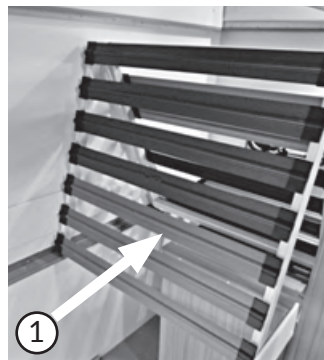

Folding the slatted frame together



Secured slatted frame



The children's beds are not suitable for unsupervised use by children under the age of six. Be careful when using the upper bed for small children, as there is a danger that they may fall out. Never leave small children unattended in the motorhome.

**The permissible maximum load for the beds is 100 kg.**

Always use the safety catch ② to fasten the lower children's bed when it is folded away.






Upright position

## Island bed C 700 GQ

To create more space and allow more freedom of movement around the Island bed, it is possible to change its position. The Island bed can be repositioned either as an upright seat or in a reclining position. The height of the Island bed can also be adjusted.

### Adjusting the Island bed

- Stand in front of the handle ① and lift the slatted frame somewhat so as to lift it over the black fixation trestle ③. Then pull the handle towards you until the entire bed forms a flat surface.
- If you wish to return the Island bed to its upright position, push the handle ① away from you, applying slight force.
- If the height of the Island bed is to be adjusted, fold the slatted frame upwards. Underneath the slatted frame there is a crank

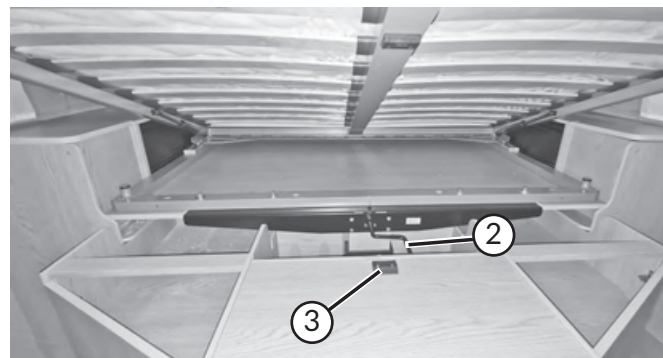

Height adjustment

② in the middle of the bed. Turn the crank to the right so that the entire slatted frame is raised. Turn the crank to the left to lower the slatted frame.

- Use the handle to pull the bed up in order to reach the storage space.



Remove all of the pillows and blankets before changing the position of the Island bed.



The Island bed is not suitable for unsupervised use by children under the age of 6.

If the bed is used by children, take care to ensure that they do not fall off.

Never leave small children unattended in the mobile home when you are gone.

## 6.6 Rearranging the cushions




Motor homes with overcab beds cannot be converted.



When converting the seating arrangement into a bed, do not place the cushions directly on the surface of the table. There is a danger that it could be scratched or mould could build up from condensation. We recommend that you use an absorbent cloth (e.g. terry cloth or cotton).


Ensure that the tabletop, seat chests as well as cushions are well secured so that nothing can fall.

### Rearranging the cushions ONTOUR C 680 GE (F)

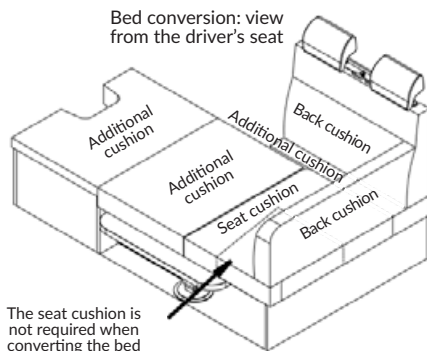


The seat cushion is not required when converting the bed and can be put to one side.

### Rearranging the cushions ONTOUR C 700 GQ

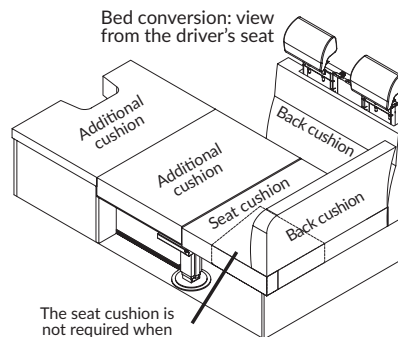


The seat cushion is not required when converting the bed and can be put to one side.


### Rearranging the cushions ONTOUR T / PRESTIGE T / MAXIA T 710 GE

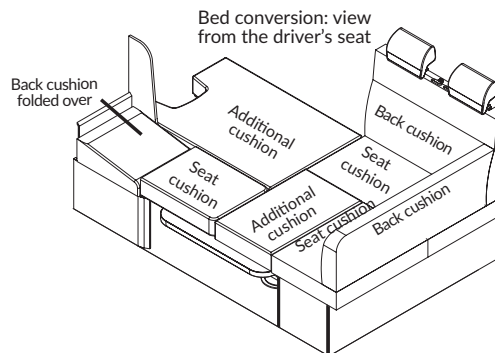


### Rearranging the cushions MAXIA T 740 WE / WF

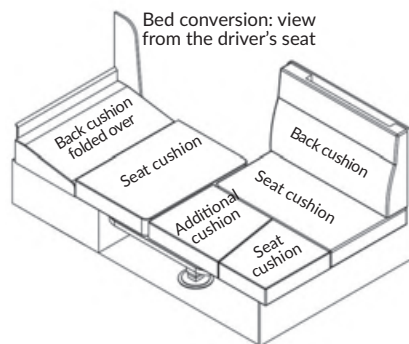

### Rearranging the cushions ONTOUR A 720 GFM

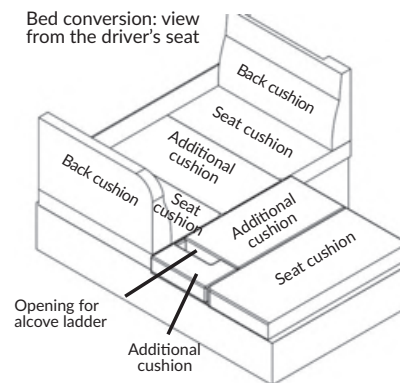


### Rearranging the cushions ONTOUR T 700 F / FH (L)

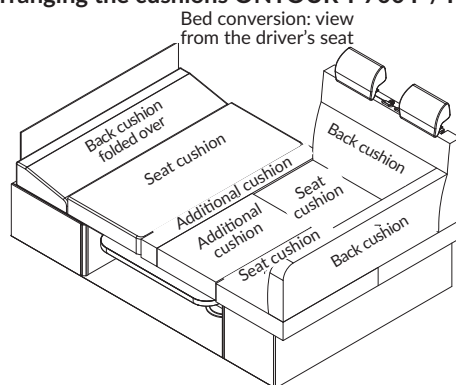



Fastening strap for shower doors

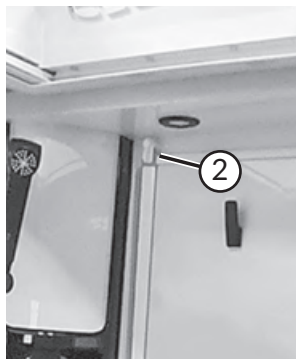

Locking mechanism for shower doors

## 6.7 Washroom

### Fixed shower doors

The washroom has been fitted with a fixed shower door.

#### Preparation

- Release the locks ② or the fastening strap v on the shower doors or turn them to the side and up.
- Connect the rounded doors and the folding door (if applicable) in order to create a separate shower cabinet.



Ensure that the shower door does not cover the blown air outlet nozzle when the heating is on.



Shower doors must be securely fastened when driving.

Only secure the doors when they are completely dry. This helps to prevent mould.




Please note that the washroom door is not permanently resistant to moisture.

Too much moisture can cause deformation, tears or blistering.

For this reason, it is important to air the washroom properly.



Retractable clothes line

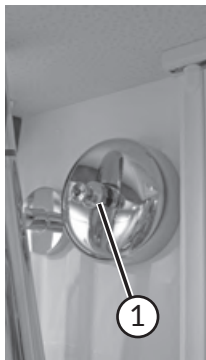

Hook



Retainer


## Clothesline

All models are fitted with a clothesline in the washroom.

- To extend the clothesline, pull out the hook ① and hook it into the retainer ② on the opposite wall.
- To retract, release the hook ① from the retainer ② and slowly guide it back to its original position.



When driving, do not hang anything on the clothesline. We recommend leaving it in its original position whenever driving. The maximum permissible load for the clothesline is 4 kg.

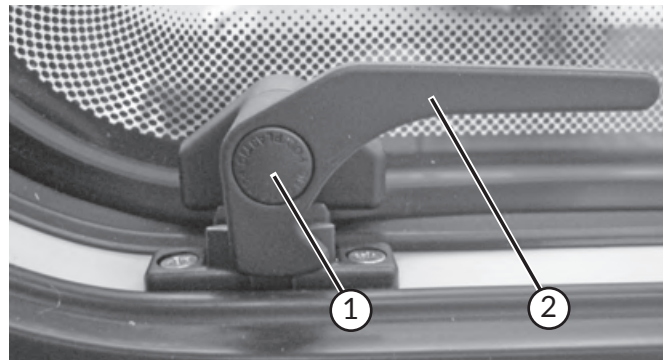

Window catch

## 6.8 Windows



Depending on how the window has been constructed, it has one or more latches with locking knobs ①. To open these window catches, press the lock buttons ①. Various window fixings have been mounted in the vehicle.

Before closing the window, check that the curtains are not caught in the sealing.



In an emergency, the windows in the driver's cab can also be used as an escape route. Therefore, never barricade the windows from the inside or the outside!



Closed



To air



Apart from the open and closed positions, the window latches can also be locked in a middle position to allow some airing.

High humidity may cause a light mist to form within the window panes. This will disappear by itself when the weather is drier.



The windows by the children's beds can only be opened slightly (this is added protection against falling out).

Windows must be shut while driving.

Never use de-icing spray or an ice scraper for the windows on the motor home, doing so could damage the plastic window.


## Push out windows with locking stays

### To open

- Turn the catch ② by 90°.
- Press the window catch outwards until you hear it click. The window will automatically remain in this position. The size of the opening is adjustable in several stages.

### To close

- Lift the window to the fully open position to unlock the window stay and allow the window to come back down.
- Close the window.
- Turn the catch ② to the original position so that it clasps behind the brackets and pull the pane into the seal.

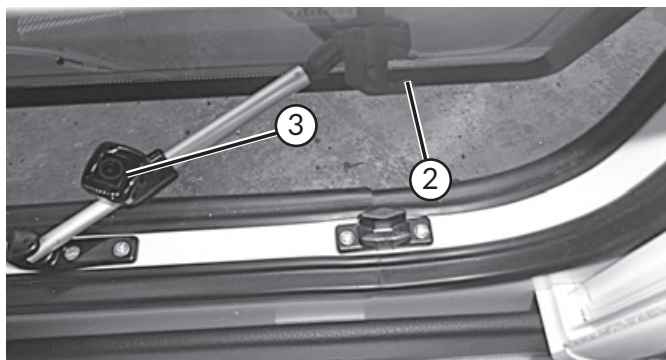

Fully adjustable window stays

## Fully adjustable window stays

### To open

- Turn all latches ② by 90°.
- Press the window latch outwards with your hand until it is open as far as you would like. Then use your other hand to tighten the turn screw ③ until you feel the resistance and the window is held in place.

### To close

- Loosen the turn screw ④ to allow you to close the window.
- Turn all latches back to their original position so that they clasp behind the brackets and pull the pane into the seal.



Blind/fly screen

## Sunshade and insect screen

### To close the black-out blind

- Use the handle to pull the plissé up to the desired position and then let go. The blind remains in this position.

### To open the black-out blind

- Use the handle strip to pull up or down lightly on the black-out blind. The blind rolls upward automatically.

### To close the fly screen

- Pull the fly screen completely down with the handle and let go. The screen remains in this position.

To open the fly screen

- Pull the fly screen slightly down with the handle and then guide it upward. The screen rolls upward automatically.



Do not let the blind or the fly screen retract on its own, keep hold of it!




#### Retightening the tension spring on the shade

Do not leave the blinds closed over a longer period of time. Should a blind lose its tension over a period of time, use a flat screwdriver to retighten the tension spring on the blind. Insert the screwdriver and turn it clockwise one or two revolutions.

Check the tension and repeat this process until the desired tension has been reached.



Overstretching the blind can permanently damage the retracting spring and impair this function.

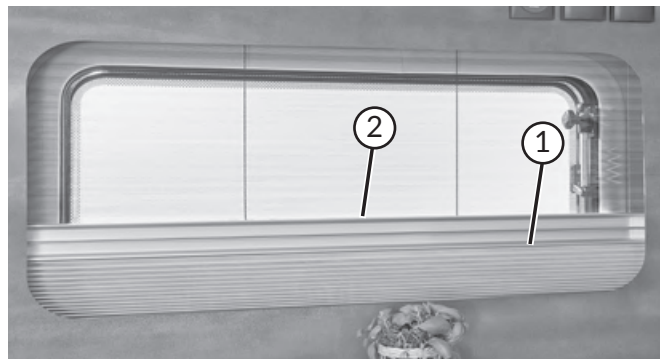

Sunshade and fly screen, pleated

#### Blind/fly screen (only MAXIA)



Ensure that the sunshade and insect screens are not moved simultaneously, because this could cause the cord on the pleated blind to tear.

When the motor home is not in use, leave the pleated blinds open to prevent consequential damage.

In case of strong sunlight, shut the blinds only  $\frac{3}{4}$  or leave the window slightly open. Otherwise, there is a danger of heat build-up.

While driving, leave the sunshade and insect screen open.



Blinds and fly screens are integrated in the window blind frame and are fully adjustable.

#### To close

- Move the rail for the pleated blind ① or the latch for the pleated fly screen ② slowly and evenly to the desired position.

#### To open

- Use the rail/latch to push the pleated screen up or down slowly and evenly.

#### To connect the blind and fly screen together

- Pull the pleated blind down slowly and evenly, then pull the fly screen to meet it in the desired position.



Skylight

### Skylight

The overcab roof windows have integrated blinds that can be pulled to close them.



If the vehicle is not in use for a long period of time, the sun shade must be opened to prevent heat from building up inside the vehicle.

#### To open

- Turn all of the window latches by 90°.
- Press the window catch outwards until you hear it click. The window will automatically remain in this position. The size of the opening is adjustable in several stages.

**To close**

- Raise the window slightly so that the window stay unlocks.
- Close the window.
- Turn the catch to the original position so that it locks behind the brackets and pull the pane into the seal.



The roof window must be closed while driving.

**6.9 Blind system for driver's cabin**

The blinds must only be closed when the vehicle is standing and the engine has been turned off. Before driving, fold the entire system together and lock it or remove it completely and store it **(model-specific)**.


When the motorhome is not in use, open the blackout system; otherwise, exposure to the heat and UV radiation will damage it permanently.



The blind system must not be used as a sunshade or closed while driving.



Blackout system for side window, closed

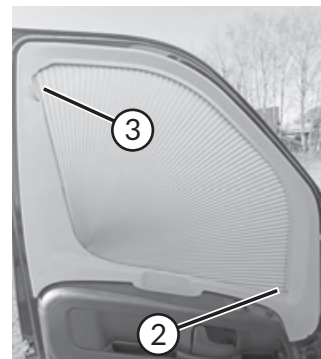**Side system**

- To close: pull the handle ① out of the lower end position ②, guide the handle to the upper end position ③ and push it into place.
- Repeat the steps in reverse to open the side system.



Blackout system for the wind-  
screen open



half closed

### Front system

- To close: guide the handle ④ from the lower to the upper end position.
- Repeat the steps in reverse to open the front system.



Thermal curtain

### 6.10 Thermal curtain for driver's cab\*

#### To install

- There is a cover flap along the top edge of the curtain that must be pushed between the headliner and the sun visor.
- Fasten the pushbuttons to their counterparts on the B-pillar. This ensures that the curtain is closed tightly and has sufficient support.



Before driving, the thermal curtain must be entirely removed from the driver's cab and stored in the vehicle.



The thermal curtain has a flap that enables you to reach the radio and the ventilation. The flap is closed by means of a magnetic lock and a button to hold it closed.

If there is no frost outside and you are in a bit of a hurry, it is enough to simply set up the curtain and push the cover flap between the headliner and the sun visor. Then there is no need to fasten the sides of the curtain.



Footwell insulation in driver's cab

### Footwell insulation



Follow the manufacturer's instructions and place the trough-shaped footwell insulation in the footwell of the driver's cab.



The footwell insulation must be completely removed from the driver's cab before driving.

## 6.11 Skylight

### Safety instructions



- Never open the skylight in strong winds/rain/hail, etc. or if the temperature outside is below -20°C!
- Never use force to open roof lights when there is frost or snow as the hinges and opening mechanism might break.
- Remove snow, ice or excessive dirt before opening. Ensure there is sufficient room before opening the skylight under trees, in garages, etc.
- Do not stand on the skylight.
- Close and lock the skylight before driving. Open the fly screen and the folding blind (resting position).
- In case of strong sunlight, shut the blinds only  $\frac{3}{4}$  and open the roof bonnet slightly. Otherwise, there is a danger of heat build-up.
- Leave the blinds completely open if you do not plan on using the vehicle for a longer period of time.
- The vents for ventilation must always remain open! Never close or cover up these vents!



Large roof light



Crank  
(user position)



Control pin

### Large roof bonnet



Before opening the roof light, ensure that the area above the opening of the roof light is free. The top can be opened to an angle of 60°.

#### To open


- Reach up to the crank box and fold the crank to the user position by pulling it down. Turn the handle clockwise to open the top to the desired position. When you have reached the maximum opening angle you will feel the resistance.

**To close**

- Turn the handle anti-clockwise until the light is closed and you feel the resistance. The control pin ① is visible when the skylight is shut. Then turn the crank only so far until you can fold it into the crank box. To be locked securely, the crank must be folded into the crank box.



Small roof light

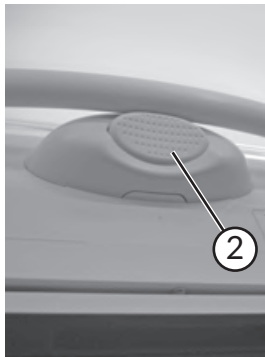

Locking knob

**Small roof bonnet****To open**

- This roof light can be opened in the opposite direction to traffic. Press the locking button ② and use the adjusting handle to move the roof bonnet to the desired position.

**To close**

- Guide the adjusting handle along the guide rail ③ and close the roof light. The topt will lock when the lever hooks into place behind the locking button ②.



The maximum speed is 130 km/h, going faster will create wind noise and may cause damage, depending on the super-structure or place of installation.

**Always keep skylights shut when driving!**

**Fly screens and blinds (plissés)**

Both blinds are fully adjustable by sliding them horizontally from side to side.



Captains Chair


## 6.12 Seats in the driver's cab



All of the motor homes (**Exception T 720 GFM**) have rotating driver's and passenger's seats, which can be used as additional chairs in the habitation area. To operate these rotating seats, please refer to the operating instructions for the base vehicle.



- Before driving turn all rotating in to face in the driving direction and lock them into place.
- Leave the seats locked to face in the driving direction while driving. Do not rotate them.
- When the vehicle is stationary: take care when turning the driver's seat that the handbrake is applied and cannot be released by accident.

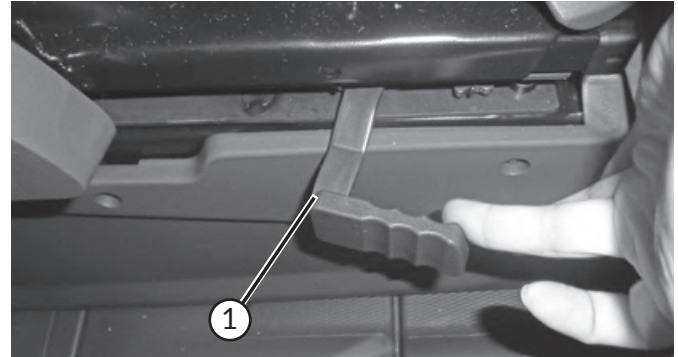

Lever for turning the seats


The lever ① for turning the seat is located on the inner edge of the seats in the driver's cab.

### Rotating seats

- Put the armrests up.
- Move the seat to the central position.
- Release the lever ① on the seat. The seat will be released from the locking position.
- Push the seat belt buckle down to avoid damaging it.
- Rotate the seat to the desired position.



Side seating area in the habitation

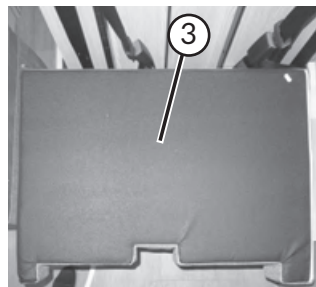

Anti-slip mat


## 6.13 Construction of the seats

### Cushion fastenings

The bottom of the seat cushions has been fitted with an anti-slip mat ③ which holds the seat cushion on the bench seat.



Ensure that the seat cushions and backrests are fastened securely and correctly.

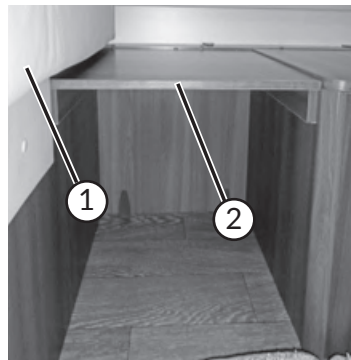

Converting the L-shaped seating arrangement

### Converting the L-shaped seating arrangement


To use the outer seats in models with an L-shaped seating arrangement (**model-specific**) it must be converted before you drive.

- Remove the seat and back cushions.
- Fold the lid ① of the seat bench up.
- Pull the entire insertion plate ② up and out.
- Lower the lid of the seating bench, replace the seat and back cushions.



When converting back to the original arrangement, ensure that the insertion plate ② is placed securely in the holding bracket and cannot slip out.



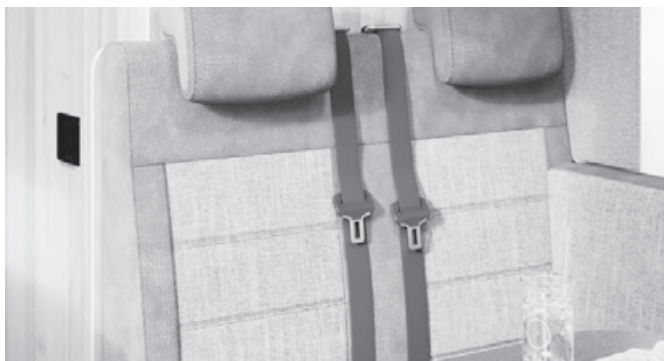

Seatbelts

## 6.14 Seatbelts in the motor home

The seating arrangements are fitted with safety belts.



Please note the overview of the seating arrangements for your vehicle. Certain seats must not be used while driving!

### Buckling the seatbelt

Do not twist the seatbelt.

- Grasp the tongue and insert it in the lock of the seatbelt until you hear it snap shut.
- Guide the upper part of the seatbelt over your shoulder and diagonally across your chest.
- The lower part of the seatbelt fits across your hips.

### Unbuckling the seatbelt


- Press the button on the lock of the seatbelt to unlock the tongue.



- Fasten seat belts before driving and keep them fastened while driving.
- Do not damage or jam the seatbelts. Damaged seatbelts should be replaced by an authorised workshop.
- Do not alter the seatbelt fixings; the automatic retraction system or the buckles.
- Only use each seatbelt for one adult. Do not fasten objects and people using only one seatbelt.
- Seatbelts alone are not suitable for persons under 150 cm tall. In such cases use additional restraining equipment.
- Replace seatbelts after an accident.
- Do not twist the seatbelt; it should fit closely to your body.


## 6.15 Overview of the seating arrangements

### ONTOUR C 680 GE (F) / C 700 GQ

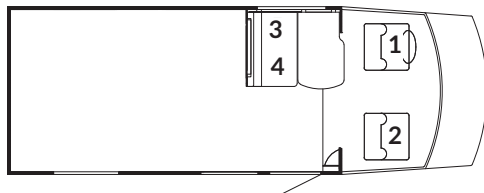


Seats 1 - 4: may be used while driving.

### ONTOUR T 700 F

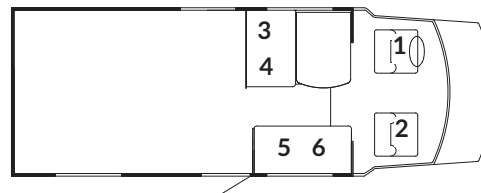


Seats 1 - 4: may be used while driving.  
Seats 5 - 6: must not be used while driving.

### ONTOUR T / PRESTIGE T / MAXIA T 710 GE

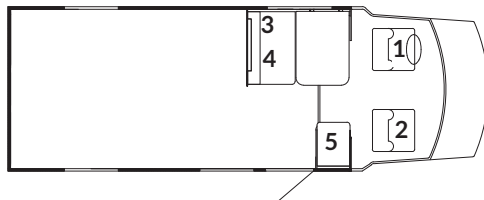


Seats 1 - 4: may be used while driving..  
Seat 5: must not be used while driving.

### ONTOUR T 700 FH (L)

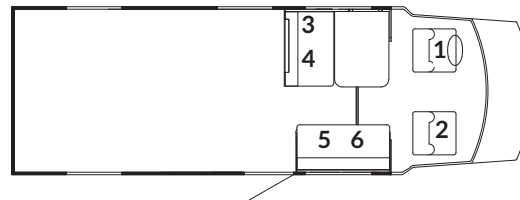


Seats 1 - 4: may be used while driving.  
Seats 5 - 6: must not be used while driving.

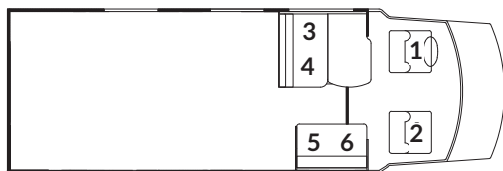**MAXIA T 740 WE / WF**

Seats 1 - 4: may be used while driving.

Seats 5 - 6: must not be used while driving.

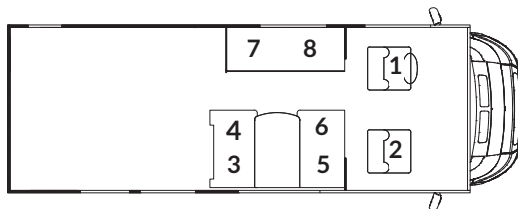**ONTOUR A 720 GFM**

Seats 1 - 5: may be used while driving.

Seats 6 - 8: must not be used while driving.

## Chapter 7: Electrical Installations

### 7.1 Safety instructions

The installation of electrical devices in Hobby's motor homes has been carried out in accordance with the valid regulations.

#### Please note:



- Do not remove the signs on electrical components giving safety instructions or danger warnings.
- The installation spaces around electrical equipment such as distribution fuse boards, electric power supply, etc., must not be used as additional storage spaces.
- Smoking and naked flames are forbidden when checking electrical equipment.
- Incorrect use handling of the vehicle's electrical system may endanger your own life as well as that of others.
- To connect to an external 230 V mains connection, use only a weather-proof, 3-wire extension cord with a CEE plug and connector.

### 7.2 Elements of the electrical system

#### Advice and instructions

##### Important

- The motor home's electric system should preferably be inspected within a period of less than three years. If the motor home is used frequently, an electrical engineering specialist should inspect the electric system every year.
- Any changes to the electrical installations must only be carried out by a professional electrician.
- Disconnect the battery and switch off the 230V mains before carrying out any maintenance work.

##### Batteries

- Please observe the battery manufacturer's operating instructions.
- The acid in the battery is poisonous and corrosive. Avoid contact with eyes and skin.
- The completely discharged battery must be recharged for at least 24 hours. The battery may be damaged if it has been discharged for more than 8 weeks.
- Avoid letting the battery fully discharge (go flat), as otherwise the performance and lifetime of the battery will be significantly reduced.

- Dual AGM/lithium batteries require no maintenance, but must be continuously recharged.
- Check that the battery clamps are secure and remove any layers of oxide.
- Turn off the battery circuit breaker (red key) if the ancillary battery is not being used for a longer period of time (2 weeks or more). The standby current used continuously by some electrical devices discharges the habitation battery. Even if the battery circuit breaker (red key) is turned off, the battery can still be charged by the battery charger (trickle charging).
- Should the battery be removed, isolate the positive terminal (to prevent short circuits when turning on the motor).

#### **Battery charger**

- The charge operates by means of a sensor or using IU0U charging technology, provided the sensor has not been calibrated or the CI-Bus system is offline.
- In the case of misuse the guarantee and manufacturer's liability will no longer apply.
- The air vents in the dashboard must not be covered up or closed. Ensure that there is sufficient ventilation.

#### **Tank probes**

The probe with rods measures the contents of the fresh and waste water tanks.

- To prevent scaling, never let the water stand too long in the tanks (especially in the waste water and waste tanks).
- Flush the tanks regularly.

#### **230V automatic circuit breaker with an earth leakage circuit breaker**

The 230V automatic circuit breaker supplies and protects the 230V devices.

- To switch off the 230V power supply in the entire system, set the 230V automatic circuit breaker to "0" (OFF).

#### **Fuses**


- Only replace defective fuses after the cause of the defect has been remedied by a professional electrician.
- The new fuse must have the same amperage as the old one.

### 7.3 Control panel



Control panel

The system consists of control electronics, a control panel with a keypad and several peripheral panels. It enables you to operate the different lamps and functions. To some extent, active functions are indicated by means of blue LEDs beneath the respective icons.

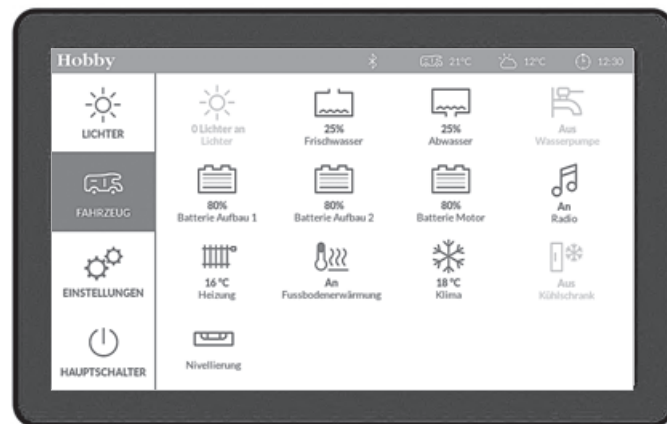

7" Touch control panel (model-specific/\*)



Please note that these are example illustrations meant to display all of the possible functions of the touch control panel.

The touch control panel installed in your trailer will, on the other hand, only display the functions actually installed in the vehicle.

## Key icons on the (touch) control panel

### Functions of the main switch

#### Control panel



Press briefly

#### Touch control panel

Inactive functions  
are grayed out



Devices and lights

- After initially connecting the vehicle to the 230V mains, press either the main switch or any other control key in order to activate all of the 12V electrical devices and those 230V electrical devices which are switched by the system.



Press briefly



Devices only

- If the system is in operation, this switch will turn all of the lights off. All 12V steady electrical devices (e.g. water supply, refrigerator control, heating, USB and 12V sockets) will remain activated. The devices that were previously switched on are stored in the system; pressing on the main switch reactivates them. This also resets the degree to which those lights were dimmed that can be adjusted.



4 seconds



Vehicle in standby

- When the system is switched on, this also switches off the toilet flush and water pump, radio as well as the Ice Ex heating cartridge//DuoControl (\*//**depending on the equipment**) in addition to the currently activated devices. 12V steady electrical devices cannot be switched off.
- Should there be a power failure, none of the switching conditions on the main switch and the lamps will be saved. As soon as the power is back on, the devices that continuously use current, e.g. the heating system, are once again ready for operation.



All 12V electrical devices will only operate on the ancillary battery if the main switch has been activated (exceptions: the heating system, DuoControl remote control\*, gas alarm\*, electric entrance step, electric tank heating system\*, Hobby-Connect and electric ignition for gas cooker).

If the vehicle's motor is running, the absorber refrigerator will operate automatically on 12V, i.e. it is not necessary to press the main switch on the Hobby control panel. In this case, the selector switch for the refrigerator must be set to 12V operation. In addition, the refrigerator may be in automatic mode.



All other 12V electrical devices will only operate on the habitation battery if the main switch has been activated.

In general, power for the compressor refrigerators is supplied only by the ancillary battery (12V), irrespective of whether they run in stationary operation (self-sufficiently), stationary operation (external 230V mains operation) or while driving (vehicle's motor is ON).

## Elements on the control panel



**Wall lights / lighting in the seating**



**Ceiling light**

- Briefly press the corresponding button to switch each lamp on and off. Press longer on the button to regulate how brightly you want the lights to shine. The brightness you set will be saved; when the lights are switched on again, the brightness you originally set will also be switched on again. If the system's power supply is interrupted, the wall light will shine on full the first time you switch it on. If the intensity has been reduced to a minimum by dimming the lights, the lamp will switch itself off. Since this setting is saved, the dimmer must be reset to the brightest level before the lamp will shine again. For technical reasons, if the lamp is set to the very lowest dimmed level, the light may flicker. If this bothers you, please increase the brightness of the light.



The wall lamps themselves must be switched on before they can be controlled via the control panel.



**Awning light**

- Press this button to switch the entrance light on and off. It is not possible to switch this light on when the engine is running. The light will turn off automatically when the engine is started.



The awning light must be switched off when the motorhome is on the road.



**Kitchen light**

- Press briefly on the button to switch the kitchen light as well as the spots on and off.



**LED ambient lighting**

- Briefly press the button to switch on the indirect light. Press longer on the button to regulate how brightly you want the lights to shine.





A total of 3 keys are used to switch the LED ambient lighting on and off. Depending on the model and design, either none, 1, 2 or 3 keys have been assigned.



Fresh water tank



Waste water tank

### Filling level indicator

- When you press these keys, the filling level of the fresh water and waste water tank, respectively, is displayed by means of an illuminated LED bar. When the filling level of the fresh water tank is very low, the outer left LED on the bar will start to blink.



Make sure the vehicle is level to obtain an accurate reading from the water level indicator.



Habitation battery



Starter battery

### Battery management

- When you press this key, the current status of the battery is displayed by means of an illuminated LED bar. When the charging status of the battery is very low, the outer left LED on the bar will start to blink.

### Overview of charging status of habitation/starter battery and filling levels of fresh and waste water tanks:

| Battery voltage starter battery                 | < 11,5V          | 11,5V to 11,7V | 11,8V | 11,9V to 12,0V | 12,1V | 12,2V |
|-------------------------------------------------|------------------|----------------|-------|----------------|-------|-------|
| SoC *1<br>Charging status ancillary battery/ies | 0%               | 10%            | 20%   | 30%            | 40%   | 50%   |
| LEDs                                            | First one blinks | 1              | 2     | 3              | 4     | 5     |
| Filling level waste water/fresh water tank      | 0%               | 25%            | 25%   | 25%            | 50%   | 50%   |

| Battery voltage starter battery                 | 12,3V | 12,4V | 12,5V | 12,6V | >= 12,7V |
|-------------------------------------------------|-------|-------|-------|-------|----------|
| SoC *1<br>Charging status ancillary battery/ies | 60%   | 70%   | 80%   | 90%   | 100%     |
| LEDs                                            | 6     | 7     | 8     | 9     | 10       |
| Filling level waste water/fresh water tank      | 75%   | 75%   | 100%  | 100%  | 100%     |

\*1: State of Charge



### Radio

- Briefly press the key to switch the radio on and off.



### Bluetooth connection

- Press this key to activate the Bluetooth pairing mode. Press the key for approx. 2 seconds. A blue chase light will appear on the control panel. It goes off automatically after 2 minutes or when the Bluetooth connection has been established.



### Electric waste water tank heating system

- In the motor homes this key is not assigned.



### Water pump

- Press this key to activate and deactivate the water pump.



### Floor heating


- In the 2025 model series, this key is not assigned.

## Elements on the touch control panel




### Lights

The individual lights can be switched on and off and dimmed using the menu item Lights.

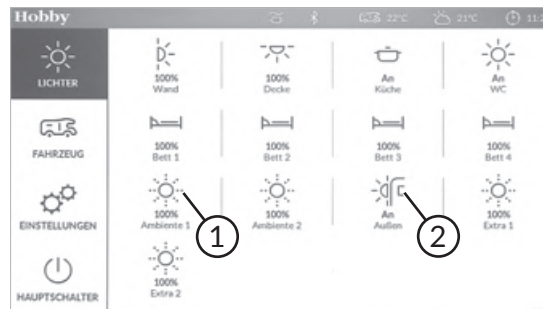

### Lights menu

- Lights that can be dimmed are recognized by means of the percentage given beneath the light ①. To dim a light, select it in order to access the Lights menu. Push the slider ③ to the left (to dim) or to the right (to brighten). This enables the brightness to be adjusted, depending on the time of day or the occasion. In this submenu, the lights can be switched on and off via the main switch ④.
- Lights that cannot be dimmed are switched on and off by pressing on them once ②.

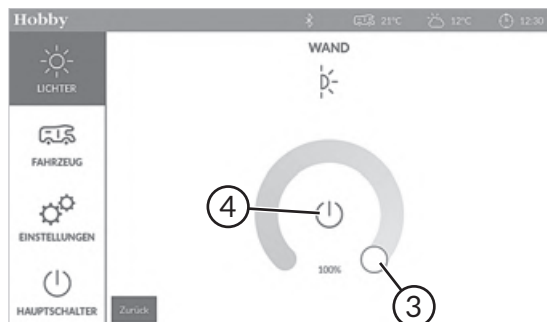

Setting the luminosity





## Vehicle

Select a function (**model-specific/\***) to access the individual setting sections.



Example: overview of the vehicle

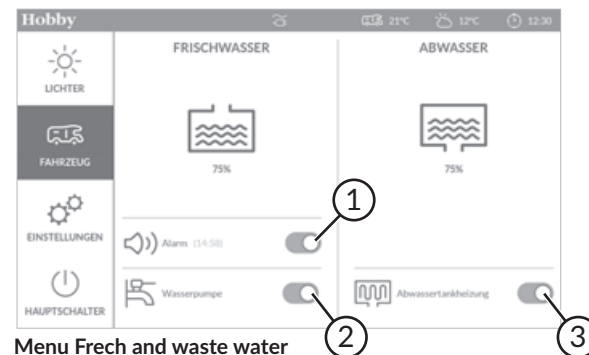

Menu Fresh and waste water tanks

- The alarm can be activated ① under “Fresh water”. The alarm function serves as a filling aid for the fresh water tank. An acoustic signal/beep goes off. This increases in frequency as the filling level increases. This function does not activate a message when the tank is empty..
- The fresh water pump can be switched on and off under “Water pump” ②.
- The waste water tank heating\* can be switched on and off under “Waste water tank” ③.



We recommend using the alarm function when filling the fresh water tank.



Trailer battery 1



Motor battery

### Battery menu



#### Trailer battery menu

- The status of the trailer and starter batteries is displayed in this menu. If the arrow ① points to the battery, it is currently being charged.  
The battery type and capacity can be changed under the menu item "Configuration".



#### Battery configuration

#### Battery configuration

The battery type with the corresponding capacity can be set in the submenu "Configuration" (exception: lithium battery\*: the LiFePo4 type battery will automatically be recognized).



Changes in the battery settings have an effect on the charging technology as well as the battery management.



Heating

### Heating (\* /model-specific)



#### Menu Heating

- Switches the heating on and off ①.
- The temperature level ② can be set by means of the slider.
- To set the type of energy ③, choose between gas, diesel and electric operation (**model-specific**). The Combi D 6 E is controlled via the gas icon for diesel-type energy.
- To set the water temperature ④, choose between the modes "OFF", "ECO" and "HOT" (**model-specific**).

The modes stand for the temperature levels of the domestic water supply:

OFF = hot water switched off

ECO = 40° C

HOT = 60° C

- The selected type of heating can be seen here ⑤.



Refrigerator

### Absorber refrigerator (model-specific)



#### Absorber refrigerator

- Switches the refrigerator on and off ①.
- Temperature level ② can be set using the slider.
- If required, select the type of energy ③ (**model-specific**).
- Refrigerator ④ (**model-specific**).
- Type of operation ⑤ can be selected (**model-specific**).

#### Type of energy

Absorber refrigerators:

Electric Gas Combined Automatic



DC



Gas



AC



Automatik



## Compressor refrigerator (model-specific)

Refrigerator



### Compressor refrigerator

- Switches the refrigerator on and off ①.
- Temperature level ② can be set using the slider.
- If required, select the type of energy ③ (model-specific).
- Refrigerator ④ (model-specific).
- Type of operation ⑤ can be selected (model-specific).



Compressor refrigerators can only be electrically operated.



### Performance:

On/Off

Leistung



### Cooling:

Standard operation, depending on the environment, select L1 (low) to L5 (high).

Kühlen

**Hobby**

BUILT FOR LIFE



Leise



Boost

### Quiet:

Reduces the noise from the fan and the compressor. Automatically resets itself after 12 hours.

### Boost:

To cool down fast after filling the refrigerator. Automatically resets itself after 6 hours.



Climate

Climate\* (not available from the trailer manufacturer)



### Menu Climate

- Switches the air conditioning on and off ①.
- The room temperature ② and the type of air-conditioning can be set in the Climate menu. Then the fan speed can be regulated; there are three possible levels.




Radio

Switching the radio on and off.



## Levelling

Levelling

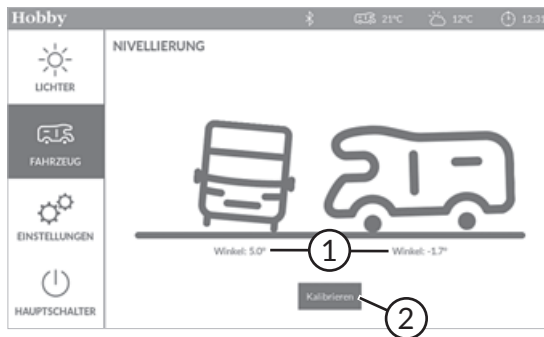

### Display before levelling

It is important to level the vehicle to ensure that camping is safe, comfortable and functional. If the trailer is not levelled, the refrigerator, water drains and doors will often not function correctly – and the inhabitants' sleep is also often disturbed.

The levelling display indicates whether the vehicle is standing in a horizontally level position.


First, the positions ① of your vehicle are shown.

- Now put the vehicle in the correct position or use the wheel levellers (not included in the scope of delivery).



### Querying calibration

- If the vehicle is in a horizontally level position, but the values ① still indicate deviations, this can be corrected using "Calibrate" ②. Confirm by clicking on "Continue" ③ to indicate that you wish to continue.

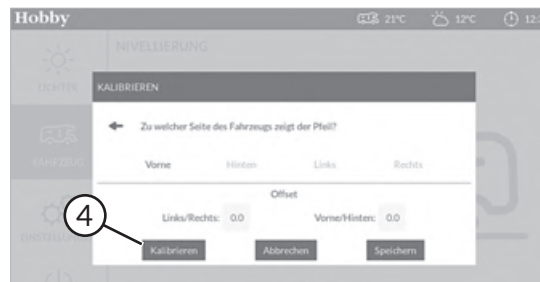


### Calibration

- Select to which side the arrow is pointing. Front = in the direction the vehicle drives
- Confirm the entries via "Calibrate" ④.



## Settings

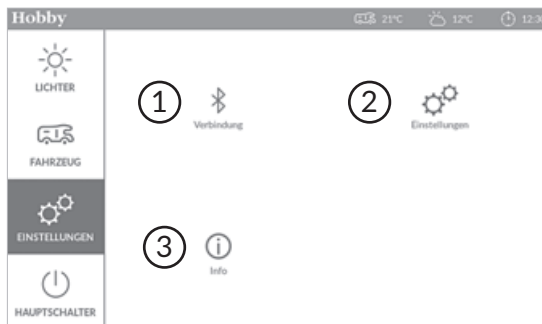

### Menu Settings

- Mobile devices (smartphone/tablet) can be connected to the touch control panel under ① “Connection”.
- The date, brightness of the display, volume of the alarm ring or language can be adjusted under ② “Settings”.
- Information on the Touch Control Panel ③.



### Activating Bluetooth



- To set up a connection between your mobile device and the touch control panel in the vehicle, the Bluetooth function on both components must be activated.  
In order to use the app functions, you will be requested to activate Bluetooth on the app or you can set up the Bluetooth function manually under Settings.
- Activate the Bluetooth function on the touch control panel in the vehicle. Press the Bluetooth key ① (hold the key down).





### Displaying an active connection

- Activate the Bluetooth function on your mobile device. If necessary, use the manufacturer's operating instructions. When the Bluetooth functions have successfully been activated ②, use the "Bluetooth" button on the app's Start menu to connect the components.



### Deactivating Bluetooth



Only one mobile device at a time can be connected to the app. If the app is to be used on another mobile device, it must first be disconnected from the device that is currently using it.

If it is not possible to connect to Bluetooth, please check the Bluetooth settings on your mobile device once again.



### Settings submenu



- The date, brightness of the display, volume of the alarm ring or language can be adjusted under “Settings”.
- “Dark mode” is a GUI setting for the display and operating system. It inverts the colour scheme by displaying light text and icon colours on a dark background.
- In addition, it is possible to calibrate the inside and outside temperatures.



Temperature effects on the sensors may lead to a deviation between the temperature displayed and the actual temperature.



### Display information



- Information on the Touch Control Panel.



### 7.3.1 HobbyConnect

**HobbyConnect** enables most CI-BUS-enabled components in the recreational vehicle to be operated via mobile devices (smartphone/tablet). The “**HobbyConnect**” app is required for this. It is free of charge. Connection to the vehicle is carried out via Bluetooth.



- The HobbyConnect is only available for iOS or Android operating systems.
- The HobbyConnect is constantly being further developed and updated. Therefore, new In-App functions are on offer from time to time.



App-Icon

### Using the HobbyConnect app



Descriptions and illustrations may vary, depending on the operating system of the mobile device.

Install the **HobbyConnect app** on your device and then start the app.

#### Register


Enter your e-mail address, your first and last name and set up a password. Activate the check box to confirm the General Terms and Conditions. Then click on “Register”. In the next step you will receive an e-mail, sent to the e-mail address you have entered. The mail includes a confirmation link. Click on the confirmation link to complete the registration process. In future, always enter this e-mail address and the selected password in the „Register“ form.

**Start screen** when accessing the app if a user has not yet been registered.

#### Register

You will be asked to register the first time you start the app. If registration has not yet been carried out, the registration interface will appear on the display.


When you have started the app, click on the Login button under “Do you already have an account?” to enter your login data (e-mail address and password)

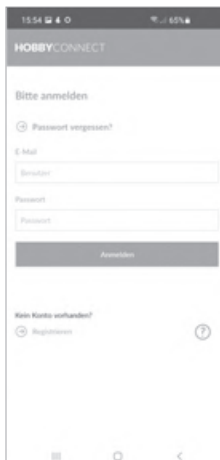

Login

Enter your e-mail address and password and then use the Login button to confirm the data you have entered.

Use the “Forgot password?” function to switch to a submenu and have a new password sent to the e-mail address entered.

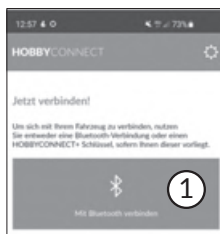

Selecting a connection

If the login data was entered correctly, the “Connect now!” Window will open. Select Bluetooth ①.

### Connecting via HobbyConnect (Bluetooth)

To set up a connection between your mobile device and the control panel in the motor home, the Bluetooth function on both components must be activated.

Therefore, in order to use the app functions, you will be requested to activate Bluetooth on the app, or you can set up the Bluetooth function manually in the settings.



Control panel

7"-Touch control panel

1. Activate the Bluetooth function on the control panel in the vehicle. Press the Bluetooth key ① (hold the key down for approx. 2 seconds).
2. Activate the Bluetooth function on your mobile device. If necessary, use the manufacturer's operating instructions.



Only one mobile device at a time can be connected to the app. If the app is to be used on another mobile device, it must first be disconnected from the device that is currently using it.



When the Bluetooth functions have successfully been activated, use the “Bluetooth” button on the app's Start menu to connect the components.



This procedure can take up to 30 seconds.

#### Connection is being activated



The picture on the left shows a successful Bluetooth (HobbyConnect)-connection.



If a Bluetooth connection could not be established, check the Bluetooth settings on your mobile device once again.

#### Successful Bluetooth connection



#### User interface

### Using the app functions in motor homes (HobbyConnect)

The user interface shows the functions that can be read out and/or controlled via the app.



The operating elements on the app interface may vary, depending on how the vehicle has been equipped. Tap on the desired function once to enter the sub-menu and obtain detailed information on the function in question.

The temperatures outside and inside are displayed on the upper menu bar of the user interface. It also shows whether the vehicle is connected to the 230V mains and whether there is a Bluetooth connection.



Battery Status

### Battery Status

The battery status indicates the following:

- whether the battery is being discharged or charged,
- charge level,
- voltage,
- power,
- how much time the battery requires to be charged fully or how long the battery can continue to deliver power at the present current consumption,
- and whether the charge controller is connected to the 230V mains.



Setting the battery type

The battery type can be set in the sub-menu.



If the set values do not match those of the battery that was installed, incorrect values will be displayed in the battery management. Setting the type of battery has an effect on the charging behaviour; therefore, this must be set correctly.

For the optional extra Lithium Battery\*, the LiFePo4 battery type is automatically recognized. In this case, no further settings are necessary.



Filling level fresh water/waste water tank

### Water Tank

The level indicator of the water tank shows how much fresh water/waste water is in the tank in steps from 0 (empty) to 4 (full).

The alarm function serves as a filling aid for the fresh water tank.

An acoustic signal/beep goes off. This increases in frequency as the filling level increases.

This function does not activate a message when the tank is empty.



Heating

## Heating

The basic requirement for the heating display/function in the HobbyConnect App is the Truma control panel CP Plus (\* / model-specific).

Click on the “Heating” icon on the menu to regulate/switch the temperature in the room and for the water on and off.

The desired room temperature can be set in steps of 1° C, from +5° C to +30° C. The terms “Eco” and “Hot” stand for the two temperature levels of the grey water (Eco 40° C/Hot 60° C).

## Type of operation

Gas, mixed operation (gas + electric) / diesel, mixed operation (diesel + electric) or electric operation can be selected. If mixed operation or electric operation have been selected, the desired performance must also be selected.


**Truma:** 1 lightning bolt = 0.9 kW,  
2 lightning bolts = 1.8 kW



Electric operation and mixed operation are only available as an optional extra for Truma Combi 6E / D 6E. The diesel as well as mixed operation (diesel + electric) are controlled by means of the corresponding gas icon.

HobbyConnect can only be used to control the basic functions of the heating system. Enhanced functions are available on the manufacturer's own LCD control panel “CP-Plus”.

Please refer also to the descriptions of the heating system in **Chapter 10 Built-in Devices**.

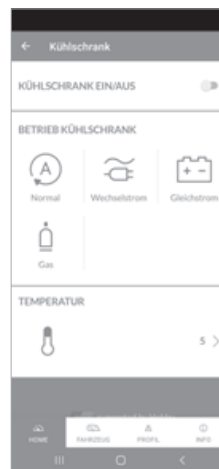

Absorber refrigerator

## Refrigerator

The cooling mode can be determined and the refrigerator temperature set here.


## Absorber refrigerator

The refrigerator can be switched on/off.

The operating mode can be selected:

- automatic (Automatic Energy Selection / AES)
- alternating current (AC) (230V mains operation / shore power supply)
- direct current (DC) (12V operation while driving / motor ON)
- gas

The desired temperature level can be selected from: 1 – 5

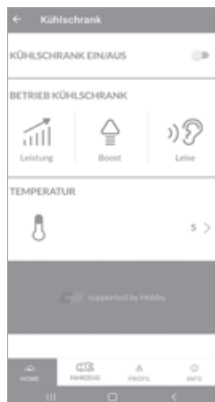

Compressor refrigerator


### Compressor refrigerator

The refrigerator can be switched on/off.

The operating mode can be selected:

- performance (automatic mode)
- boost (maximum performance)
- quiet (night mode, reduced performance)

The desired temperature level can be selected from: 1 – 5.

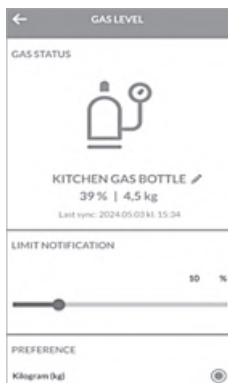

Gas fill level

### Gas fill level\*

If the vehicle has been fitted with the Smart Trailer System\*, the “Gas Status” menu will indicate when a gas bottle needs to be exchanged.



Overview of the vehicle

### Overview of the vehicle

The overview of the vehicle ① gives a detailed overall view of the settings already saved, depending on how the motor home has been equipped.

Furthermore, it allows you to access the main switch. All of the components that can be accessed via the app can be switched on and off here (note: this does not apply for the 12V steady electrical devices - see 7.3 Functions of the main switch).

The Ice Ex is in a kind of automatic mode provided the main switch function has been activated.

If the optional extra “Remote Control for DuoControl” is available, the Ice Ex cartridge can be switched on and off directly via the original Truma control panel on the remote indicator.

Constraints for the automatic function of the Ice Ex:

- 230V mains connection or when the motor is running
- outside temperature of < 5°C





Lighting menu

### Lighting

The lighting menu can be used to switch lights on and off individually or as a light group (several lights at the same time) or to dim them.

To set up a light group, switch on the desired lights and save them under Light Group.

This entry can be edited or deleted at any time ①. To call up these functions, swipe your finger from the right-hand edge of the mobile device towards the middle of the screen net to the desired light group.

The function and availability of the lights depend on the model and design.



### Profile



View of personal data

### Profile/User overview

If you have logged in via Bluetooth, this will be displayed here.



After connection via Bluetooth, only one user can access the system.

HobbyConnect+ is an optional extra from earlier model years. It is still shown in the HobbyConnect app, but is not available from the manufacturer for mobile homes from the current season.

Click on “Log off” to log out of the app.

Personal data can be entered and/or amended in the “My Account” submenu (name, e-mail address, password).



Notification settings

### Notifications


The “Notification” settings enable you to decide which areas in the motor home you would like to be informed of by the HobbyConnect app.

The messages displayed in the system can be deleted as necessary.



### Settings

Click on this icon (displayed on the left) at the top right of the user interface to access the settings overview.

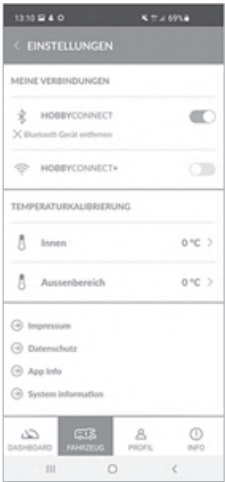

Settings


Here you can see whether there is a connection to the vehicle via Hobby-Connect.

Click on the different submenus to obtain additional app information, read about the data protection regulations or look at the legal notice.

In addition, both the indoor and the outdoor temperature can be calibrated here.



Temperature effects on the sensors may lead to a deviation between the temperature displayed and the actual temperature.

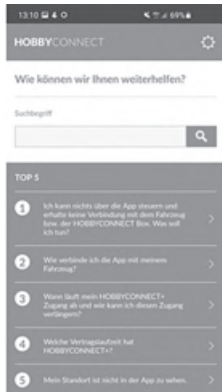

## Info overview

## Info overview

Use the search bar in the Info overview to enter different terms for Hobby-Connect.

If there is information on such a term in the system, it will come up when you click on Enter.

Furthermore, FAQs on HobbyConnect are answered in the Info overview.

The HobbyConnect system is continuously being further developed and, depending on how the vehicle has been equipped, further functions added.


Should you have any questions regarding HobbyConnect please speak to your dealer or contact [support@hobbyconnect.se](mailto:support@hobbyconnect.se)

**The HobbyConnect-App is available in the following countries:**



### Possible errors

| Possible errors                                                               | Suggested solution                                                                    | Other                                             |
|-------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------|
| The app cannot be found in the store.                                         | Check the settings on the device; write HobbyConnect as one word and not two.         | Check the app settings in the respective country. |
| App connection exists, but elements in the vehicle do not react to switching. | Check the power supply; if necessary, disconnect it briefly.                          | Contact your dealer.                              |
| Bluetooth connection does not work.                                           | Check the settings on your mobile device to ensure that Bluetooth has been activated. | If the distance to the vehicle is too great.      |

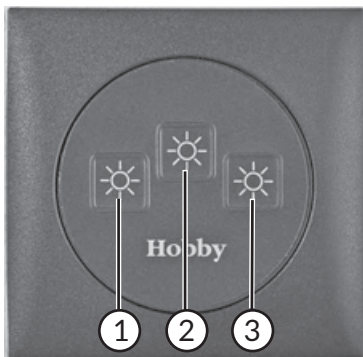

3-key control panel

### 7.3.2 Remote control

#### Remote control(s), bed


- Briefly press the key on each remote control by the bed to switch on the left light ①, right light ③. Depending on the model and design, key ② switches the ambient lighting in the sleeping area on and off. Press longer on the key to regulate how brightly you want the lights to shine. The brightness you set will be saved; when the lights are switched on again, the brightness you originally set will also be switched on again.



Washroom switch

#### Remote control, washroom

- Briefly press the key to switch the light in the washroom (and in the separate shower, if there is one) on or off.

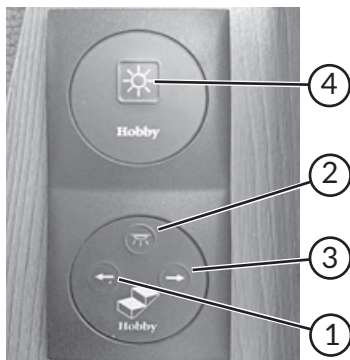

Switch for step tread and children's light switch for ceiling light

### Remote control(s), entrance

These remote control functions work even if the functions of the main switch have been deactivated on the control panel. The remote control controls the electric entrance step.

- Press the button ① to fold the step in; press it ③ again to slide the step back out.
- Briefly press the key ② to switch on the entrance light (not while the motor is running).
- Briefly press the key ④ to switch on the ceiling light (not available in the **ONTOUR C 680 GE, C 700 GQ, T 710 GE models**).



### Remote control for kitchen

- Briefly press the left button to switch on the kitchen light.
- Briefly press the right button to switch on the ceiling light.



Key assignments may vary, depending on the model. In the **ONTOUR C 680 GE, C 700 GQ and T 710 GE** models, the remote control for the kitchen is located above the input for the remote control.

## 7.4 Smart-Trailer-System\*

The Smart Trailer System consists of the sensor modules E-Level and E-Gas Level (scope of delivery: E Gas Level for one gas bottle). The E-Trailer app on your smartphone can be used to level the vehicle and to check the filling levels of the gas bottles at any time.



E-Connect

The Smart Trailer System is based on the E-Connect app. It enables the sensor modules to connect to the app on your smartphone. The sensor modules send measured values via Bluetooth to the E-Connect app, which processes them and then forwards them to the E-Trailer app.



Levelling the vehicle and gas level indicator via E-Trailer app

To use the Smart Trailer System, please install the E-Trailer app on your mobile device.



Scanning the QR code



### E-Level

The E-Level sensor module can be used to level the vehicle. The Smart Trailer app shows whether the motor home is in a level position.

- Activate the Bluetooth function on your smartphone.
- Open the app.
- Add the E-Level module to the app by scanning the QR code which is provided.
- Open the app section of the E-Level (see illustration on the left)



Error message on E-Level

Warning messages are displayed in the app section if a measured value deviates from the default value.



When the Smart Trailer System is operated for the first time, the vehicle must be levelled once.



E-Gas Level sensor

### E-Gas Level

The E-Gas Level sensor module is used to monitor the gas level indicator. The module uses a magnetic sensor, so it can easily be attached underneath any steel gas bottle.

Scanning  
the QR code

- Activate the Bluetooth function on your smartphone.
- Open the app.
- Add the E-Gas Level module to the app by scanning the QR code which is provided.



- Open the app section of the E-Gas Level (see illustration on the left)

Filling level  
indicator

The filling level of the gas bottle is displayed in the app section.



The system can be supplemented with further sensors. Please speak to a dealer about this.



## 7.5 Electric power supply

The central electrical system is installed underneath the front right passenger seat.




CEE external socket

Electricity for the motor home can be obtained from the following connections:

- 230V mains connection 50Hz
- via the generator when the motor is running
- via the ancillary battery

Everything that uses 12 V, such as lighting, water supply, etc., is available.

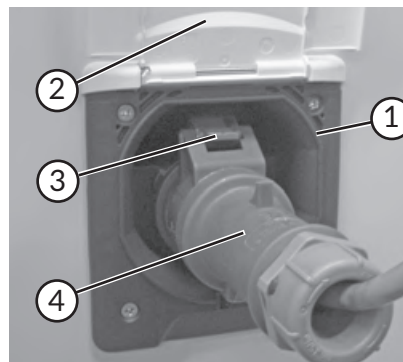

Connected 230 V feeder plug

### Supply via mains connection

The motor home is connected to the external 230V mains by means of the CEE external socket (1) located on the side wall.

#### To connect the CEE feeder plug

- Grasp the bottom of the cover flap of the CEE external socket (2) and flip it up (see Chapter 5.2 Cover Flaps).
- Completely unwind the connector cable.
- Open the cap of the CEE feeder plug (3) by pulling it up in a 90° angle.
- Insert the plug (4) until it locks into place.




The motor home's engine must be turned off before the 230V mains connection is hooked up.

**To disconnect the electric connection:**

- Remove the CEE feeder plug ④.
- Press the cover flap ② of the external socket down until it clicks into place.



Only plugs and cords that comply with CEE standards may be used.

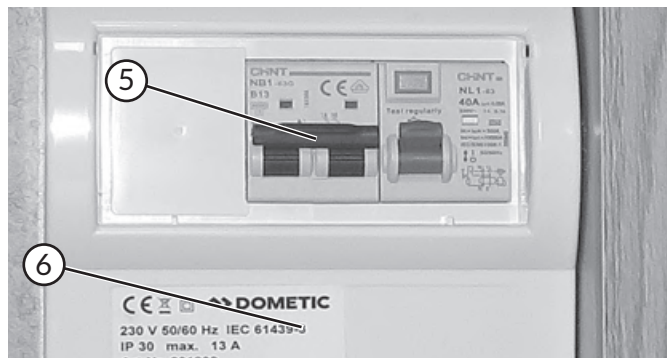

Automatic circuit breaker with Fi ('fast interrupt') switch

**Fuse protection for the 230V-system**

The 230V-system is protected by a two-pole 13A automatic circuit breaker ⑥, which is located either by the refrigerator, the clothes cupboard or the bed.


**Rules for the mains connection**

- Use only a 3 x 2.5 mm<sup>2</sup> cable with a maximum length of 25 m, a CEE plug and connector to connect the motor home to an external 230V mains.
- After the mains connection has been plugged in, both the modular and the vehicle battery will automatically be charged by the battery charger in the motor home (even if the Control Panel has not been switched on).



When obtaining electricity via a cable drum, this **must** be completely unwound, as otherwise induction may cause the cable to heat up, which could lead to burning.  
(Provided there is no protection against overheating)

- The 230V mains connection in the motor home has been designed for a total power consumption of 3000W. If additional devices requiring electricity are connected, such as a water heater, etc., you must ensure that this electric power value is not exceeded, taking other electrical equipment in use, such as the refrigerator, heating, etc., into account.

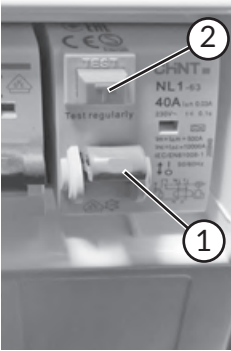

Fi switch and test button

## Residual current device

The standard version of your vehicle is equipped with a residual current device that will interrupt the electric circuit in case of a possible residual current. Should there be a malfunction, the passenger circuit breaker opens the entire 230V circuit.



Repairs must not be carried out on the residual current device.

A residual current device does not guarantee any protection against the danger from an electric shock.

It does not protect against possible electrical accidents.



The tripping time for the residual current device (RCD) with a residual current of 30mA is less than 0.1 seconds.

After putting the electric system into operation, the function of the residual current device must be checked. After voltage has been applied to the switch ① and it is on (set to I-ON) it must set off when you press the test button ②.

The rocker switch ⑤ jumps down; after it has successfully been checked it must be switched back up to the "On" setting.

This check should be carried out at least once a month to ensure that the residual current device functions perfectly in case there should be a fault in the current.



When the residual current device has been set off (even when testing) the customised settings in all mains-operated devices are lost and the default settings made by the manufacturer will apply again.

If the automatic circuit breaker has gone off (other than if you have switched it) you must wait a short while before switching it on again.

- If the automatic circuit breaker remains active, there was only an overload.
- If the automatic circuit breaker goes off abruptly again, there is either a short circuit or an earth fault.

Devices that set off during operation show that there is a defect; they must be checked and/or repaired by an electrical engineering specialist.



Switching it back on again and again will do no good. The automatic circuit breaker also goes off when the rocker switch is held firmly in place.

## Operation when the motor is running

The combined charger/charge booster is activated as soon as the engine is running and charges the ancillary battery. Therefore, the dynamo charges both batteries. If the vehicle engine is issued, both batteries are disconnected from each other again. In this way, the starter battery cannot be discharged by equipment in the motor home.



Always turn the motor off before hooking up the 230V mains connection via the CEE external socket.

The 12V supply for the refrigerator only functions when you are driving. If the motor has stopped, the 12V operation of the refrigerator is automatically turned off again.



To optimally charge a discharged modular battery while driving, as many 12V electrical devices as possible should be switched off.

### Checklist

- Turn off the motor.
- Switch on the 12V master switch.
- Turn off all equipment that uses 12V.
- Start the motor.

The voltage of the motor home battery must rise if

- the engine speed is above the idling speed,
- the vehicle's battery is not completely discharged.

The following points must be checked if the battery is not charged via the alternator:

- Is the 50A fuse in the supply line to the ancillary battery near the motor battery functioning properly?
- Is the 40A fuse in the supply line to the combined device OK?
- Is the “Motor running” signal on the input module on?
- Is the combined charger/charge booster SMP 439-10 active?

## Operation via ancillary battery



- Only accumulator batteries with bound electrolytes (gel or dual AGM/lithium batteries) may be installed in those positions specified by the manufacturer.
- The installed gel battery may not be opened.
- When changing ancillary batteries, use only batteries of the same make and capacity (**see Chapter 7.3.1 Battery status**).
- The temperature of the battery must not exceed 50° C. If the battery is overheated, it cannot be charged.
- Before disconnecting or connecting the auxiliary battery, switch off the motor, 230V supply, 12V supply as well as all electrical devices.
- Before replacing fuses, the combined charger/charge booster must first be de-energised.
- Before replacing fuses you must first de-energise the charger.
- Fuses may only be replaced by fuses with the same fuse protection value.



Vehicle's electric system underneath the front right seat

### Position of the 95Ah Dual AGM ancillary battery

The ancillary battery is mounted in the front right passenger seat console. The foot of the battery is attached to a base plate. The seat, including the rotating assembly, must be dismantled in order to subsequently fit or change the batteries.



The optional additional battery is mounted on a base plate in the front left passenger seat console.

If the lithium battery 100/150 Ah\* has been selected as an optional extra, it replaces the 95 Ah Dual AGM battery.



Central control panel with QR code

### Lithium battery\*

In the HobbyConnect app, the data for the lithium battery can be found by clicking on the "**Batteries**" icon.

The barcode ① with the Bluetooth pin for controlling the lithium battery can be found on the cover of the central control.


Further information on the lithium battery can be found on the package insert or on the manufacturer's homepage.

## Operating and charging the ancillary battery

If the motor home is not connected to the 230V mains supply, the ancillary battery will supply the electrical system with 12V DC voltage. Since the battery only has a limited capacity, the electrical devices should not be operated for a longer period of time without charging the battery or connecting the camper to the 230V mains connection. Some electrical devices continuously use standby current from the ancillary battery. This discharges the ancillary battery.

The battery is charged from three possible input sources:

- with the combined charger/charge booster via the generator when the engine is running.
- via the combined charger/charge booster (only via 230V power feed).
- if available, via a solar panel\*

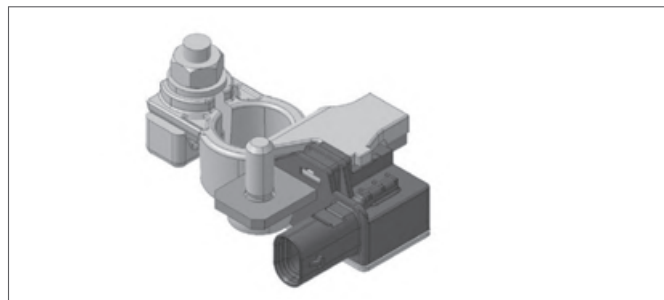

Intelligent Battery Sensor (IBS)

## Battery Sensor

An Intelligent Battery Sensor (IBS) has been connected to the battery terminal. It measures and monitors the actual current, actual voltage and temperature of the batteries in a highly precise manner. Normally, the battery sensors are calibrated automatically.



If there is a loss of power in the battery sensor (voltage absent), you must recalibrate.

It is possible to determine the remaining operating time of the battery based on the current consumption. The IBS ensures that the battery will be changed in good time and assists in providing active energy management so that the performance requirements of the different electrical devices can be coordinated with the charging of the battery.

The charge state of the battery is shown on the control panel display; the remaining time until discharge can be seen on the HobbyConnect app. Charging is carried out gently in accordance with the steady-state principle by an "intelligent" charger.



The battery sensor is protected by a 10A.

- Always charge the ancillary battery for at least 24 hours before each journey, directly after each journey and before you take the motor home temporarily out of service.
  - Before each journey, please check that the battery is charged (**see 7.3 Control panel**). If necessary, connect it to the mains to start charging the battery.
  - The battery is only charged if it has a minimum voltage of 8V.
  - Use every opportunity during your journey to charge the battery.
- If the vehicle is not in use for a longer period of time, the battery should be disconnected after it has been optimally charged by switching the battery circuit breaker on.

### Manually calibrating the sensor

The system can be calibrated manually if no electrical devices have been switched on in 12V operation.

Opening the battery circuit breaker switches off the electronics in the superstructure (see item: battery circuit breaker). Now the sensor can calibrate itself. This process takes approx. three hours.



During calibration, the vehicle must not be hooked up to the 230V mains (the charger must not charge the battery during calibration).



Battery circuit breaker

### Position of the battery circuit breaker

The battery circuit breaker is located directly on the outer wall by the front right passenger seat.

A circuit breaker has been installed to protect the modular battery from being exhaustively discharged when the motor home is not being used. When the switch is opened, the modular battery is completely disconnected from the 12V mains.

**"Off" position = disconnected from 12V mains.**

The combined charger/charge booster is directly connected to the ancillary battery so that the ancillary battery can be charged via the 230V mains supply even if the battery circuit breaker is switched on.



The battery sensor continues to be activated even if the battery circuit breaker has been opened.

To keep the batteries charged even when not in use, it is mandatory that the vehicle be connected to a 230V mains connection every 6 weeks. Recharging should be carried out for at least 24 hours.




The battery circuit breaker must be on while driving or using the vehicle.

When the battery circuit breaker is open, the electrical entrance step will **not** retract automatically.



If the battery circuit breaker has been switched on for a longer period of time, you may lose your customised radio settings. These settings must then be entered again. The radio device does not work when the battery circuit breaker is on.



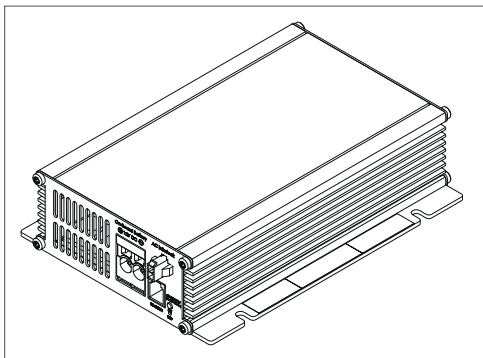

Combined charger/charge booster

### Combined charger/charge booster SMP 439-10

This is a combined charging device which enables independent charging of the ancillary battery and the starter battery with a 230V mains connection,

whereby the ancillary battery has a preset charging priority. The starter battery is also effectively charged according to a preset charging curve.

The maximum charging current with a 230V mains connection is 25A in total.

When driving, the device works as a charge booster and serves to optimally charge the ancillary battery while driving.

Due to an integrated step-down/step-up regulator, the charging voltage is independent of the voltage fluctuations of the generator and provides a high charging current up to a maximum of 30A. It operates fully automatically.

During this process, the existing cooling system runs passively; the fan is not active.

Should the battery sensor measure a battery temperature of over 50°C, the control will pause the charging process to prevent the battery from being overcharged.



The combined charging device can be accessed from the back of the front right passenger seat.


Use only those battery types as living area batteries which support the combined charging device.

When the battery type is changed: have the combined charger device re-parameterized at a service centre.

If the Super B 100/150 Ah\* lithium battery is connected to the CI bus and if it has been correctly recognized by the system, no settings need to be made regarding the battery type, battery capacity or charging characteristic curve.

The charging characteristic curve must be set manually directly on the combined charging device (this is relevant for redundant operation in the event of failure or malfunction of the CI bus system).

If required, please speak to an authorised dealer about this.

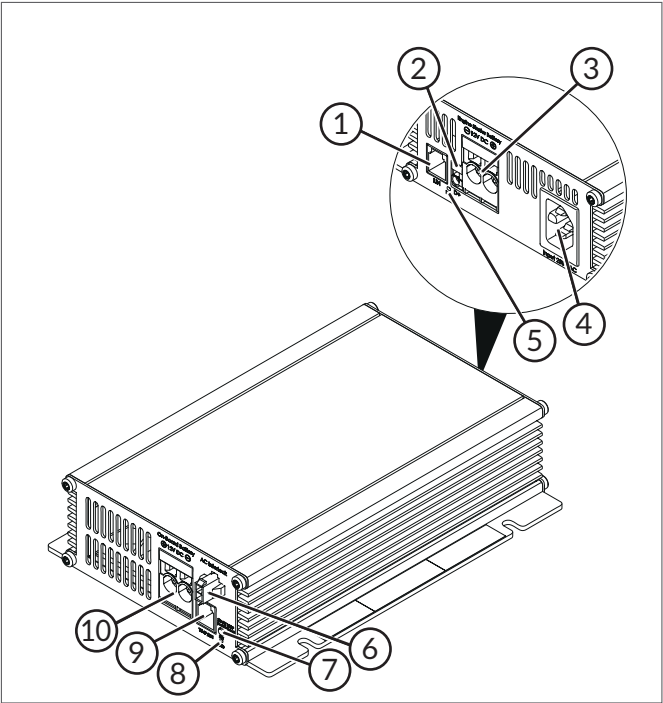

Connections for the combined charger/charge booster

- ① Local interconnected network (LIN) bus socket
- ② D+ socket
- ③ Starting battery socket
- ④ 230 V input socket
- ⑤ Starting battery LED indicator
- ⑥ AC interlock socket
- ⑦ Jump starter button and house battery type selector button
- ⑧ House battery LED indicator
- ⑨ LIN bus and temperature sensor socket
- ⑩ House battery socket

| Number of flashes | Description                                      |
|-------------------|--------------------------------------------------|
| 1                 | The lead acid battery type has been selected.    |
| 2                 | The AGM/lead gel battery type has been selected. |
| 3                 | The LiFePo4 battery type has been selected.      |
| 4                 | The power supply has been selected.              |

**1: I phase (Constant current phase)**

At the beginning of the charging process, the battery is charged with a constant current (100 % charge current) until the battery voltage reaches 14V. The charging current decreases when the battery has reached this charging level. For safety reasons the I phase is terminated after a maximum of 18 h (in case of battery cell defects or similar)

The corresponding LED indicator of the battery that is charged flashes yellow.

**2: U0 phase (Trickle charging)**

Now the trickle charging process (U0 phase) begins, where the duration depends on the battery. The voltage remains constant (U0). Then the main charging phase begins when the battery is fully charged.

Once the battery is completely charged, or the charging current is below 6 % of the rated charging current for 15 min, the U0 phase has finished.

The corresponding LED flashes yellow.

**3: U phase (Float)**

After the U0 phase, the battery charger switches to conservation charging function (U phase). If DC loads are connected, they are powered by the device. Only if the power required exceeds the capacity of the device, this surplus power is provided by the battery.

The corresponding LED is lit green.

**4: U phase (Float)**

The battery is then discharged until the device re-enters the I phase and charges the battery.

The corresponding LED is lit green.

**5: I phase (Constant current phase)**

See 1: I phase (Constant current phase).

**6: U0 phase (Discharging)**

See 2: U0 phase (Trickle charging).

**7: U phase (Float)**

See 3: U phase (Float).

**8: Reconditioning**

Every 12 days, the charger switches back to the U phase for a short time (max. 85 min) in order to recondition the battery (see 3: U phase (Float)). This prevents any fatigue phenomena such as electrolyte stratification.

## 7.6 Electrical system

When the motor home is connected to the 230V mains supply, the battery is automatically charged by the charger.


All 12V electrical devices are supplied directly by the ancillary battery. In 230V mains operation, they are supplied automatically by the battery charger.

All of the lamps in the motor home use 12V LED lights. Only large electrical devices such as the Combi E heating\*, air-conditioning system\*, absorber refrigerator which run on 230V, etc., use 230V.



Assignment of fuses

### Assignment of fuses

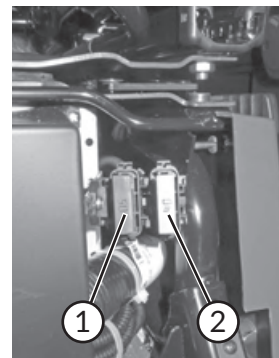

Main fuse for ancillary battery

The fuses for the individual internal electric circuits are located in the central control.




In some models, there may be slight deviations in this assignment.



Only replace defect fuses if you know what caused the fuse to blow and have fixed this.


- ① 50A main fuse for the ancillary battery
- ② 40A main fuse for the combined charger/charge booster

# Assignment of connections for central control

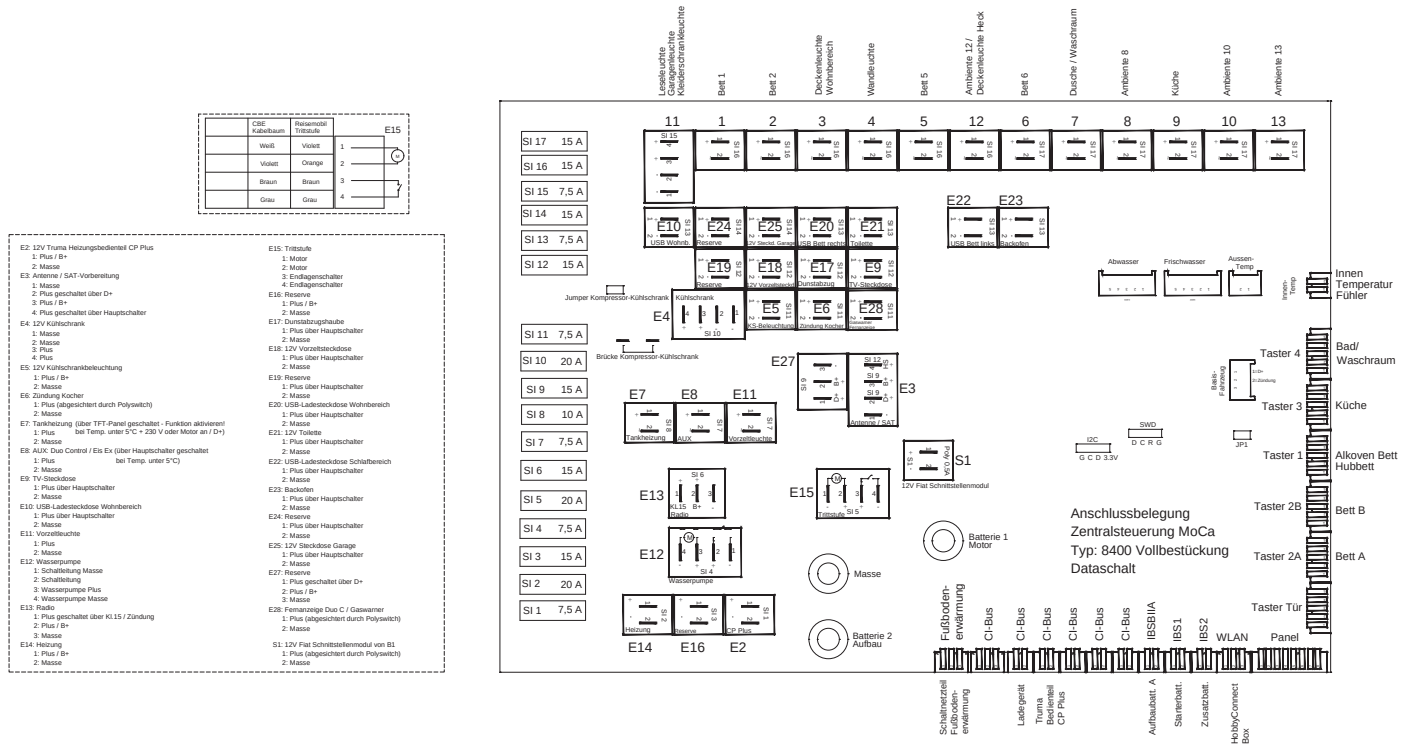


| CBE<br>Kabelbaum | Resonanz<br>Trittschalle |   |
|------------------|--------------------------|---|
| Weiß             | Violett                  | 1 |
| Violett          | Orange                   | 2 |
| Braun            | Braun                    | 3 |
| Grün             | Grün                     | 4 |

|                                                                                                                                           |                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| E2: 12V Truma Heizungsbedientast CP Plus<br>1: Plus / B+<br>2: Masse                                                                      | E15: Trittschalle<br>1: Motor<br>2: Motor                                               |
| E3: Antenne / SAT-Vorbereitung<br>1: Masse<br>2: Plus geschaltet über D+<br>3: Plus / B+<br>4: Plus geschaltet über Hauptschalter         | E16: Reserve<br>1: Plus / B+<br>2: Masse                                                |
| E4: 12V Kühlschrank<br>1: Masse<br>2: Masse<br>3: Plus                                                                                    | E17: Dunstabzugshaube<br>1: Plus über Hauptschalter<br>2: Masse                         |
| E5: 12V Kühlschrankbeleuchtung<br>1: Plus / B+<br>2: Masse                                                                                | E18: 12V Vorzeltleuchte<br>1: Plus über Hauptschalter<br>2: Masse                       |
| E6: Zündung Kocher<br>1: Plus (geschaltet durch Polyswitch)<br>2: Masse                                                                   | E19: Reserve<br>1: Plus über Hauptschalter<br>2: Masse                                  |
| E7: Tankheizung (über TFT-Panel geschaltet - Funktion aktivieren)<br>1: Plus - bei Temp. unter 0°C > 230 V oder Motor an (D+)<br>2: Masse | E20: USB-Ladeleuchte Wohnbereich<br>1: Plus über Hauptschalter<br>2: Masse              |
| E8: AUX Duo Control / Ex Ex (über Hauptschalter Funktion aktivieren)<br>1: Plus<br>2: Masse                                               | E21: 12V Toilette<br>1: Plus über Hauptschalter<br>2: Masse                             |
| E9: TV-Steckdose<br>1: Plus über Hauptschalter<br>2: Masse                                                                                | E22: USB-Ladeleuchte Schläferbereich<br>1: Plus über Hauptschalter<br>2: Masse          |
| E10: USB-Ladeleuchte Wohnbereich<br>1: Plus über Hauptschalter<br>2: Masse                                                                | E23: Backofen<br>1: Plus über Hauptschalter<br>2: Masse                                 |
| E11: Vorzeltleuchte<br>1: Plus<br>2: Masse                                                                                                | E24: Reserve<br>1: Plus über Hauptschalter<br>2: Masse                                  |
| E12: Wasserpumpe<br>1: Schaltung Masse<br>2: Schaltung<br>3: Wasserpumpe Plus<br>4: Wasserpumpe Masse                                     | E25: 12V Stecker Garage<br>1: Masse<br>2: Masse                                         |
| E13: Radio<br>1: Plus geschaltet über K1 15 / Zündung<br>2: Plus / B+<br>3: Masse                                                         | E27: Reserve<br>1: Plus geschaltet über D+<br>2: Plus / B+<br>3: Masse                  |
| E14: Heizung<br>1: Plus / B+<br>2: Masse                                                                                                  | E28: Fernanzeige Duo C (Gasometer)<br>1: Plus (geschaltet durch Polyswitch)<br>2: Masse |

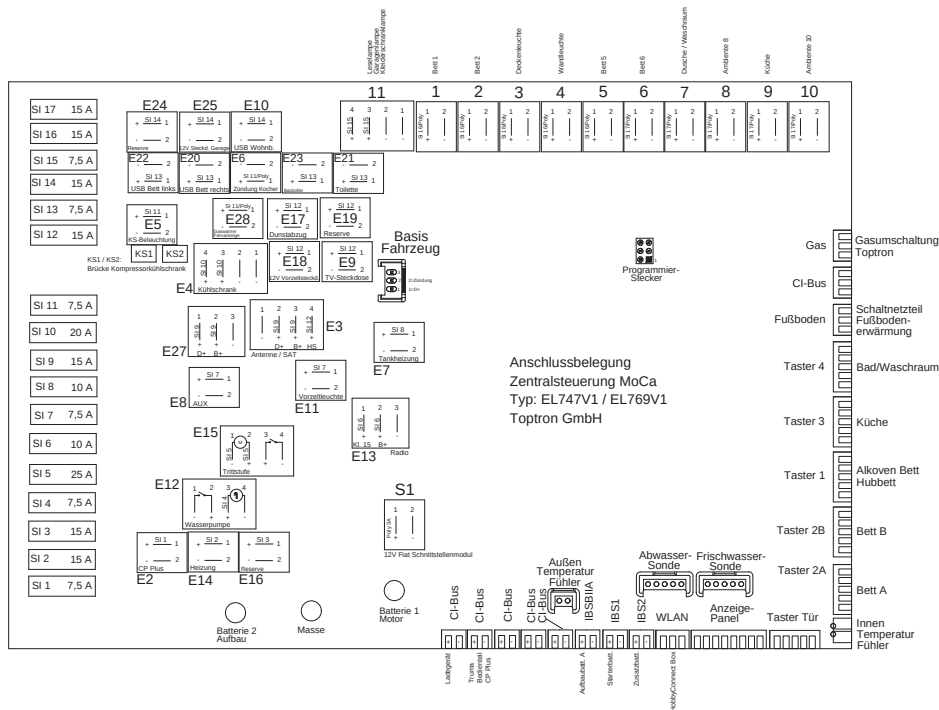

Model-specific variations may occur.

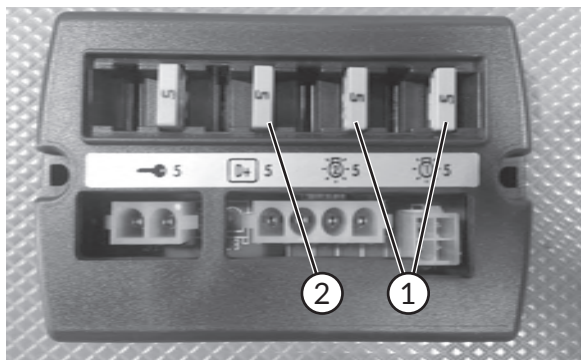

Interface module

## Interface module

The interface module protects the superstructure's outside lights: the right and left side marker lights as well as the front clearance lights (① 5 Amp fuse). In addition, the module secures the D+ signal for the charger booster ②.

### Position of the interface module

B-pillar on the right-hand side in the direction of traffic, behind the plastic casing in the lower section.



Sockets inside the vehicle

## Sockets inside the vehicle



Sockets located inside the vehicle may not be used for devices that are operated outside the vehicle.



USB twin charger socket

### USB twin charger socket

These connections are suitable only for charging USB-compatible devices. Model-specific, twin charger sockets have a USB-A and a USB-C connection.

The 5V USB connection is supplied with power from the 12V electric system.



In all motorhomes, the USB twin sockets are part of the standard equipment in the living area. In the sleeping area, they are either part of the standard equipment or optional (model-specific).



TV connections

## 7.7 Connections


### TV unit

The installation area for the flat-screen TV differs from model to model.

The required connections can be found right next to this space, possibly in a cupboard.

The cables between the antenna and, for example, the external socket in the outer tent must be fitted with plugs (F plug or coax plug) and plugged together. If several antenna sockets are to be connected to one antenna, an antenna splitter can be used to avoid having to continuously change the connections.



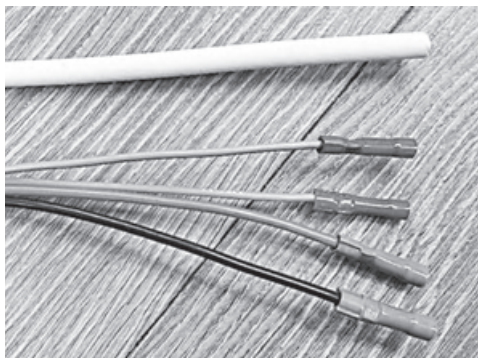

SAT cable

### SAT-Cabel (E3)

All Hobby motor homes have been prepared to connect a satellite antenna. This is part of the standard equipment.

The following signals, which are already been connected at the factory to the central control system, are provided:

### Cable colours (E3):

- black** = mass
- red** = steady plus for ancillary battery B2
- grey** = D+ signal
- orange** = plus from ancillary battery B2 via main switch on control panel

## Installation position of the antenna and the preinstallation of the satellite cable

Wall cabinet above the foot of the bed on the left (in the direction of traffic)

**ONTOUR:** C 680 GE (F), T 710 GE

**PRESTIGE :** T 710 GE


**MAXIA:** T 710 GE, T 740 WE

At the top of the wardrobe (on the driver's side)

**ONTOUR:** T 700 F, T 700 FH (L), C 700 GQ

**ONTOUR Alkoven:** A 720 GFM

**MAXIA:** T 740 WF

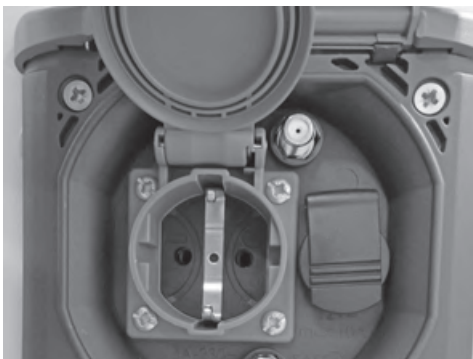

External socket and antenna terminal in the outer tent

### **12V-/230V external socket incl. coaxial-connection\***

As an option, your motor home also has a combined external socket with a coaxial -connection in the outer tent. This can be used, for example, to set up a TV in the outer tent. Depending on how you wire it, the integrated antenna terminal can be used as either an input or an output socket.

The cables laid for the external socket also terminate at the same point as the cables for setting up for satellite operation (see page 129).



Preinstallation of the cable for the solar system

### **Preparation for the solar system**

#### **Solar cable**

Preparation for the solar system includes an electric cable 2 x 6.0mm<sup>2</sup> which was preinstalled in the vehicle at the factory. The forward end is placed beneath the right seat console/passenger seat between the first habitation battery and the central control panel. At the rear end of the superstructure, the cable can be found near the roof in the following positions:

Installation position to prepare for the solar system

Wall cabinet above the foot of the bed on the left (in the direction of traffic)

**ONTOUR:** C 680 GE (F), T 710 GE

**PRESTIGE :** T 710 GE

**MAXIA:** T 710 GE, T 740 WE

On the left of the wardrobe, at the top (in the direction of traffic)

**ONTOUR:** T 700 F, T 700 FH (L), C 700 GQ

**ONTOUR Alkoven:** A 720 GFM

**MAXIA:** T 740 WF

There is a label: "Preparation for solar" on the ends of the cable.

Contact your dealer if you wish to have the cable connected.



Distributor on the roof



Connecting cables / Extensions (to be found among the vehicle's accessories)

## Preparation for the roof air conditioning system

Installation position to prepare for the roof air conditioning system

Wall cabinet above the foot of the bed on the left (in the direction of traffic)

**ONTOUR:** C 680 GE (F), T 710 GE

**PRESTIGE :** T 710 GE

**MAXIA:** T 710 GE, T 740 WE

On the left of the wardrobe, at the top (in the direction of traffic)

**ONTOUR:** T 700 F, T 700 FH (L), C 700 GQ

**ONTOUR Alkoven:** A 720 GFM

**MAXIA:** T 740 WF



Clothes cupboard light



Garage light on ONTOUR

### Lighting in clothes cupboard/over children's bed/Garage lighting

These lights can only be switched on manually.

## 7.8 Special Lights


The switches for the lights described here are located directly on the lights themselves; they are powered by the master switch function on the Control Panel.

### Seating arrangement

The reading lights can also be switched on using the control panel (S.88).



Activate the main switch on the control panel to control the lights via the separate switch.

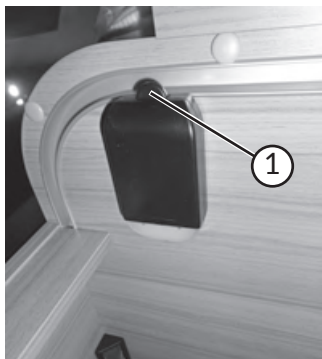


Lighting in clothes cupboard


#### Lighting in clothes cupboard (modelspecific)

The wardrobe light switches on automatically as soon as the cupboard door is opened and, thus, the sliding mechanism ① is activated. When the door is shut, the light is automatically switched off.

Check the battery for the clothes cupboard light, should it fail to switch on when the cupboard door is opened.

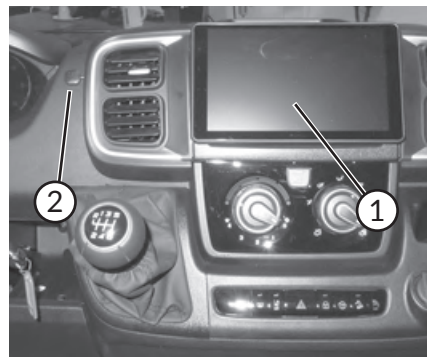

PIONEER media system

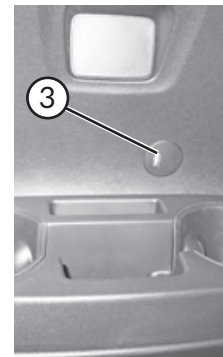

USB connection

### 7.9 PIONEER media system 9" touch screen

Your motor home has been equipped with a Pioneer media centre incl. Apple Car Play/Android Car ① and an integrated rear view camera. There is a switch ② close to the media centre. It changes the perspective of the rear view camera.


Different perspectives are possible. Selected the desired perspective and exit from the setting via the cross (top right at the edge of the screen). The setting is then saved and the desired perspective is shown when the gear is put into reverse.



- There is no offline navigation! Only online navigation with a separate mobile end device is possible!
- The USB connection ③ for the Pioneer media centre is located on the vehicle's console at the height of the cup holder.
- Read the device manufacturer's operating instructions carefully before initial operation.



- Do not allow yourself to be distracted by this device as this may cause accidents.
- Never operate the device while driving.
- Check the display panel only when the traffic situation is safe for doing so.

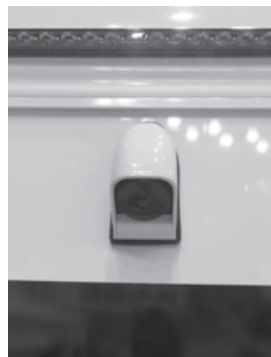

Rear view camera

## Reverse drive video system



For further information, please refer to the operating instructions for the base vehicle or those provided by the manufacturer of the device.

## 7.10 Subsequently installed devices

Subsequently installed electronic devices that can be used while driving (e.g. mobile phones, wireless equipment, radios, cameras for driving in reverse, navigation equipment, or others) must meet all of the requirements for electromagnetic compatibility. Such equipment must have been approved in accordance with ECE 10, because otherwise it may cause interference with the electronic systems already installed in the motor home.

A CE mark is mandatory for devices that have been subsequently installed and which cannot be used while driving.

## Chapter 8: Water

### 8.1 General



We recommend that you inspect any water you have left in the tank, this is very critical before using the water again.



- Always use water that is of drinkable quality when working with food. This also applies for washing your hands or objects that come into contact with food.
- In order to ensure excellent water quality, water should be taken directly from the public drinking water system. Please find out in advance about the local water quality.
- Garden hoses, watering cans and similar materials unsuitable for drinking water should never be used to fill the mobile system.
- If the motor home has not been used for a longer period of time, the entire water system must be emptied completely.
- After longer periods of stagnation, the water system must be flushed thoroughly before being used. Should you discover impurities, the material should be disinfected using suitable agents that have been approved for such measures.



Submersible pump with check valve

### 8.2 Water supply

#### Function of the water supply

Fresh water is supplied to the heating system, the kitchen and toilette via a submersible pump. The submersible pump operates electrically:

- via the ancillary battery,
- when the motor home is connected to the 230V mains via the power supply.

#### The following applies for the submersible pump:

- The submersible pump is only suitable for water.
- The submersible pump can briefly tolerate temperatures of up to 60° C.
- Avoid dry running.




- Protect the pump from freezing.
- Hard blows or hits as well as very dirty water can destroy the pump.



The immersion pump requires no maintenance.

The submersible pump must be activated by means of the control panel. It switches itself on automatically when the water taps are opened.

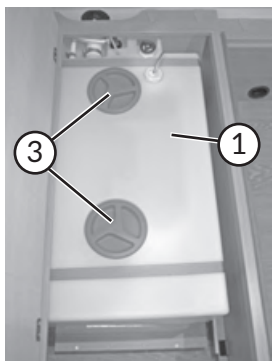

Fresh water tank


### Fresh water tank

The tank ① has a volume of 100 l and is located in the seating arrangement.

The tank is filled with fresh water by means of the filler neck ② on the side wall.

The neck for filling up fresh water is marked by a blue cap and a picture of a water tap on the upper edge of the frame. The screw cap is opened and closed by means of the enclosed key for exterior flap locks and the door of the structure.

If you fill too much water into the tank, the excess will run out at the filler neck. If the 10 litre function (manoeuvring limitation) has been activated, the water will come out through the opening beneath the vehicle.

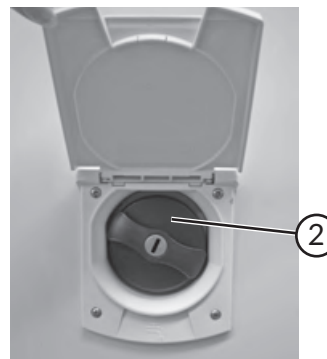

Filler neck for the fresh water tank

### Opening

- Use key to unlock.
- Give the blue cap a strong turn counter-clockwise and remove it.

### Closing

- Put the blue cap back on and turn it clockwise to shut it.
- Use key to lock.



The water in the tank should be replaced regularly (see Chap. 12). Check the red service lids ③ p. 137 regularly; they may become loose if the fresh water tank is filled often.

### Filling the water system

- Place the motor home in a horizontal position.
- Shut all of the water taps.
- Switch on the main switch on the control panel.
- Close the outlet valve (FrostControl) on the boiler.
- Unlock the petrol cap and turn it counter-clockwise to open it.
- Fill the water tank using the fresh water filler neck.
- Activates the water pump on the control panel.
- Turn all of the water taps to „hot“ and open them. The water pump will be switched on.
- Leave the water taps open until the water flows out of the taps without any bubbles. This is the only way to ensure that the boiler will also be filled with water.
- Turn all of the taps to „cold“ and leave them open. The cold water pipes will be filled with water.
- Leave the water taps open until the water flows out of the fixtures without any bubbles.

- Shut all of the water taps.
- Shut the filler neck.



Use the control panel to check the amount of water in the fresh water tank.



Never introduce anti-freeze or other chemicals into the water system.

**This can be poisonous!**

When operating during winter ensure that the fresh water tank is sufficiently heated.

### To remove water

- The water will be mixed to the desired temperature according to the position of the pre-mixing unit.

### Hot water supply

Hot water is supplied by means of the hot-air heating system with its integrated hot-water boiler (see also Chapter 10.2.1); the setting options are described under “Changing the hot water temperature”.

The boiler will automatically empty itself via a safety or outlet valve if there is danger of frost (see also Frost Control).



Frost Control


## Position of the Frost Control valve

The Frost Control valve is always located directly by the model-specific place of installation for the hot-air heating system.



The non-electric safety or drain valve will automatically open at temperatures under approx. 3°C and drain the boiler contents via a drain nozzle.

If the cold water system is operated without the boiler the boiler tank will still fill with water. In order to avoid frost damage the boiler must be drained via the drain valve, even when not in use.

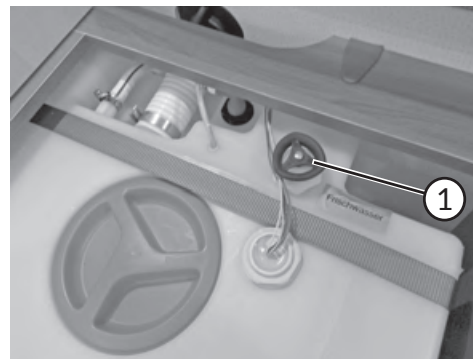

Outlet valve for fresh water tank


## Emptying the fresh water tank

The outlet valve is located directly on the fresh water tank.

- To empty the fresh water tank, turn the rotating wheel ① to the left to open.



Always empty the fresh water tank completely if the heating has not been switched on and the motor home is not in use, and especially if there is frost.

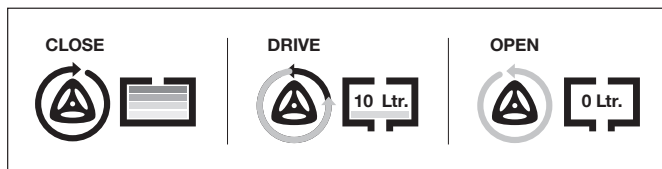


### Filling the fresh water tank before driving


The basic equipment indicated in **Chapter 14 Technical Data** for the motor home was calculated based on the fresh water tank holding 10% of a full tank, i.e. 10 litres.

Before and during every journey, we recommend that the fresh water supply be restricted to 10 litres, if necessary by draining off water via the outlet valve. Open the rotating wheel ① (p. 139) with a 3/4 turn to find out how much additional fresh water you can take on board.

If there is sufficient capacity for additional loads, the tank can be filled further.

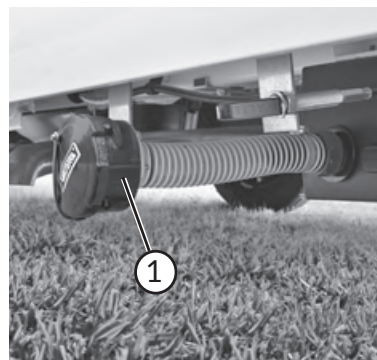

Waste water opening

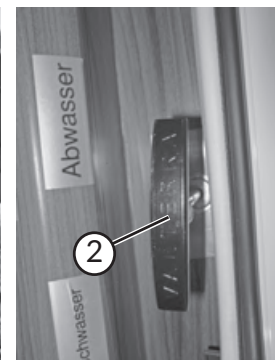

Valve for waste water opening

### Emptying the waste water tank

- The waste water opening is located on the left side underneath the vehicle.
- The valve ② for opening the waste water opening is located in a protected position in the gas-bottle container or directly by the opening itself.
- Unscrew the lid ①, open the valve ② and allow the waste water to run off.
- When the waste water has drained out completely push the slide valve back in and screw the cap back on.



The lid ① slightly sucked into the opening. Therefore, never close the lid too tightly.

### Emptying the water system

- Use the control panel or touch control panel (see **Chapter 7.3 Control panel**) to switch off the electricity for the water pump by pressing the water pump switch or the main switch (for approx. 4 seconds).
- Open all of the water taps to the centre setting.
- Hang up the adjustable shower head in the shower.
- Open all of the outlet valves (including the FrostControl).
- Unscrew the cap on the cleaning port of the fresh water tank ③ (p. 137).
- Remove the lid of the water tank. Take out the water pump and hold it up until the water pipes have emptied completely.
- Check whether the tank, boiler, faucets and pipes have emptied completely. If necessary, blow out any remaining water in the pipes using compressed air (max. 0.5 bar).
- Clean the tanks and rinse them thoroughly.
- Re-insert the the water pump in the fresh water tank and close the openings.
- Leave the faucets and the outlet valves open.
- Allow the water system to dry for as long as possible.
- Do not forget to empty the toilet cassette.



If the vehicle is not being used and there is a danger of sub-zero temperatures be sure to drain the entire water system. Leave taps turn on in the middle position. Leave all drain valves open.



Only empty your waste water tank at the specially designated disposal points and never in open spaces! Generally, waste disposal stations can be found at rest facilities, camping grounds or petrol stations.

### Waste water tank

The waste water tank is integrated in the chassis; it is insulated.

After the heating system has been switched on on the control panel, the hot air is conducted to the waste water tank. This prevents the waste water from freezing in a light frost.




Do a small quantity of antifreeze agent (e.g. table salt) to the waste water tank if temperatures are significantly below freezing to prevent the waste water from freezing.

The waste water tank is not sufficiently protected against damage from frost when the vehicle is not in use. Therefore, if there is any danger of sub-zero temperatures empty the waste water tank completely.

Never pour boiling water down the sink. This can cause distortions and leaks in the waste water system. Always add cold water before pouring.

Use the control panel to check the amount of water in the waste water tank.

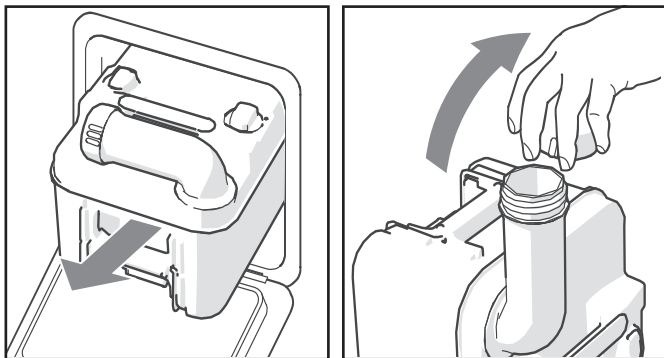

### 8.3 Toilet


The pivoting toilette consists of two parts: a fixed toilette and a removable waste tank. Before the toilet can be used, the waste tank must first be prepared as described below and then returned to its original position.

#### Preparing the waste tank

- Open the toilet flap (see 5.2 Toilet flap) and pull the holding bar up to remove the waste tank.



The waste tank can only be removed when the drain valve is closed.

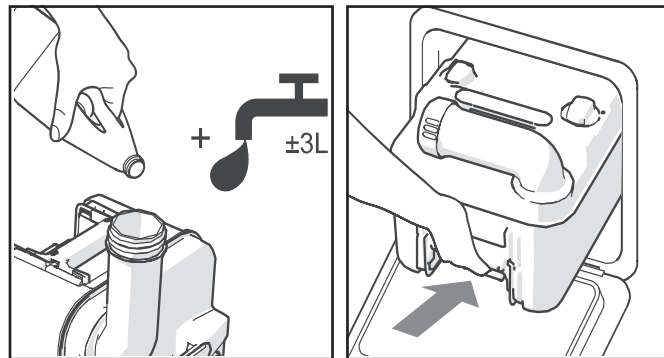

- Pull out the tank as far as possible, keeping it level.
- Slightly tip the waste tank and then pull it out completely.
- Set the waste tank in an upright position, turn the spout to the top and open it.



Use toilet fluids very sparingly. An overdose is no guarantee of preventing possible odours!

- Fill the waste tank with the correct amount of toilet fluids.
- Then add enough water to completely cover the bottom of the waste tank (approx. 3 liters).
- Shut the spout and turn it back to its original position.

- Push the waste tank back into position.
- Ensure that the holding bar secures the waste tank.
- Then shut the toilet cassette access door.



Never add sanitary liquids directly through the valve or into the toilet bowl, because this may damage the washer of the valve in the waste tank.

Always add liquids by pouring them through the spout.



Pivoting toilette



Filling level indicator

### Using the pivoting toilette



- Shut the lid of the toilette and use both hands to turn the bowl to the desired position (clockwise: no more than 90°; counter-clockwise: no more than 170°).
- Then open the cover plate by pulling the handle ① to the right.
- Press the flush ② for several seconds to flush the toilette.
- ③ Filling level indicator



The pivoting toilette can be used whether the cover plate is open or closed. Use only special toilet paper that is suitable for motor home toilets. Normal toilet paper can easily cause the toilet to clog.



The toilette is designed for a max. weight of 120 kg.

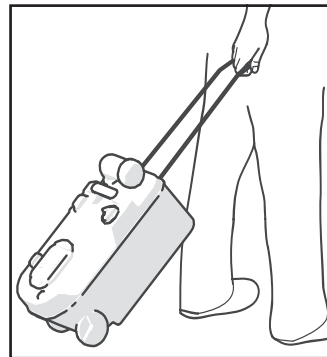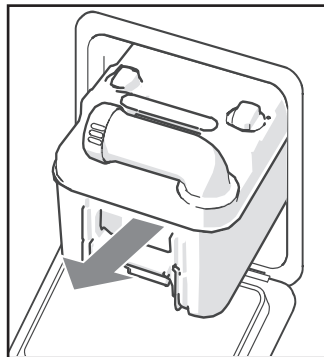

### Emptying the waste tank

The waste tank must be emptied no later than when the single-stage filling level indicator ③ lights up red. It is recommended that the tank is emptied before this.

- Open the toilet flap and pull the holding bar up to remove the waste tank.




The waste tank can only be removed when the drain valve is closed.



Only empty the waste tank at specially designated disposal points and never in open spaces!

- Pull the handle all the way out.



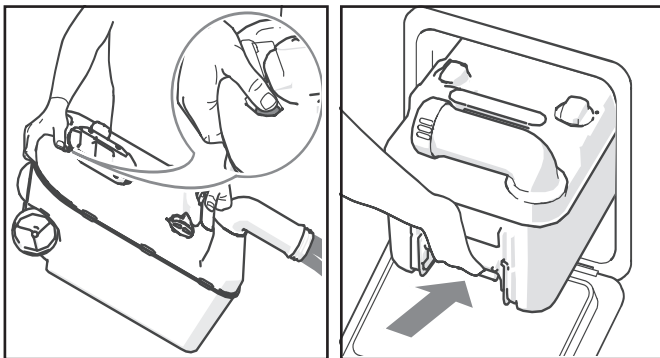

To empty the tank without spraying, press the vent button while you are emptying the contents of the tank. Only press the vent button when the drain tube is in a downward position!

Please refer also to the manufacturer's operating manual, included in this package.

To prevent damage by water to your vehicle, the waste tank should be no more than  $\frac{3}{4}$  full when driving. Otherwise, it may leak through the ventilation system.

- Take the waste tank to a designated disposal site.
- Set the waste tank in an upright position and turn the spout to the top.
- Remove the top on the spout.
- Hold the waste tank so that the spout points down.
- Press the ventilation button with your thumb and hold it down. The waste tank will drain itself.
- Flush the waste tank once with fresh water (approx. 5 liters). Do not forget to screw the cap back on to the emptying support.
- Return the waste tank to its storage position, ensuring that it is pushed in until the holding bar locks into place.
- Then shut the toilet cassette access door.

## Chapter 9: Gas

### 9.1 General safety rules when using LPG fittings



The operating pressure for gas is 30 mbar.



It is forbidden to operate gas devices while driving.

**Exception:**

Gas devices which have been released by the manufacturer may be operated in connection with a crash sensor\*, even when driving.

### Checking the gas fittings

- Before initial operation have the LPG fittings checked by an expert.
- The inspection of the gas system should be carried out regularly by a liquid gas expert in accordance with national regulations (annually in Great Britain). This must be confirmed on the certificate (in accordance with Form G 607 from the German Association of Gas and Water Experts (DVGW) and EN 1949).
- Regulator knobs, hoses and exhaust pipes must also be checked.
- The safety regulators and hose lines must be replaced at

least every 10 years; high-pressure hoses after 5 years (from the date they were manufactured. Should you discover tears, porous spots or similar defects in the hose, it must be replaced immediately.

- The operator is responsible for having checks carried out. This also applies for vehicles that have not been approved for driving on the road.



If you suspect that gas is leaking, take the following measures immediately:

- Close the stop valve on the gas cylinder.
- Ignition sources such as open flames or smoking are strictly forbidden.
- Air the rooms.
- Clear the danger zone.
- Inform your immediate surroundings (groundsman) and, if necessary, the fire brigade.


The gas fittings may only be taken into operation again after they have been checked by an expert.

### Built-in objects and changes

- Fixtures and changes to the gas system may only be carried out by a recognised expert for liquid gas systems.
- Only devices with a constant connection pressure of 30 mbar may be operated.
- Following any changes to the gas fittings they must be re-checked by a recognised expert, who must provide a written confirmation.

## Regulators and valves

- Use only special vehicle regulators that have a safety valve. In accordance with the German DVGW (German Association of the Gas and Water Sector) Worksheet G 607, other regulators are not permitted; they are not adequate for handling the heavy strain.
- Pressure control devices must have a fixed outlet pressure of 30 mbar. The requirements of EN 12864, Appendix D, apply accordingly. The flow rate of the pressure control device is 1.2 kg/h for the standard regulator and 1.5 kg/h when fitted with a DuoControl CS\*.
- Connect the regulator knob or high-pressure hose to the bottle carefully by hand (**NB: left-handed thread**). Do not use spanners, pliers or similar tools.
- If the temperature is below 5°C use the de-frosting facility (ice-ex\*) for regulators.

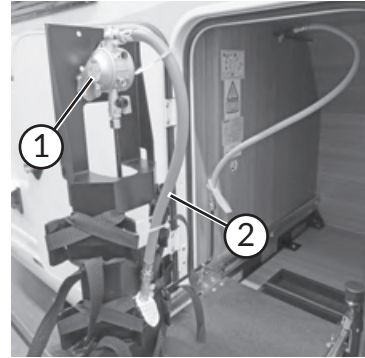

Gas regulator

### Gas regulator for France and Great Britain \*

Due to specific country regulations, the gas regulator in vehicles exported to France and Great Britain is firmly mounted on the boom of the extendible gas box. This requires the use of a high-pressure hose. Therefore, the low-pressure hoses that are normally used may not be fitted here.

- Gas regulator ①
- high-pressure hose ②



High-pressure hoses are used for gas regulators which are firmly mounted on the wall. This must always be taken into account should it be necessary to replace the hose.

Connections on gas pressure regulators are screwed on anti-clockwise. High-pressure gas hoses must be replaced every 5 years (the manufacturing date printed on the hose is decisive for determining when this must be done).

## Before initial operation

- The waste gas pipe must be tightly connected to the heating and chimney without any leaks. It may not be damaged.
- Keep vents clear.
- Remove any snow from the chimney.
- Clear aspirating openings for combustion air in the side all from dirt and/or snow. Otherwise, the exhaust fumes could have a CO content higher than allowed.
- Do not close the safety vents.
- We recommend that you store a Type ABC powder fire extinguisher with a minimum capacity of 1 kg by the entrance door as well as a fire blanket next to the cooker. Familiarize yourself with the safety precautions against fire that have been set up on the grounds where you are parked.  
(see also **Fire protection, Chapter 2.3**).



Never use portable cooking or heating devices. The only exception are electrical heating devices (note their power consumption) - but not radiant heaters, because they constitute a fire and suffocation hazard.



Read the manufacturer's operating manuals carefully!




Safety instructions in gas bottle container


## 9.2 Gas supply

The motor home is equipped with a liquid gas system (gas bottles are not included in the scope of delivery). This system is used to run the following equipment:

- Cooker
- Refrigerator
- Heating
- Hot water boiler
- Oven\*
- Possibly special accessories

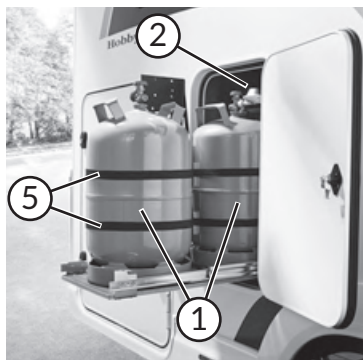

Fastening straps

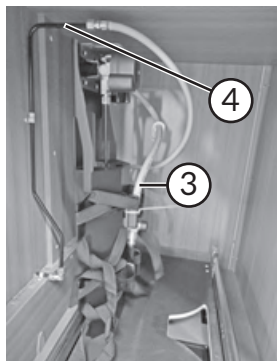

Gas box connections

## Gas bottle cabinet

The gas bottle container can be accessed separately in the side wall.

The gas bottle container holds two 11 kg liquid gas bottles ①. Via a safety regulator ②, the gas bottles are attached by a hose ③ to the supply line ④. Each bottle is fastened using two separate belts ⑤.



Gas bottles may only be carried in the gas bottle container.

### The following applies to the gas bottle cabinet

- Always check the gas cylinder mountings before driving. Stand the gas cylinders upright and close the valves.
- Pull any loose straps tight.
- The gas-bottle container is not suitable for transporting accessories (e.g. food or electrical devices).
- The stop valves on the gas cylinders must always be easily accessible.
- Do not close the gas bottle cabinet's air vents.
- Ensure that third parties cannot gain access to the gas bottle cabinet.



Gas bottles must be shut while driving if there is no crash sensor\* on board.



Extendable gas bottle container



Extendable gas bottle container with gas bottle

## Using the extendible gas bottle container

The extendable shelf for the gas bottle container makes it easier to exchange the gas bottles.

- To pull it out, pull the locking pin ① up to unlock it.
- To push it back in, push the shelf back to its original position until it noticeably locks into place.



When driving, the extendable shelf for the gas bottle container must always be locked in its original position.

## Changing gas cylinders



Do not smoke or ignite open flames while changing the gas cylinders. After changing the gas bottles, check whether there is any gas escaping from the tie-in point by spraying it with leak detection spray.



When the hose line is connected to the liquid gas bottle, ensure that it is free of kinks and not subject to stress. The regulator knob must be positioned above the valve on the bottle.

Please note that gas-proof surfaces must always be clean and intact.

- Open the flap of the gas bottle container.
- Pull out the extendable gas bottle container.
- Close the main stop valve on the gas cylinder. **Pay attention to the direction of the arrow.**
- Unscrew the gas pressure regulator/ high-pressure hose<sup>\*</sup> by hand from the gas bottle (left-handed thread).
- Loosen the fixing strap and remove the gas cylinder.
- Place a full gas bottle back in the extendable gas bottle container and use both fastening straps to lash it securely.
- Screw the gas pressure regulator/ high-pressure hose<sup>\*</sup> by hand on to the gas bottle (left-handed thread).
- Open the valve of the full, connected gas bottle (open both gas bottles when equipped with DuoControl CS).
- **Only when equipped with a crash sensor<sup>\*</sup>:** Press on the hose rupture protection (button) on the high-pressure hose (see p. 152).
- Check that gas is not escaping from the connection point using leak detector spray.
- Push the extendable gas bottle container back in
- Close the door of the gas bottle container.



Heating (Oven\*) Gas cooker Refrigerator

## Gas shutoff valves and valves

A corresponding gas stop valve has been built in for each gas device that has been installed. These gas taps can be used to interrupt the flow of gas to each device. Each tap has been labelled with an icon for the corresponding device.

### Place of installation of gas shutoff valves

- In the top drawer in the kitchen unit or the cabinet beneath the kitchen sink.

### The following applies to stop valves and valves

- All the valves on gas devices must be closed while driving.
- To open the valves, they must be turned by 90°. Opened gas stop valves are set in the same direction as the gas line.
- No firing point may be in operation when filling the petrol tank of your vehicle on ferries or in the garage.



Should you suspect a leak in the gas system, immediately close the shutoff valves in the vehicle and the gas bottle valves in the gas bottle container.

Over the years, vibrations can cause slight leakages to occur. If you suspect that there are leakages, have your dealer or an authorised workshop for gas facilities check your system.

Never carry out leak tests near an open flame.

## Gas regulator with a crash sensor\*

Using the DuoControl CS, it is possible to operate gas devices which have been released by the manufacturer, even while driving.

Should there be an accident, the integrated crash sensor automatically interrupts the gas supply, thereby preventing gas from escaping.

In an accident, the gas flow will be interrupted by a delay of  $4.0 \text{ g} \pm 1.0 \text{ g}$  that has an immediate and direct influence.



Please refer also to the manufacturer's separate operating instructions.

When exchanging gas bottles, use the enclosed screw aid to screw and unscrew the high-pressure hoses.

This will prevent damage to the screws, which can be caused by using the wrong tools.

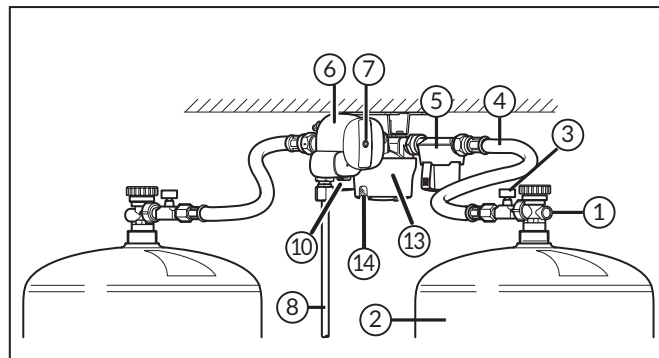



Diagram of DuoControl CS (horizontal)

- ① Cylinder valve
- ② Gas bottle
- ③ Hose rupture protection
- ④ High-pressure hose
- ⑤ Gas filter
- ⑥ DuoControl CS
- ⑦ Reset button
- ⑧ Steel/copper pipe
- ⑨ Trigger element for crash sensor
- ⑩ Screw cap (test connection)
- ⑪ Tool to assist with screwing/unscrewing
- ⑫ Torx T20
- ⑬ Adjusting knob for bottle in use/reserve bottle
- ⑭ Status display for bottle in use/reserve bottle




## To operate


- If necessary, open gas shutoff valves.
- Connect gas bottle(s) (2) and ensure that the hose connection is in perfect technical condition.  
Open the valve (1) on the bottle.
- Press firmly for approx. 5 seconds on the hose rupture protection (3) on the high-pressure hose.

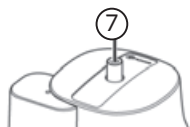

Reset button in  
"Not ready" position

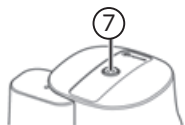

Reset button in  
"Ready" position



Tool to assist with  
screwing/unscrewing

To reset, press firmly on the yellow reset button (7), turn it lightly in a clockwise direction and hold for 10 seconds until it stays in the "Ready" position.

If the yellow reset button (7) is not pressed ("Not ready" position) then reset the crash sensor.

If the resetting procedure is unsuccessful, use the Torx T20 (12) located by the tool to assist with screwing/unscrewing (11) to assist turning in a clockwise direction.

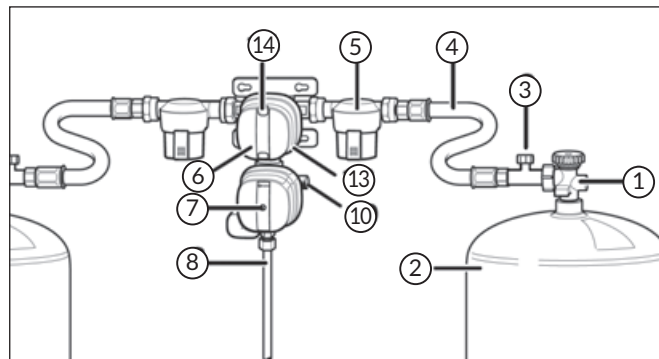


Diagram of DuoControl CS vertical

## Switching valve for the two-cylinder gas unit\*

The DuoControl CS changeover valve enables you to automatically change from the operating bottle to the spare one.

(13) Turn the adjusting knob all the way to the left or right (as applicable) to indicate which bottle is to be used.

(14) Shows the status of the cylinder in use.


**Green:** Gas is taken from the left bottle (bottle in use).

**Red:** Gas is taken from the right bottle (reserve bottle); check the connection to the left bottle and its filling level.

If the pressure in the cylinder is less than 0.4 bar, the valve will automatically switch the cylinder.



An Ice-Ex cartridge is integrated in the DuoControl CS changeover valve. It prevents the valve from freezing.

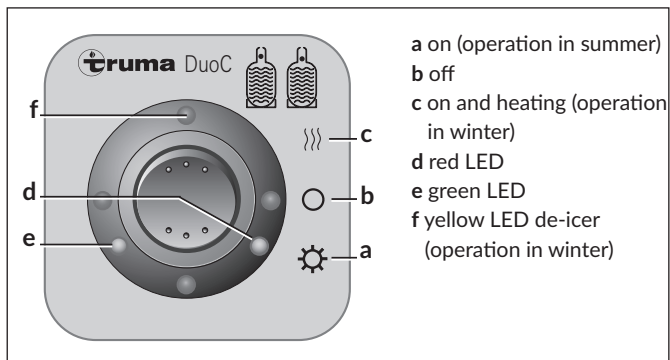

Remote indicator for DuoControl CS

### Remote indicator for the switching valve \*

The remote indicator is coupled to the changeover valve of the two-bottle gas system.

#### Operation in summer

Set switch down to **a**.

LED indicates the status of the bottle in use:

full = green LED lights up

empty = red LED lights up

#### Operation in winter

Set switch up to **c**.

In addition to indicating the status of the bottle in use, the changeover valve will be heated (yellow LED lights up).




Extendable gas bottle container DuoControl CS

### DuoControl in connection with extendable shelf for gas bottle container



To ensure that the two gas bottles in the gas bottle container do not touch anything when they are extended or retracted, the hoses to the gas control knob must be connected exactly as shown in the illustration above.

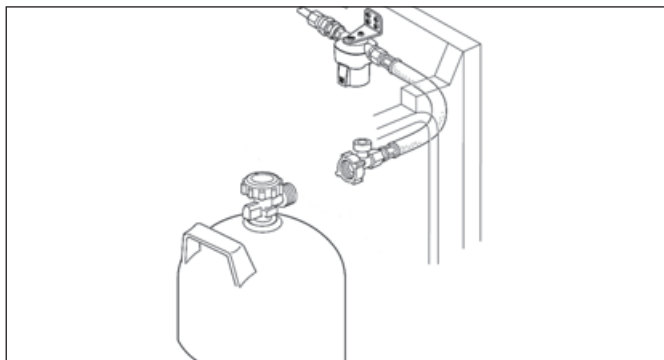

### Gas filter\*

As an option, your vehicle can be equipped with a gas filter for the Truma DuoControl. Please observe the enclosed manufacturer's operating instructions. The filter pad should be changed every time the bottle is changed.

### Changing the filter pad



Use only original Truma filter pads (Art. No. 50681-01).

**Gas residue: no smoking or naked flames! Shut the gas bottle/valve and unscrew the high-pressure hose from the gas bottle before opening!**


Before handling the gas filter, make sure that it always points downwards. Use the tool to assist with screwing/unscrewing (included in the scope of delivery) to check that the union nuts on the gas filter sit tightly.

### Removing the filter casing




- Press down on the snap-on bar and hold it pressed while turning the filter casing to the left. Then remove the filter casing by pulling it down.

### Exchanging the filter pad

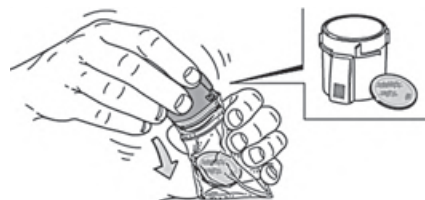


- Remove the new filter pad from the plastic bag, slip the bag over the previously removed filter casing and, in one turning motion, carefully shake the old filter pad into the plastic bag. Place the new filter pad in the filter casing in such a way that it lies flat on the bottom of the casing.

## Reinstalling the filter casing

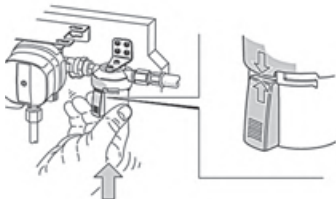

- Hold the filter casing beneath the filter housing, as displayed in the illustration above.

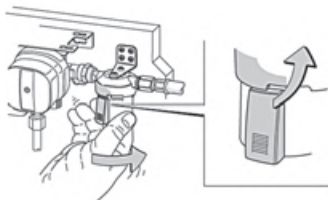

- Press the filter casing upwards and then turn it to the right so that the snap-on bar in the filter housing snaps into place.



If using just one bottle, the free input must be shut using the enclosed sealing cap.

## Disposal



Dispose of the used filter cartridge as well as any cleaning materials used in accordance with the legal requirements of the country you are in.

National regulations and laws must be observed (in Germany, for example, this refers to the Closed Substance Cycle and Waste Management Act and the waste management by-laws in the individual municipalities). In other countries, the regulations that apply there must be observed.

## 9.3 External socket for gas \*

The external socket for gas is used to connect external gas devices such as a gas barbecue or lamp.



External gas socket



The operating pressure of devices to be connected must be 30 mbar (1 bar = 14.5 PSI).

Maximum performance of devices to be connected:  
1.2 kg/h when fitted with a standard pressure control device  
and 1.5 kg/h when fitted with a DuoControl CS\*.

The plug connection can only be hitched when the emergency shutoff valve has been closed. Push back the clutch sleeve to undo the safety latch.

The coupling valve has been constructed in such a way that the emergency shutoff valve can only be opened if a gas hose has been attached. When hitching, the plug connection is plugged into the safety coupling.

If no gas hose has been attached, always use the protective cap to shut the opening of the valve.



The external socket for gas is only suitable for extracting gas, not for supplying gas to the system.



Gas warning system

## 9.4 Gas warning system\*

The gas warning system detects even the smallest amounts of propane/butane and/or narcotic gases and uses an alarm signal to send off a reliable alarm. It is always ready for operation because it is connected to the on-board power supply.



Please refer to the device manufacturer's operating manual.

## Chapter 10: Built-in devices

### 10.1 General Information

In this chapter, you will find information on the devices that have been built into the Hobby motor home. This information refers only to the operation of these devices. To some extent, the devices described are special accessories. For further information on the individual built-in devices, please refer to the separate operating instructions that have been included in the blue service bag found in the vehicle.



Built-in devices may only be repaired by specialists.

Only the device manufacturer's original spare parts may be used for maintenance and repair work.

Any changes to the built-in devices as well as non-compliance with the rules for use will cause the guarantee to become void and lead to the exclusion of liability claims. Furthermore, the operating licence for the device will become void and, in some countries, this means that the operating licence for the vehicle is also void.



Please also refer to the instructions in **Chapter 9** for operating gas devices, gas regulators and gas bottles.

Please observe the instructions in **Chapter 7** for operating electrical devices.

### 10.2 Heating



You are not permitted to operate the heating system while driving!

**Exception:**

As an optional feature, the vehicle can be equipped with a gas pressure regulator for use while driving (e.g. DuoControl CS).

#### 10.2.1 Truma Combi Heating System C4/C6 E/D6 E\*



Truma-Combi-warm air heater

Both the Combi LPG heating system and the diesel heating system (**model-specific**) are hot-air heating systems with an integrated hot water boiler (contents: 10 l).

The heating system is fully operational with or without the hot water system.

Depending on the model, the vehicle is fitted with a Combi D6 E heating system or, optionally, with a C6 E heating system, which has additional heating rods for electric operation.

**Place of installation:**

- side seat in the seating arrangement, external storage locker or under the bed.

**Initial operation**


- Several air vents have been built into the motor home. Pipes transport the hot air to the air vents. Set the air vents so that the hot air can escape to where it is required.
- Check that the chimney is clear. Remove any covers.
- Open the gas bottle and gas shutoff valve on the gas pipe (not for diesel heating system).
- **Diesel heating system\***: Generally, to fill the fuel line, the heating system must be started several times (see **manufacturer's Operating Manual**).



- Only operate the device if it is in perfect technical condition.
- Always have malfunctions repaired immediately. Only repair malfunctions yourself if such malfunctions are described in the troubleshooting instructions in this manual.
- Do not carry out any repairs on or make any changes to the device.
- Only have a defect device repaired by the manufacturer or their service department.



If the system's power supply is interrupted, the time must be reset.

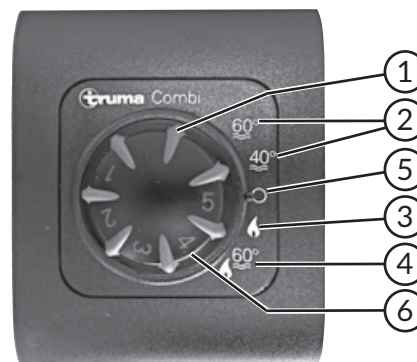**Control Panel for Truma CP Classic**  
 (model-specific)

**Control Panel for Truma CP Classic**

- ① Adjustable knob for room temperature (Level 1-5)
- ② Hot-water system (water temperature 40°C or 60°C)
- ③ Heating system (heating without controlled water temperature or with emptied water system)
- ④ Heating system (heating with controlled water temperature)
- ⑤ Rotary switch "off"
- ⑥ Rotary switch

| LED display | Meaning                                                              |
|-------------|----------------------------------------------------------------------|
| green       | Device is running                                                    |
| yellow      | LED lights up: boiler is currently heating up<br>LED blinks: warning |
| red         | Malfunction                                                          |



For a detailed error detection, please observe the manufacturer's operating instructions.

### Hot water system

- Turn the rotary switch to the desired setting ② (select 40°C or 60°C). The green and yellow LEDs will light up.  
Once the set temperature has been reached, the heating will turn off and the yellow LED will go off.



The hot water system may only be operated when the boiler has been filled!

### Heating system

#### 1. Heating with controlled water temperature

- Turn the rotary switch to setting ④.  
Use the adjustable knob ① to select the desired temperature (Level 1-5). The green LED will light up; the yellow LED will simultaneously show the heating phase of the water.

Once the temperature has reached the set level, the heating switches back to the lowest level. The water in the boiler heats up to 60°C. When it reaches this temperature, the heating switches itself off and the yellow LED goes off.

#### 2. Heating without controlled water temperature / with emptied water system

- Turn the rotary switch to setting ③.  
Set the adjustable knob ① as described under no. 1.  
The yellow LED will only light up if the water temperature is below 5°C. When the temperature reaches the set level, the heating will turn itself off.  
The hot air fan will continue to run at a low speed as long as the temperature of the device is above 40° C.


#### To switch off

- Turn the rotary switch to setting ⑤.  
The green LED will go off.



## LCD control panel Truma Combi CP Plus\*

(depends on model and equipment)

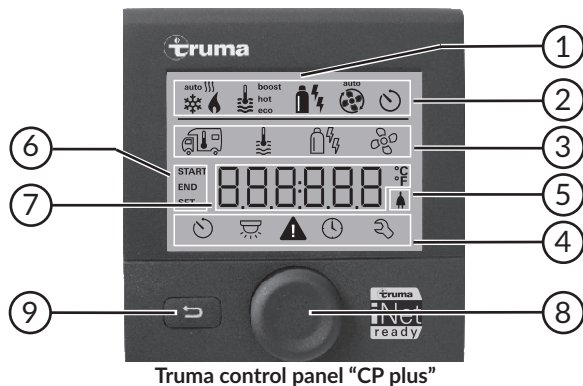

## Operating and display controls

- ① Display
- ② Status line
- ③ Menu line (top)
- ④ Menu line (bottom)
- ⑤ Display: 230V mains voltage (shore power)
- ⑥ Display: timer
- ⑦ Settings/values
- ⑧ Adjusting knob/pushbutton
- ⑨ „Reset“ button

The adjusting knob/pushbutton ⑧ is used to select the menus in lines ③ and ④ and change the settings. The data is shown on the display ①; the background is illuminated. Use the „reset button“ ⑨ to return to the previous menu.



iNet-ready functions are available in the trailer, whereby the Truma CP plus control panel functions as an interface for operating connected devices via the Truma App and iNet Box.

Basic functions can also be operated via the HobbyConnect app.

### Adjusting knob/pushbutton

The adjusting knob/pushbutton ⑧ is used to select and change specified values and parameters. The changes are saved by briefly pressing the button. Selected menu items blink.



– +

#### Turn to the right (+)

- Goes through the menu list from left to right.
- Increases the values.

#### Turn to the left (-)

- Goes through the menu list from right to left.
- Decreases the values.



#### Press the button briefly

- Saves a selected value.
- Selects a menu item; changes to the setting mode.



#### Press (3 seconds)

- Main function ON / OFF
- iNet-ready: use the adjusting knob / pushbutton to change the function (see APP mode)

### „Reset“ button

Press the „reset“ button ⑨ to return to the previous menu and reject the settings. This means that the previous values will continue to apply.

### To operate

#### Start/stand-by screen



A few seconds after the control panel has been connected to the power supply, a start screen will appear.

If nothing is entered for several minutes, a stand-by screen will automatically be displayed.




When the time is set (see “Setting the time”) the display alternates between the time and the room temperature that has been set. If no time has been set, the set room temperature will be displayed permanently.

## Functions

The functions in the menu lines ③ and ④ of the control panel can be selected in any sequence. The operating parameters are shown in the status line ② or in the display ⑤ and ⑥.

Functions may vary, depending on the equipped fittings and model.

### Selecting the setting mode

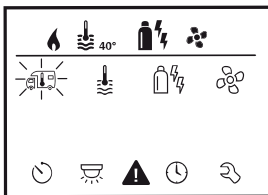

Press the adjusting knob/pushbutton ⑧

The display shows the setting mode.

The first icon blinks.

### To switch on/off

#### To switch on

- Press the adjusting knob/pushbutton ⑧.



Previously set values / operating parameters will be reactivated after the control panel has been switched on.

#### To switch off

- Press the adjusting knob/pushbutton ⑧ for longer than 4 seconds.

**iNet-ready:** After 2 seconds, "APP" appears on the display; after a further 2 seconds, "OFF" appears on the display.



Due to an internal lag feed in the heating system, it may take a few minutes for the Truma CP plus control panel to switch off (during this time you will see "OFF" on the display).

## APP mode in connection with an iNet Box

### Function

In APP mode, the connected devices as well as the Truma CP plus control panel switch to stand-by.

- no heating function
- no hot water generated
- the timer on the Truma CP plus control panel does not work

As soon as a new command is entered via the Truma app, the attached devices and the Truma CP plus are activated using the set values.

### Turning on the APP mode

- Press the adjusting knob/pushbutton ⑧ approx. 2 seconds until "APP" appears on the display.
- Let go of the adjusting knob/pushbutton ⑧.
- The previously saved values will be saved.

### Turning off the APP mode

The APP mode is turned off


- when the Truma CP plus control panel is alerted by briefly pressing the adjusting knob/pushbutton ⑧. The previously saved values will then be imported for renewed operation.



## Changing the room temperature

Use the adjusting knob/pushbutton ⑧ to select the icon in the menu line ③

- Press to switch to the setting mode.
- Use the adjusting knob/pushbutton ⑧ to select the desired temperature.
- Press the adjusting knob/pushbutton ⑧ to confirm the temperature.

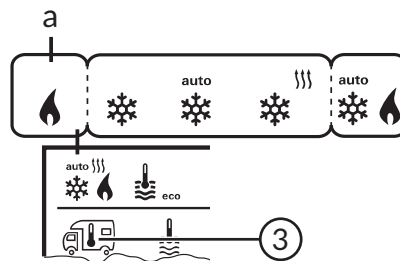

a = heating (HEIZ) <sup>1)</sup>

- Heating is switched on. The icon lights up.
- Adjustable range of temperature: 5 - 30°C (in increments of 1°C)
- Use the adjusting knob/pushbutton ⑧ for fast temperature changes (on stand-by screen).

<sup>1)</sup> The icon will continue to blink as long as the desired room temperature has not been reached.




### Changing the hot water temperature

The icon will blink until the desired water temperature is reached.

Use the adjusting knob/pushbutton ⑧ to select the icon in the menu line ③

- Press to switch to the setting mode.
- Use the adjusting knob/pushbutton ⑧ to select the desired temperature.
- Press the adjusting knob/pushbutton ⑧ to confirm the temperature.

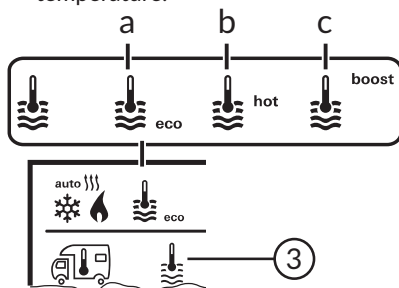

- = **OFF** - hot-water supply is switched off.
  - a = eco\*** - hot-water temperature of 40 °C
  - b = hot** - hot-water temperature of 60 °C
  - c = boost** - specifically heats up the water (water takes priority) fast for a max. period of 40 minutes
- After the water temperature has been reached, the room will continue to be heated.


\* Temperature of the hot water may exceed 40° C if room and water heating are combined.



### Selecting the type of energy \* (for Combi-E heating only)

Use the adjusting knob/pushbutton ⑧ to select the icon in the menu line ③

- Press to switch to the setting mode.
- Use the adjusting knob/pushbutton ⑧ to select the desired type of energy.
- Press the adjusting knob/pushbutton ⑧ to confirm the temperature.

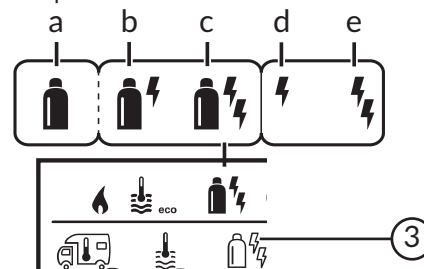

| Icon | Type of operation   | Type of energy              |
|------|---------------------|-----------------------------|
| a    | Gas/diesel          | Gas/diesel (model-specific) |
| b    | MIX 1 <sup>1)</sup> | Electricity + Gas           |
| c    | MIX 2 <sup>1)</sup> | Electricity + Gas           |
| d    | EL 1 <sup>1)</sup>  | Electricity                 |
| e    | EL 2 <sup>1)</sup>  | Electricity                 |

<sup>1)</sup> Mixed operation (electric and mixed operation are optional extras)

Electric heating power: Level 1: 900W; level 2: 1800W



Before switching on the electric heating, please ensure that the fuse protection of the electrical supply at the campsite corresponds to the power setting you have selected.



As soon as the heating has been switched on (room temperature and hot water temperature have been activated) the type of energy selected in the previous heating operation is displayed in the status line.  
Manufacturer's default setting: gas.

### Special features in mixed operation

#### Interrupting the 230V power supply:

The heating system will switch automatically to gas/diesel operation. As soon as the 230V power supply has been reinstated, the heating system will automatically switch back to mixed operation.

#### Malfunction in the combustion process (e.g. lack of fuel):

**Combi Gas** The heating system will switch automatically to electric operation. If it is running in mixed operation, the cause of the malfunction must be eliminated. Use the control panel to switch the heating off and then on again.

### Diesel heating system

#### Hot-water operation (only when the water container has been filled)

A mixed operation for making hot water is not possible. If the mixed operation has been preselected, the device will automatically select electric operation. The diesel burner will not be switched on.

### Special features in electric operation

- If the 230V power supply is interrupted and the 12V supply has been switched on, an error code will be shown on the display.
- As soon as the 230V power supply has been reinstated, the heating system will automatically be restarted using the previous settings. The error code will disappear.

### Diesel heating system

Depending on the control panel that has been built in, the temperature can be set to 40 °C, 60 °C or 70 °C. The more need for water, the higher the hot-water temperature which should be selected.


When operating electrically, an output of 900 W (3.9 A) or 1800 W (7.8 A) can be manually selected, depending on the fuse protection for the shore power connection.



## Selecting the fan speed

Use the adjusting knob/pushbutton ⑧ to select the icon in the menu line ③.

- Press to switch to the setting mode.
- Use the adjusting knob/pushbutton ⑧ to select the desired fan speed.
- Press the adjusting knob/pushbutton ⑧ to confirm the temperature.

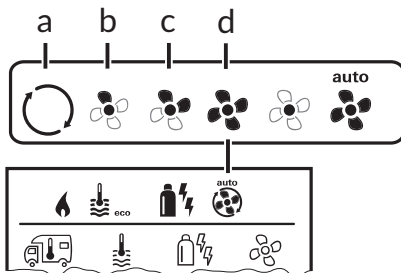

| Icon | Type of operation  | Description                                                                                                                            |
|------|--------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| -    | OFF                | Fan is switched off.<br>(Can only be used if no device is being operated.)                                                             |
| a    | VENT <sup>1)</sup> | Air circulation if no devices are being operated and the hot-water supply has been switched off. RPM can be selected in 10 increments. |
| b    | ECO                | Low fan speed                                                                                                                          |
| c    | HIGH <sup>2)</sup> | High fan speed                                                                                                                         |

## d BOOST

To heat room rapidly.  
Available if the difference between the selected and the actual room temperature is more than 10°C.

- 1) Can lead to higher engine wear, depending on how often it is selected.
- 2) The "HIGH" fan speed has a higher current consumption, higher noise level and higher engine wear.



As soon as the heating has been switched on (room temperature and hot water temperature have been activated) the fan speed selected in the previous heating operation is displayed in the status line. Manufacturer's default setting: "ECO".



## Setting the timer




The timer can only be selected if the clock on the control panel has been set.  
If the timer has been activated (ON), the menu item Activate timer (OFF) is first displayed.

Use the adjusting knob/pushbutton ⑧ to select the icon in the menu line ④.


- Press to switch to the setting mode.

### Entering the start time

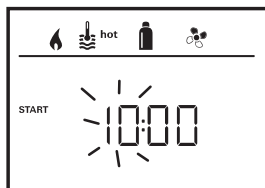

- Use the adjusting knob/pushbutton ⑧ to set the hours and then the minutes.

### Entering the end time

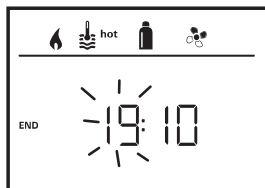

- Use the adjusting knob/pushbutton ⑧ to set the hours and then the minutes.



#### **Danger of poisoning from exhaust fumes.**

The activated preselection timer switches the heating on even if the motor home has been parked. In closed rooms (such as garages, workshops) the exhaust fumes from the heating can lead to poisoning. If the recreational vehicle is parked in a closed room:

- Close the fuel supply (gas) to the heating system;
- Switch the Truma CP plus (\* /model-specific) control panel off to prevent the heating system from being switched on again by the Truma app or preselection timer.



If the start/end time was exceeded during entry, the operating parameters will only be taken into account after the next start/end time has been reached. Until then, the operating parameters set outside the timer will remain valid.

### Setting the room temperature

- Use the adjusting knob/pushbutton ⑧ to select the desired room temperature.
- Press the adjusting knob/pushbutton ⑧ to confirm the temperature.

### Setting the hot water temperature

- Use the adjusting knob/pushbutton ⑧ to select the desired hot water temperature.
- Press the adjusting knob/pushbutton ⑧ to confirm the temperature.

### Selecting the type of energy\* (for Combi-E heating only)

- Use the adjusting knob/pushbutton ⑧ to select the desired type of energy.
- Press the adjusting knob/pushbutton ⑧ to confirm the temperature.



The menu item "Select type of energy" will be depicted when a heating system that uses electric heating rods has been connected (optional extra).




### Selecting the fan speed

- Use the adjusting knob/pushbutton ⑧ to select the desired fan speed.
- Press the adjusting knob/pushbutton ⑧ to confirm the temperature.



The menu item "Select fan speed" is only available if a room temperature of 5° C or higher has been set.

### Activating the timer (ON)

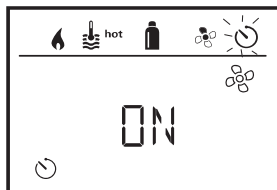


- Use the adjusting knob/pushbutton ⑧ to activate the timer (ON).
- Press the adjusting knob/pushbutton ⑧ to confirm the time entered.



The timer will continue to remain active, even for several days, until it has been deactivated (OFF).  
The icon for the timer will blink when the timer has been programmed and is active.


### Deactivating the timer (OFF)

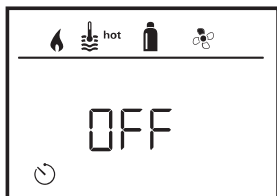

- Press to switch to the setting mode.
- Use the adjusting knob/pushbutton ⑧ to deactivate the timer (OFF).
- Press the adjusting knob/pushbutton ⑧ to confirm the time entered.



### Setting the time

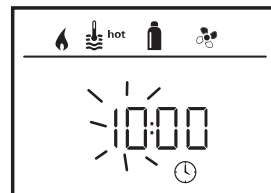

- The hours blink.
- Use the adjusting knob/pushbutton ⑧ to set the hours (24-hour mode).
- After pressing the adjusting knob/pushbutton ⑧ once again, the minutes will blink.
- Press the adjusting knob/pushbutton ⑧ to confirm the time entered.



### Service menu

#### To show the version number of the connected devices



Show the version number of the heating or control panel.

#### Changing the background illumination of the control panel



The background illumination can be changed in 10 increments.

### Changing the language



Select the desired language from the languages available (e.g. English, German, French, Italian).

### Calibrating the temperature sensor (OFFSET)



The room temperature sensor for the connected heating system can be individually adjusted depending on where the sensor has been installed. The offset can be set in increments of 1°C within a range of -5°C to +5°C.

### Resetting to manufacturer's default setting (RESET)




The reset function resets the control panel to the manufacturer's default setting. It deletes all of the settings you have made.

#### Confirming the reset

- Press the adjusting knob/pushbutton ⑧
- "PR SET" will appear in the display window.
- To confirm, press the adjusting knob/pushbutton ⑧.

### Display: 230V mains voltage

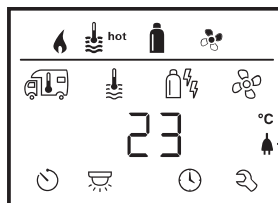

The icon signals that the 230V mains voltage (shore power) is available.




This can only be displayed in connection with a Combi E CP plus heating system that includes additional heating rods for electric operation (optional extra).




### Warning

A warning icon appears to signal a warning that one of the operating parameters has reached an undefined status. In this case, the device in question will continue to operate. As soon as the operating parameter is once again within its specified range of values, the icon will disappear.

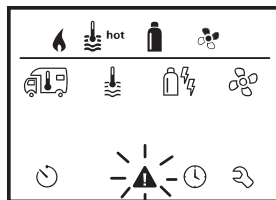

## Reading out the warning code

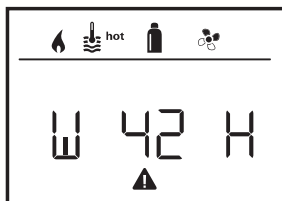

- Use the adjusting knob/pushbutton (8) to select the icon.
- Press the adjusting knob/pushbutton (8). The current warning code will be displayed. Use the error list to determine the cause of the warning and eliminate it.

**W = Warning**

**42 = Error code**

**H = Heating**

### Cause eliminated/Return to setting mode

- Press the adjusting knob/pushbutton (8).

### Cause not eliminated/Return to setting mode


- Press the „reset“ button.



In this case, the warning will not be acknowledged on the control panel and the warning icon will continue to be displayed. The control panel will remain in a warning state. Other connected devices can be operated.

## Malfunction

If there is a malfunction, the control panel will immediately go to “Malfunction” mode and display the Malfunction error code.

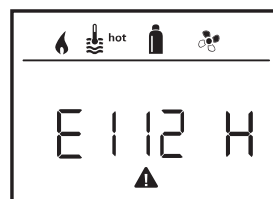

**E = Malfunction**

**112 = Error code**

**H = Heating**

### Cause eliminated / Return to setting mode

- Press the adjusting knob/pushbutton (8).
- The corresponding device will be restarted.



Due to an internal lag feed in the connected devices, this may take a few minutes.

If the cause has not been eliminated, the malfunction will occur again and the control panel will once again go to “Malfunction” mode.

### Cause not eliminated/Return to setting mode

- Press the “reset “ button.



In this case, the malfunction will not be acknowledged on the control panel and the warning icon will continue to be displayed. The device will remain in a state of malfunction. Other connected devices can be operated.

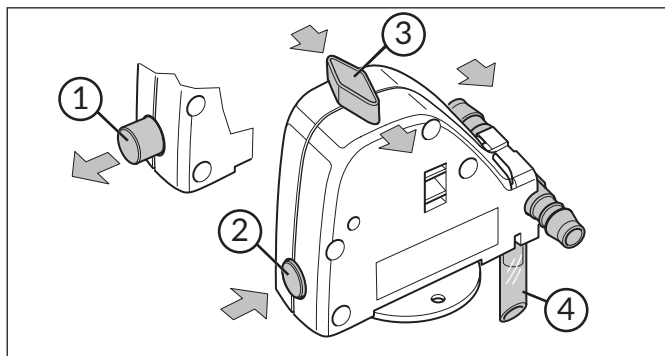


Diagram of Frost Control

## FrostControl

FrostControl is a non-electric safety or drain valve. If there is a risk of sub-zero temperatures it automatically drains the content of the boiler via a drain outlet. If the system is under excess pressure intermittent pressure equalisation will automatically take place via the safety valve.

The valve can be opened manually to drain the water out of the water system, e.g. in order to clean the water tank, when there is a danger of frost or if the vehicle is not used for a longer period of time (e.g. when it is in winter storage).

- ① Push button position "DRAIN"
- ② Push button position "CLOSED"
- ③ Rotary switch position "ON"
- ④ Drain outlet (to the outside through the vehicle floor)



Safety valve for boiler (Frost Control)

## Manually opening the FrostControl

- Turn the rotary switch 180° until it locks into place. The pushbutton will pop out ①. The water in the water container drains out via the drain pipe ④.



Check that the FrostControl drain pipe is always kept free of dirt (snow slush, ice, leaves, etc.) to ensure that the water can drain off completely!

## Manually closing the FrostControl

- Check whether the rotary switch has been set to "Operation" ③, i.e. parallel to the water supply, and has locked into place.
- Close the FrostControl by pressing the pushbutton. The pushbutton must lock into place in the "Closed" ② position.



The drain valve can only be closed manually using the push button ② and the boiler filled if the valve temperature is above approx. 7°C.

If the temperature of the safety/drain valve is lower than approx. 3°C, the push button will be ejected ① and the contents of the boiler will be drained off via the drain outlet ④.



Dometic absorber refrigerator

Dometic compressor refrigerator  
(model-specific)

### 10.3 Refrigerator



Please refer to the manufacturer's separate operating instructions before using the refrigerator.

The absorber refrigerator Dometic RML 10.4 is always equipped with AES (Automatic Energy Selection) and hinges both left and right, which are made of aluminium.

#### Ventilation

##### Ventilation position

If the refrigerator is not used for a longer period of time:

- Empty the refrigerator completely.
- Defrost the freezer compartment.

- Clean the entire refrigerator thoroughly.
- Leave both the refrigerator and the freezer compartment doors open when the van is in storage.

To hold the door open when the mobile home is in storage:

- Open the door and pull out the spacers ① at the top and bottom.
- Close the door slowly and carefully and ensure that the door is still slightly open.



#### Using the refrigerator after the van has been in storage:

- Turn the spacers ① back to their original position.

If the external temperature is high, full refrigerating capacity can only be ensured by means of sufficient ventilation. To achieve better ventilation, ensure that the side of the motor home with the refrigerator ventilation grids stands in the shade (see Chapter 5.1).



Dometic refrigerator

## Refrigerator door lock



While driving, the refrigerator door must always be closed and locked.

The refrigerator has hinges on both the left and right-hand side. This allows you to open and shut the refrigerator door from the left as well as from the right.

### To open

- Tilt the left-hand side to the left and pull the refrigerator door open to the right, or tilt the right-hand side to the right and pull the door open to the left.

### To close

- There is an automatic lock on the door of the refrigerator. When you shut the refrigerator door and press it firmly, it will lock itself automatically. As soon as the refrigerator door is engaged you'll hear it click. Only then is the door fully locked.



If the refrigerator door can no longer be closed, the door handle on the open side of the door is blocked. Follow the device manufacturer's operating instructions to unblock the handle.



**Danger of crushing your fingers! Never touch the hinge.**

**You could be seriously injured!** Locking pins are used to lock the refrigerator door. If these locking pins are manipulated or tilted/jammed, the refrigerator door may detach itself from the device (**to remedy this, please refer to the device manufacturer's operating instructions**).



Operating the Dometic absorber refrigerator

## Modes of operation



When operating the refrigerator for the first time, odours may become noticeable. These will evaporate after a few hours. Ensure that the living area is thoroughly aired.

Use the On/Off key ① to switch the refrigerator on and off:

- Press the key ① for 2 seconds to switch the refrigerator on.
- To switch it off again, press the key ① once again for 4 seconds. You will then hear a short "beep" and the refrigerator will switch itself off.

The refrigerator can be operated in three ways. The desired type of operation can be set according to your preference.

The refrigerator has been designed for operation as follows:

- using **direct current (12V)** ③
- using **alternating current (230V)** ③
- using **liquid gas (propane or butane)** ④

The refrigerator has an automatic mode ⑤ which selects the most favourable connected type of energy. The refrigerator unit operates silently.

### Selecting the type of operation

- Press the energy selection key ⑥ repeatedly until the desired type of operation (LED) lights up.
- Then press the temperature key ⑦ repeatedly until the desired temperature level (LED) lights up.



Ignition problems may occur at heights above 1,000 m. If possible, switch to a different type of energy.

In surrounding temperatures from +15 °C to +25 °C, select the medium temperature setting.

### Operating on gas

If you select the mode of operation using liquid gas ④, both the main shutoff valve on the gas bottle as well as the "Refrigerator" gas stop valve must be opened.

### Tank stop mode

If the vehicle's ignition has been switched off, the refrigerator will automatically switch to the tank stop mode for safety reasons (gas LED ④ blinks) provided it is in automatic mode. This blocks gas operation for 15 minutes, after which the refrigerator automatically switches back to regular automatic operation.

If there is a malfunction, the LED warning symbol ⑧ lights up and you will hear a beep.

For further information, please refer to the manufacturer's separate operating instructions.



It is not permitted to operate the refrigerator with gas

- while driving (**exception:** when equipped with a crash sensor)
- at petrol stations
- in multi-storey car parks
- while the vehicle is being transported by means of a transport or towing vehicle.

**There is a danger of fire or explosion!**



The device can only be operated on 12V while driving. During breaks or on longer stopovers, switch off 12V operation and, if required, select a different mode of operation, provided the refrigerator is not operating in automatic mode.

### Storing food

- Food should always be stored in closed containers, aluminium foil or similar materials.
- Never store heated food in the refrigerator; always let it cool off first. If possible, store only pre-cooled goods.
- Goods that might emit readily volatile or flammable gases must not be stored in the refrigerator.
- Always store perishable food directly next to the cooling fins or as close to the bottom of the refrigerator as possible.
- Always store heavy objects such as bottles or tins only in the refrigerator door, in the lower storage bin or on the bottom shelf.
- The maximum weight for each storage compartment in the door is 3 kg. The maximum storage weight for the entire door is 7.5 kg.



It is not suitable for freezing food nor for the proper storage of medication.





The freezer compartment is suitable for making ice cubes or for storing frozen food for a short period of time. It is not suitable for freezing food.

Environmental conditions influence the performance of the refrigeration unit. The cooling capacity can be influenced by:

- the surrounding temperature (e.g. sunrays)
- the amount of food to be stored,
- how frequently the door is opened.

Turn on the refrigerator at least 12 hours before putting anything in it.




Unlocking the base of the freezer

To make the best use of space, the freezer can be removed.

### To remove the freezer

- Fold down the locking clamps underneath the freezer.
- Push both clamps towards the middle.
- Pull the freezer slightly out.
- Unhinge the door.
- Remove the floor panel of the freezer.

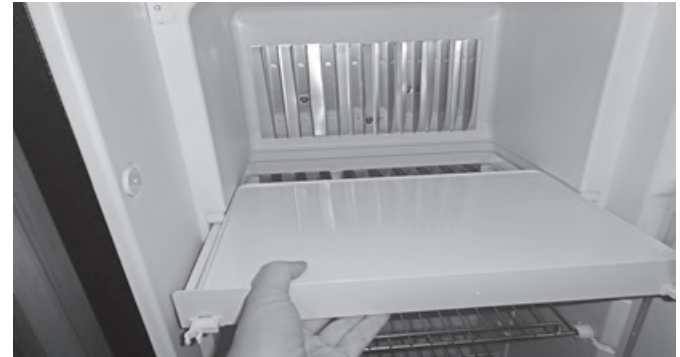

Removing the base of the freezer



Information on removing the freezer is also given in the device manufacturer's operating instructions.

## Compressor refrigerator Dometic



TFT display Compressor refrigerator Dometic

There is a TFT display on the refrigerator. Turn the control button ① to operate it.

The following symbols are displayed:

-  Temperature setting indicator
-  Blue snowflake: compressor is running
-  White snowflake: compressor is not running
-  Operating on DC (ancillary battery\*)
-  Warning indication with error code

## User mode

### User mode



#### Performance

- All thermostat settings selectable
- Compressor operates in high rpm mode
- External ventilation fan operates in high rpm mode



#### Quiet

- Thermostat settings 1, 2 and 3 are selectable
- Compressor operates in low rpm mode
- External ventilation fan operates in low rpm mode



#### Boost

- Thermostat settings fixed on maximum
- Compressor operates in high rpm mode
- External ventilation fan operates in high rpm mode



## Settings

### Settings



#### Frame heater

Symbol lights up when the frame heater is operating. The frame heater of the freezer compartment reduces condensation.

 Symbol lights up when the refrigerator is connected to the CI bus.

 Symbol lights up when child lock is enabled:

- Push the rotary button 3 times within 1,5 seconds to unlock the controls.
- After 10 seconds of inactivity the controls will lock again automatically.

 Beep off:  
Error messages, warning messages and door left open for an extended period are not signaled acoustically.

 Beep on:  
Error messages, warning messages and door left open for an extended period are signaled acoustically.

 Confirm selection and return to the main menu.



Error messages are indicated by a warning symbol as well as at least one error code. In addition, a beep will go off for 2 minutes. This is repeated every 30 minutes. For more information, please refer to the device manufacturer's operating instructions.

### To switch on

- Press the control button for 2 seconds. The refrigerator will start with the settings that were last selected.

### Navigation

- To activate the navigation menu, press the control button.
- Turn it to select the desired submenu.
- To open the submenu you have selected, press the control button.
- Then turn the control button to navigate through the submenu. The settings selected there will be shown in blue.
- To apply the selected setting, press the control button.
- Confirm your selection by pressing .

### To switch off

- Press the control button for 4 seconds. A beep will go off, after which the refrigerator shuts itself off.

### Operating modes



**PERFORMANCE mode:**

Standard mode

Selection of all temperature levels (1 to 5)



QUIET mode:

Decreased fan and compressor speed with reduced noise, e.g. if the user wants to relax or sleep. Selection of three temperature levels (1 to 3).



BOOST mode:

Maximum performance, e.g. for an immediate cool down or after a larger amount of uncooled foodstuff has been put in the refrigerator. No selection of temperature levels.



If the QUIET or BOOST mode is activated, the refrigerator will automatically switch to PERFORMANCE mode after 8 hours. The same configuration is used that was activated before switching to QUIET or BOOST mode.

In surrounding temperatures from +15 °C to +25 °C, select the medium temperature setting.

### Operating while driving



Before starting each journey, ensure that the food in the refrigerator has been secured to avoid any movement.

Lock the door securely using the travel lock!



3-burner gas cooker

## 10.4 Gas cooker

The kitchen unit in the motor home is fitted with a 2-burner or 3-burner gas cooker (**model-specific**).

### Before initial operation

- Open the bottle valve and the quick-action stop valve in the gas pipe.
- The skylight or the kitchen window must be open when operating the cooker.
- Ignition points which must be pressed for ignition when turning on the gas device should spring back to their original position after being pressed.




Please observe the enclosed manufacturer's operating instructions. Never use the cooker or other devices extracting combustion air from the interior of the vehicle to heat the vehicle. If this is ignored there is an acute risk to life due to a lack of oxygen and the odourless carbon monoxide which could be generated.

The cooker must not be operated when the glass cover is shut.

If the glass cover should accidentally be lowered during operation, the gas supply will automatically switch itself off.


If, while cooking, fat or hot oil should catch fire, do not douse the flames with water; instead, use a damp cloth or something similar to choke the flames and notify the fire department immediately!

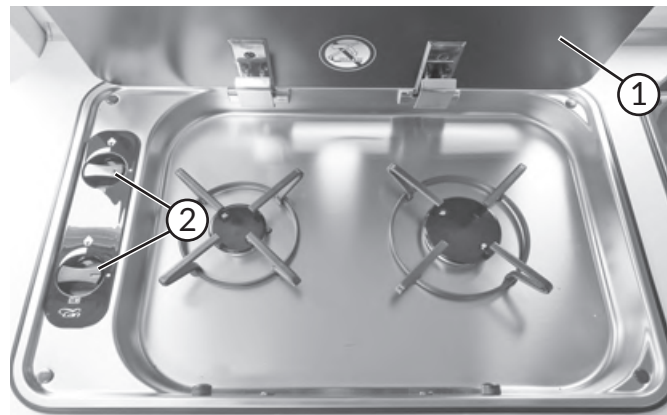

Operating elements of the 2-burner cooker (model-specific)



Operating elements of the 2-burner cooker (model-specific)

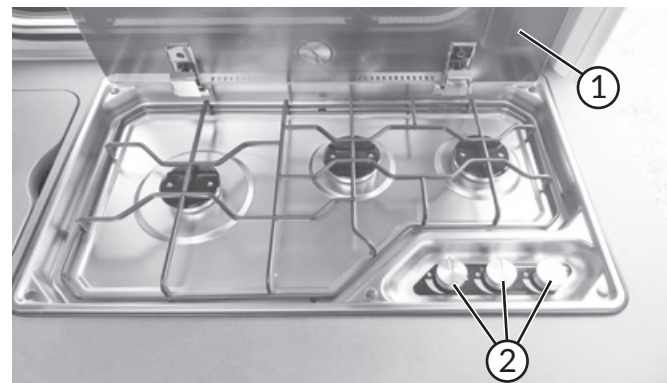

Operating elements of the 3-burner cooker (model-specific)

## Operation

- Use the main switch on the Control Panel to turn on the 12V power supply.
- If necessary, open the glass cover ① .
- Use the igniter ③ to ignite the flame; keep pressing the igniter ③ until the flame goes on (**model-specific**).
- In the ONTOUR models (exception ONTOUR C 700 GQ), the flame ignites automatically when the adjusting knob ② is pressed and held. Keep pressing the adjusting knob ② until the flame ignites.
- Continue to press the rotary switch ② for a further 5-10 seconds to ensure that the automatic flame guard takes effect.
- Release the rotary switch ② and turn to the desired setting (large or small flame).
- If ignition was unsuccessful, repeat the procedure.
- To turn off the gas flame, turn the rotary switch ② back to the "0" position
- Close the gas cooker's gas stop valve.



Use oven gloves or potholders when handling hot pots, pans or similar objects. **Danger of injury!**

Only ignite the flame when there are no pots or other objects on the hob.

Don't let the flame burn above the pot, just below it.

Never allow gas to escape without burning. Danger of explosion!

Do not shut the glass cover ① after cooking until the burners stop giving off heat. Otherwise, the glass cover could burst.

Never store easily flammable objects such as dishtowels, serviettes, etc. near the cooker. **Danger of fire!**

## 10.5 Fume Hood \*

As an option, the kitchen can be fitted with a fume hood. The built-in fan blows kitchen odours directly outside.

- ① Light
- ② On/Off switch
- ③ To set the speed for the fan
- ④ Clock/Timer



Fume Hood Dometic CK 155



Clean the filter of the fume hood regularly, as it collects fat from kitchen odours.

#### To set the time


- Switch the fume hood off.
- Press the On switch ② for approx. four seconds to set the hour.
- Use the + and - keys ③ to set the hour.
- Briefly press the On switch ② once to set the minutes.
- Use the + and - keys ③ to set the minutes.
- Then wait three seconds.

#### To set the timer

- Switch the fume hood on.
- Press the light switch ① and the - key simultaneously to set the timer.
- Use the + and - keys ③ to set the seconds.
- Press the On switch ② for 3 seconds to set the minutes.
- Use the + and - keys ③ to set the minutes.
- Then wait three seconds.



Please note the manufacturer's enclosed operating instructions.

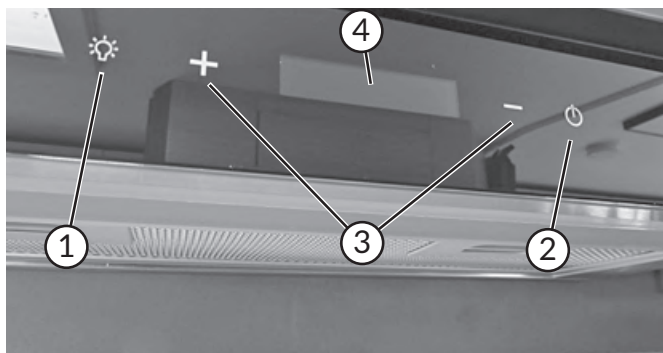

Fume Hood Optima De Luxe Dometic CK 500 (MAXIA T)



Oven Dometic OV 1800

## 10.6 Oven \*



- The ventilation openings on the oven must never be closed.
- A skylight or window must be open when operating this device.
- Open the shutoff valve for the oven. Should you smell gas, immediately close the valve and the gas bottles.
- The oven door must be open during ignition.
- Never operate the device if there is nothing in it (i.e. no food to be heated up).
- Never use the oven to heat the motor home.
- Under no circumstances may this device be plugged into the 230V mains!
- Never operate the oven while driving!
- There must be no objects in the oven while driving.



Please refer to the separate manufacturer's operating manual.

### Preparation

- Open the gas shutoff valve for the oven.
- Switch on the 12V power supply using the main switch on the control panel.
- Open the oven door completely.
- Position the baking tray or grill so that it is not in direct contact with the flame.

### Turning on

- Turn on the rotary switch ① and hold it pressed for 10 seconds until the flame is burning steadily.
- Let go of the rotary switch ① and turn it to the desired temperature. The flame must burn steadily.
- After approx. one minutes, carefully close the oven door so that the flame does not go out.

### Temperature settings

| Setting     | 2    | 4    | 6    |
|-------------|------|------|------|
| Temperature | 150° | 200° | 240° |

### To switch off

- Turn the dial ① to the temperature setting “•”.
- Close the gas stop valve on the oven.





## 10.7 CAMPERNET (Optima)\*

The combination consists of the complete CAMPERNET set, router and a 4-fold roof antenna as well as a 22" LED flat screen TV incl. tuner/receiver and an appropriate extendable arm. Designed for mobile Internet connection, CAMPERNET enables streaming, surfing and working in a mobile environment with an optimized and secure connection, even in locations with low network coverage.

The router has two integrated SIM card slots for using different providers. There are also three LAN connections for SmartTV, computers, laptops, etc..




To use the CAMPERNET, a SIM card is required for transmitting data via the Internet. A mobile phone contract (SIM card) is not included in the scope of delivery. The individual network speed depends on the mobile network and tariff.

### Data saving function

If a fast Internet connection is available, streaming providers transmit the highest possible data resolution. This increases data consumption enormously (see information on data consumption). For camping TVs with a smaller screen diagonal, normal resolution is sufficient. The data saving function restricts the data rate for each device.

## Power Connection

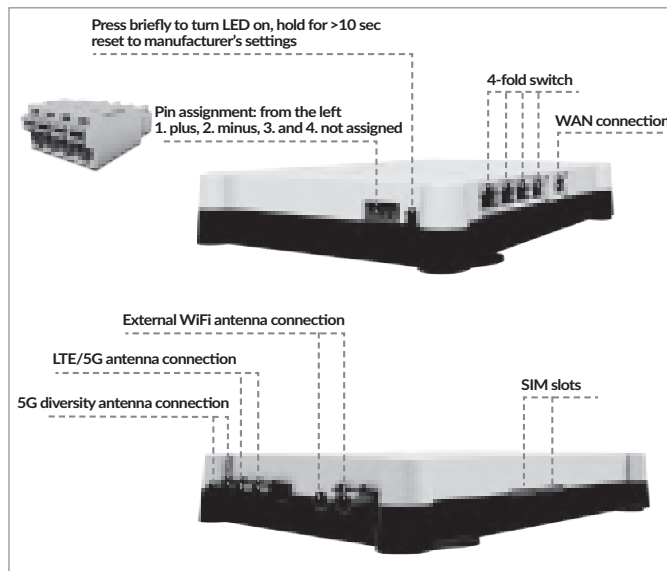

## Configuration

### 1. Installing the web app

The web app cannot be found in the App Store. The web app is a website which is stored on the CAMPERNET. It has been optimised for smart devices and looks, therefore, like a real app. To operate it, simply open your browser (Safari, Chrome).

The web app can be operated from any smart device as well as simultaneously by several users. No password is required, but nevertheless it has the highest security.

### 2. Unlocking the SIM card

Use the web app to unlock the SIM cards that have been placed in their slots. In the set-up menu, select each SIM card and use the enclosed PIN number to activate it.

### 3. Assigning a WiFi password

In the web app's router settings, it is also possible to assign a name and password for the CAMPERNET WiFi.

Now simply connect the individual devices with the CAMPERNET WiFi.



## Setting up a WiFi connection

Switch on the router and wait until the device is ready for operation.





While setting up the router, it will restart several times. Therefore, the function "Connect automatically" must be disabled for all other available WiFi connections. Otherwise, the router will switch in these moments to another WiFi and the connection to the browser-based app will be lost.



Open the web app for Android devices and save the password.







Open the web app for Apple devices and save the password.

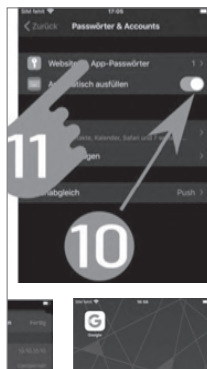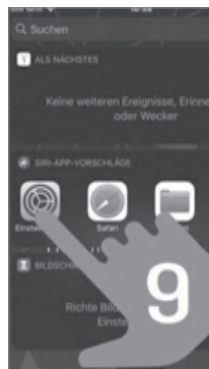

## Insert the SIM card and activate mobile communication.

The CAMPERNET router has two micro SIM card slots. Press a finger on the SIM card to eject it. The CAMPERNET router uses the status light to signal whether the inserted SIM card has been successfully recognized. Activation is carried out as follows:



1. Click on the installed CAMPERNET app.
2. Enter the password and click on Save (the password supplied can be found on the label located on the router as well as in the manufacturer's Operating Instructions).
3. Create an account and click on Next.
4. Select WiFi.
5. Enter PIN number (PIN from the SIM card).
6. Optionally, the connection can now be checked.
7. Save. Repeat these steps for the second SIM card (if you are using one).

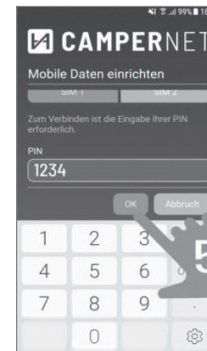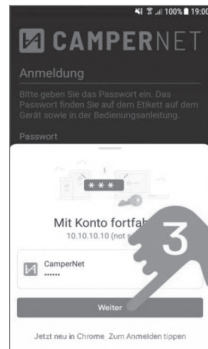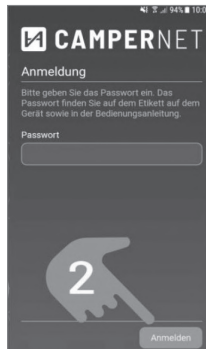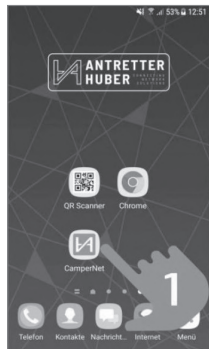

### Select free external WiFi and start connection.

A free WiFi can be set up using this menu item.

1. Click right on Set-up
2. Search for and select existing free WiFi and, if necessary, enter the password
3. Check the connection after completing the set-up
4. Accept General Terms and Conditions and/or fill in registration for the free WiFi with landing page and click on "Connect".

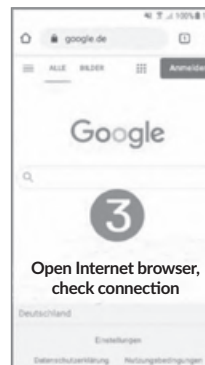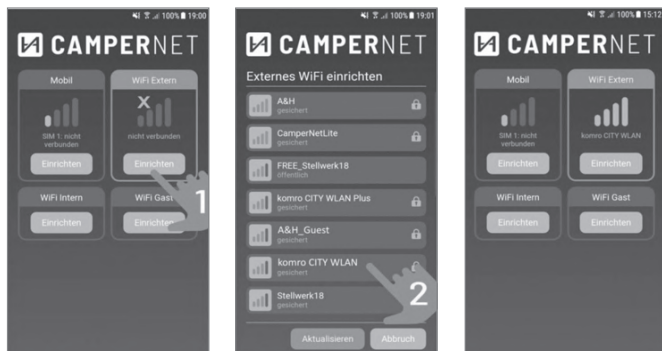

Free WiFi with landing page:  
accept General Terms and  
Conditions and/or fill in  
registration





SAT-System

## 10.8 Satellite System\*

The TELECO satellite system includes a 22" LED flat screen TV incl. a tuner/receiver and a corresponding extendable arm. This TV enables the satellite system to be controlled directly via the TV. Therefore, no further control units or devices are required.

### Controlling the satellite system

The satellite system is controlled via the TV or manually using the control unit.



Before positioning the antenna, check to ensure that there are no obstacles close by (trees, houses, etc.) so that it will receive satellite signals without any problems.



Never use the satellite antenna if there are strong winds (80 km/hr.) as this may damage the product.


### Adjusting the satellite and positioning the satellite system

After the TV has been switched on, an initial installation must be carried out for the satellite receiver and a search started for the channels.

In this connection, please refer also to the device manufacturer's operating manual.



Remote control

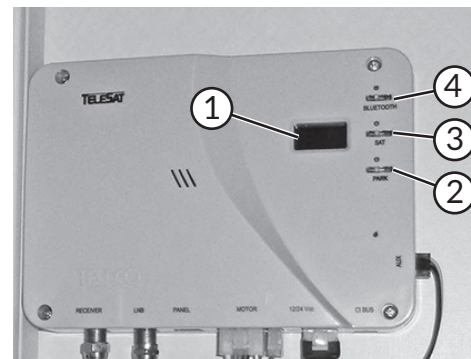

Control unit for satellite system

Use the yellow "ON" and "PARK" buttons to raise and lower the antenna ⑤.

Use the remote control for the TV or the control unit (located in the wardrobe/wall cabinet) as follows to adjust the antenna:

Information on ongoing procedures and possible error messages are shown in the display ①.

Press on the PARK key ② to raise and lower the antenna. While the antenna is being raised or lowered, the key's LED will blink.

Use the satellite key ③ to start the search for channels. During an ongoing search the key's LED will blink.

Use the Bluetooth key ④ to activate and deactivate the Bluetooth connection to a smartphone or tablet. Please refer to the device manufacturer's operating instructions for more information on this function.

After the initial positioning of the antenna, the system remembers the satellite's position and adjusts itself accordingly.



When driving, the satellite system must be lowered to its park position. Increasing the normal height of the trailer by means of an antenna that has not been lowered can increase the risk of accidents. The car driver is solely responsible for the condition of the superstructures and fittings. The antenna is automatically lowered when the motor is started.

When driving, the antenna is subject to the force of vibration. Depending on how often you drive, check the system regularly to determine whether it is firmly secured and tighten any loose parts.



LED flat screen TV



Control buttons

## 10.9 TV

### Control buttons on the TV

Various control buttons can be found on the back of the flat screen TV. They are used to control the most important functions:



| Designation | Explanation                                                                 |
|-------------|-----------------------------------------------------------------------------|
| SOURCE      | Select a source<br>Press the button several times to select a signal source |
| MENU        | Show menu                                                                   |
| CH+         | Next channel<br>Navigation                                                  |
| VOL+        | Increase volume<br>Navigation                                               |
| VOL-        | Reduce volume<br>Navigation                                                 |
| POWER       | Switch TV on/off                                                            |


- Then press the red power button on the remote control for the TV or the power button located directly on the right-hand side of the TV.

#### To switch off

- Press the red power button on the remote control or the power button located directly on the TV (standby mode).
- Press the main switch on the TV. The TV has now been switched off.



For information on adjusting the settings for the TV, e.g. language and picture settings, please refer to the TV manufacturer's operating instructions.

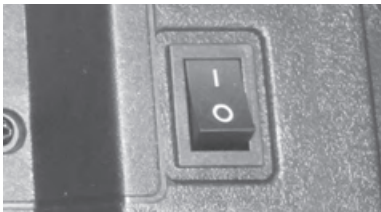

Main switch

#### Switching on the TV

- Press the main switch which is located on the back of the TV. The TV is now in standby mode.

## Chapter 11: Accessories

Note the detailed operation instructions, installation instructions and circuit diagrams from the manufacturers when using accessories. These are located in your service package.

- Any changes to the status of the motor home as set by the manufacturer may endanger the driving performance and roadworthiness of your vehicle.
- Any accessories, add-ons, modifications or mounted parts that have not been approved by Hobby may cause damage to the vehicle and impair its roadworthiness. Even if an expertise, general type approval or design approval has been provided for these parts, this does not ensure the orderly condition of the product.
- HOBBY cannot accept liability for any damages caused by parts or changes that have not been approved by Hobby.

The following table includes a list of weights for accessories. If these parts are carried in or on the motor home and are not included in the standard scope of delivery, they must be taken into consideration when determining the full load.

| Object                                                                                                                   | Weight[kg] |
|--------------------------------------------------------------------------------------------------------------------------|------------|
| <b>Motorisation/Chassis (cannot be retrofitted)</b>                                                                      |            |
| 2.184 ccm, 103 kW / 140 PS, Euro 6 EB, with 8-speed automatic transmission                                               | 41,8       |
| 2.184 ccm, 132 kW / 180 PS, Euro 6 EB, with 8-speed automatic transmission (incl. FIAT low-frame chassis Maxi, 4,400 kg) | 47,0       |
| <b>Increased load/reduced load</b>                                                                                       |            |
| Increased load to 3,650 kg, without technical changes                                                                    | 0,0        |
| reduction of permitted seating capacity to 2 people                                                                      | 0,0        |
| reduction of permitted seating capacity to 3 people                                                                      | 0,0        |
| <b>Base vehicle/Chassis</b>                                                                                              |            |
| Tow coupling SAWIKO, detachable                                                                                          | 64.0       |
| <b>Driver's cab</b>                                                                                                      |            |
| Floor mat in driver's cab                                                                                                | 1.5        |
| Thermal curtains incl. insulation of floor room                                                                          | 4.5        |
| <b>Windows</b>                                                                                                           |            |
| Framed window, hinged, double glazed and tinted, for standard windows                                                    | 8,0        |
| <b>Superstructure</b>                                                                                                    |            |
| Awning is omitted                                                                                                        | -30,0      |
| Tail stanchions                                                                                                          | 6.0        |
| <b>Upholstery combinations</b>                                                                                           |            |
| Upholstery combinations "Kos"                                                                                            | 0.0        |

| Object                                                                                                            | Weight[kg] |
|-------------------------------------------------------------------------------------------------------------------|------------|
| <b>Living room</b>                                                                                                |            |
| Fitted carpet, living room, removable                                                                             | 10.0       |
| <b>Kitchen</b>                                                                                                    |            |
| Fume hood, DOMETIC                                                                                                | 3.0        |
| Oven with electric ignition and lighting                                                                          | 16.0       |
| <b>Sleeping area</b>                                                                                              |            |
| Conversion of driver's cab into beds, incl. cushions                                                              | 10.0       |
| Conversion of seating arrangement into beds,<br>incl. cushions (Citroën/FIAT)                                     | 14,0/2,0   |
| <b>Water/gas/electricity</b>                                                                                      |            |
| 12V/230V external socket, incl. satellite/TV connection                                                           | 0.4        |
| Additional sockets, (1 x 12V / 2 x 230V / 2 x Kombi USB A / C)                                                    | 2,5        |
| E-Trailer-System (to level the vehicle and for gas<br>level indicator via E-Trailer app)                          | 0.8        |
| Gas pressure regulator TRUMA DuoControl incl. automatic<br>changeover system, crash sensor, Ice Ex and gas filter | 2.4        |
| Gas socket, external                                                                                              | 1.5        |
| Remote indicator for gas pressure regulator TRUMA<br>DuoControl                                                   | 0.6        |
| Super B Epsilon lithium battery, 12V / 100Ah                                                                      | -14,7      |
| Super B Epsilon lithium battery, 12V / 150Ah                                                                      | -9,9       |
| Wireless alarm system with gas alarm for narcotic gases,<br>propane and butane                                    | 1.0        |

| Object                                                                                                                                                                                                                                | Weight[kg] |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| <b>LED lighting</b>                                                                                                                                                                                                                   |            |
| Ambient lighting (model-specific)                                                                                                                                                                                                     | 0.3        |
| <b>Heating / air-conditioning</b>                                                                                                                                                                                                     |            |
| Heating TRUMA Combi 6 E instead of Combi 4/6                                                                                                                                                                                          | 1.1        |
| LCD control panel TRUMA Combi CP Plus                                                                                                                                                                                                 | 0.2        |
| <b>Smart Home</b>                                                                                                                                                                                                                     |            |
| Control for on-board equipment via Hobby 7" touch<br>control panel and Bluetooth via app, incl.<br>HOBBY CONNECT                                                                                                                      | 0,5        |
| <b>Multimedia</b>                                                                                                                                                                                                                     |            |
| CAMPERNET/TV combination with LTE/WiFi router with dual<br>SIM card and powerful multiband roof antenna for mobile<br>streaming and WiFi in the vehicle's environment, TELECO<br>22" smart TV incl. tuner/receiver and extendable arm | 7.5        |
| Satellite/TV combination consisting of TELECO satellite<br>system, TELECO 22" smart TV incl. tuner/receiver,<br>extendable arm                                                                                                        | 15.4       |



The CO<sub>2</sub> value in the CoC (Certificate of Conformity) is determined, among other things, using the mass of the vehicle. For this reason, the delivery condition of the vehicle ex factory must not be changed in any way before its initial registration by attaching, installing or converting any kind of special accessories.

## Chapter 12: Maintenance and Care

### 12.1 Maintenance

#### Maintenance intervals

There are stipulated maintenance intervals for the motor home and its equipment.

#### The following applies for maintenance intervals

- The initial maintenance check should be carried out by an authorised Hobby dealer no later than 12 months after the initial registration date.
- All further maintenance should be carried out once a year by a Hobby dealer.
- The maintenance of the basic vehicle as well as all built-in equipment should be carried out at the intervals given in each operating manual.



The inspection of the gas system and flues, for which a fee is payable, should be carried out regularly by a liquid gas expert in accordance with national regulations (annually in Great Britain). The inspection of the gas facilities (subject to extra cost) is to be repeated every 2 years by a liquid gas expert. This inspection is to be conducted and certified in accordance with the German Association of Gas and Water Experts, worksheet G 607, and EN 1949. The operator of the motor home is responsible for scheduling this inspection in good time.



Replace safety regulator knobs and hoses after 10 years at the latest!

Note that high-pressure gas hoses must be replaced after 5 years.

For safety reasons, spare parts for equipment must conform with the manufacturer's instructions and must be installed by him or a duly authorised representative.



Also note the maintenance intervals for the basic Fiat or Citroën base vehicle.

Hobby's voluntarily granted (12 year) warranty against leaks in the motor home, as set out in the guarantee conditions, will only take effect if the (chargeable) inspections for leaks were carried out correctly. To this end, the motor home must be taken to a Hobby dealer 12-18 months after receipt of the vehicle. After the initial inspection for leaks, this inspection must be repeated every 12 months during the warranty period.

Hobby recommends that you contact a service partner before driving there and inquire whether they have the necessary capacity (e.g. an adequate car lift) in order to avoid any misunderstanding.

## 12.2 Brakes

The components in the brake system are part of the General Type Approval ("Allgemeinen Betriebserlaubnis", ABE).

If you change the components in the brake system, the type approval expires. Any changes are only possible if they have been released by the manufacturer.



It is in your own interest to have the brakes checked regularly by your Fiat or Citroën- workshop.

**The following applies when maintaining the brake system**

- Check the level of brake fluid regularly.
- Check the brake system and brake hoses regularly for leakage. Rodents often gnaw at rubber hoses.
- Use only brake fluids with the same qualities as those fluids already in the brake circuit.



For further information, please refer to the Fiat Ducato or Citroën Jumper operating instructions.

## 12.3 Changing the Rear Lamps




If several lamps have to be replaced, take care to ensure that they are not accidentally switched and that everything is put back in its original place.

Before changing lamps, disconnect the power supply in the vehicle and switch the ignition off.

Lamps can be hot!

Ensure that no liquids (e.g. rainwater) flow into the covers.

### Changing the licence plate illumination

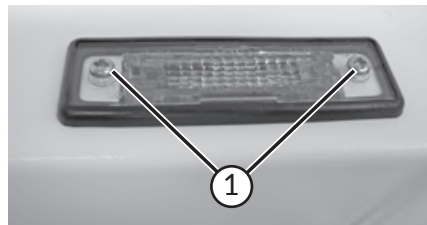


Registration plate light

- To change the registration plate light, first unscrew these screws ①.



#### Removing the cable

- Remove the two wires ② and attach them to the new light (They can be connected to any terminal).

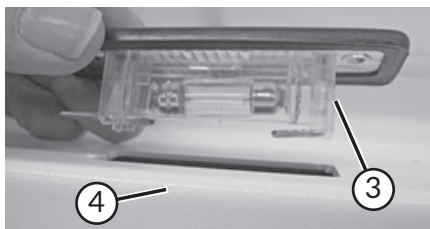


#### Lamp

- When putting in the new light, take care to ensure that the closed side ③ of the light points towards the plastic on the rear bumper ④. Otherwise there is a danger that the plastic on the rear bumper will melt when heat is generated.
- Firmly tighten the screws ① to fasten the light securely.

#### Rear light



The LED components in the rear light cannot be changed separately. In case of defects, the entire rear lamp must be exchanged (only by authorised Hobby dealers).

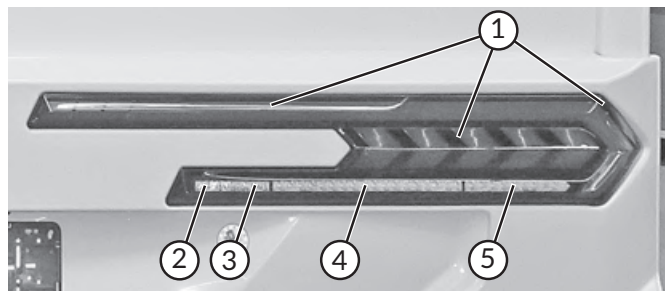


#### Rear light

- ① Rear light
- ② Fog tail light
- ③ Reversing light
- ④ Indicator
- ⑤ Brake light

## 12.4 Changing the battery and maintenance of the smoke detector



Please observe the operating instructions of the device manufacturer.

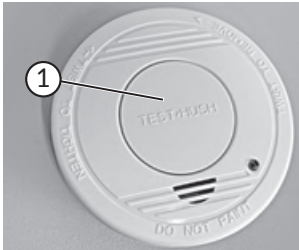


Smoke detector closed

### Maintenance

The smoke detector system does not require any maintenance. From time to time, remove the dust from the cover of the detector and ensure that the air slots are not dirty or blocked up by insects or similar objects.

If necessary, the detector should be wiped off with a dry cloth and then hoovered on the outside approx. twice a year.

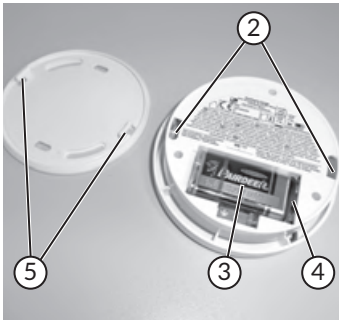

Smoke detector opened

- ① Test button
- ② Holes for the lock
- ③ Block battery, type 9VDC 6F22
- ④ Pins for battery contact
- ⑤ Locking pegs

### Changing the battery

To ensure that the block battery continues to function correctly it must be changed regularly, but no later than when the warning signal beeps.

- Carefully turn the cover of the smoke detector anti-clockwise until it can be removed from its mount.
- Take out the used block battery and unpin it from the pins.
- Connect the new block battery to the pins, ensuring that the pins click into place on the poles of the block battery.
- Place the battery in the smoke detector's battery container.
- Place the cover of the smoke detector so that the holes for the lock are over the locking pegs. Carefully turn the cover clockwise until it locks into the mount.

### Test

- Press the test button for at least 4 seconds until the alarm goes off. The alarm goes off when the electronic system is working. It will stop as soon as you let go of the test button.



Test the smoke detector every time the battery has been changed.



Batteries should never be thrown in the container for normal household waste. Always return used batteries to a shop that sells batteries or take them to a designated collection point.

## 12.5 Airing

For a comfortable climate inside the motor home, there must be sufficient ventilation. You will notice an increased amount of condensation inside the motor home on cooler days or after it has not been used for a prolonged period of time. This condensation may be particularly heavy on single-glazed windows. Damp spots are sometimes even noticeable on furniture surfaces, the inner side of outside walls, and often also in cupboards. Furthermore, such dampness can cause mould to build up, which then rapidly spreads to other surfaces. This situation not only impairs your sense of well-being, but can also lead to damaged components.

This condensation is generally caused by the air in the room. One of the properties of air is that it can absorb water. The hotter the air is, the more water it can absorb (relative humidity). If air that is totally saturated with water vapour cools down and reaches its saturation point, it gives off part of the water in the form of condensation.

This is also known as a “cold bridge”. However, condensation occurs primarily when there is little airflow due to structural conditions or insufficient airing.

### Condensation is caused by

- insufficient volume inside the motor home

- breathing and perspiration of the passengers
- bringing in damp clothing
- operating a gas cooker
- Showering, washing or doing the washing-up with very warm or hot water

While sleeping, a person loses about one litre of water per night through the pores of their skin and breathing. The additional water vapour in the air must be discharged from the recreational vehicle by airing it sufficiently at regular intervals. An air change of 0.5 to 1 ACH (Air change per hour) is required if only for reasons of hygiene to ensure that the level of toxic substances and odorous pollutants in the air in the room remains low.



Ensure that there is a sufficient exchange of air to avoid damages due to the build-up of condensation!

To ensure the ideal air exchange, open all of the cupboard and wall cabinet doors when airing and reheating the motor home.

A high level of humidity can cause the edges of the mirrors to corrode. After airing, dry any remaining damp spots with a cloth that has not been sprayed with or dipped in cleaning agents. Air the motor home as required in an energy-conscious manner. Although this means that some heating energy will be lost, it is in the interests of a healthy room temperature and to prevent any damage from moisture. What is important is to ensure that the loss of heating energy is kept as low as possible. This is best achieved by airing intensively for a brief period at regular intervals.





Therefore, you should open the skylights, windows and doors as far as possible for a short time, thus creating a draft. After approx. 10 to 15 minutes the stale, moist air in the room will be replaced by fresh, dry air which, after heating up, can again absorb additional water vapour.

## 12.6 Care

### The following applies for their care:

- Clean plastic parts (e.g. bumpers, skirts) using hot water up to 60°C and mild washing-up liquid.
- Clean greasy or oily surfaces with spirits.



Wash the vehicle only in places provided for this purpose.

Using cleaning materials sparingly. Aggressive cleansers, such as wheel rim cleaners, damage the environment.



Use only dishwashing liquid or commercial cleaning agents, always taking care to follow the instructions for use, and test the cleaning agent to make sure it is suitable.

### Cleaning products not recommended for use

- abrasive cleaning agents (scratch the surface)
- cleaning agents that contain acetone (immediately damage the plastic)
- dry cleaning products

- diluents
- alcohols
- aggressive or solvent-based cleaners
- cleaners from the chemical group such as ketone, ester and aromatic solvents
- aromatic hydrocarbons (e.g. all automotive fuels)

Direct contact with plastics such as PVC, soft PVC and similar products (e.g. stickers) must be avoided at all cost.

It is not possible to avoid transmitting plasticizers when solvent-based contents come into contact with the aforementioned plastics and this causes the parts to become brittle.

## Cleaning the exterior

The trailer should be thoroughly cleaned at least once a year or if it is soiled. In coastal areas (less than 1500 m away from salt water), the outside of the trailer should be cleaned twice a year.

### The following applies when cleaning the exterior:

- Rinse the vehicle with a weak jet of water.
- Wash the vehicle with a soft sponge and a commercial shampoo solution. Rinse the sponge often.
- Then rinse with a generous amount of water.
- Dry the vehicle with a suede cloth.
- After washing the vehicle, leave it standing outside to dry off completely.



Dry the headlights and sockets thoroughly, as water collects there easily.

## Washing with a high pressure cleaner



Do not spray stickers and external decors directly with the high pressure cleaner as they could peel away as a result.

Before washing the motor home with a high pressure cleaner, study its operating manual carefully. During washing maintain a minimum distance of at least 700 mm between the motor home and the high pressure cleaner. Please note that the water jet is under pressure when it comes out of the cleaning nozzle. Incorrect handling of the high pressure cleaner can result in damage to the motor home. The water temperature should not exceed 60°C. Keep the water jet moving while washing. The spray from the high-pressure cleaner must never be pointed directly at the cracks of the doors or windows, acrylic windows, electrical add-on components, plug connectors, seals, ventilation grills, storage lockers/service flaps, waste gas flues or skylights. This may damage the vehicle or water could get inside the vehicle.

### The following applies when waxing the surfaces

- The varnished surfaces should be treated occasionally with wax. Follow the application instructions given by the wax manufacturers.

### The following applies when polishing the surfaces

- In exceptional cases, use polish to refinish weathered varnished surfaces. We recommend solvent-free polishing paste.



Use polish only in special cases and as seldom as possible, because polish removes the top layer of varnish. Polishing too often will result in wear and tear.

### The following applies for tar and resin stains

- Tar and resin stains as well as other organic stains can be removed with petroleum ether or spirits.



Do not use aggressive solutions such as products containing ester or ketone.

### The following applies for damages

- Repair all damages without undue delay to prevent further damage caused by corrosion. Ask your Hobby dealer for assistance.

## Skylights, windows, mirrors and doors

Window panes require particularly careful treatment.

### The following applies for their care

- Rub the rubber seals around doors and windows lightly with talcum powder.
- Clean acrylic glass panes only with a clean, wet sponge and a soft cloth. Cleaning with a dry cloth may scratch the panes.



Wash panes and mirrors with pure water only. Never use aggressive cleaning agents that include softeners or solvents!

Never use razor blades to clean the mirror or window panes! Wipe mirrors and windows with a damp microfibre cloth or leather cloth, wiping in circles. Do not use any cleaning solutions.

You will find talcum powder in auto accessory shops.

### Roof



To prevent the varnish on the roof of the motor home from corroding, the roof plate should be cleaned at least once a year.

### Cleaning the interior



To reduce problems arising from dampness, use water sparingly when cleaning inside.

### The following applies for cushions, upholstery and curtains

- Clean cushions with a soft brush or Hoover.
- Mattress covers can only be washed if they have a round zipper. Mattress covers with a zipper that goes around only 1/3 of the cover cannot be washed.
- Have mattresses, cushions and curtains dry-cleaned if they are badly soiled.
- If necessary, wash them carefully using the foam from mild-action detergent.

### Cleaning instructions for materials that contain Teflon



- Always treat spots immediately.
- Sponge spots, but do not rub them.
- Work from the edge towards the middle of the spot.
- Never use household cleaners to remove spots.
- Hoover cushions regularly to remove any dirt that may have collected.

### We recommend the following methods for cleaning

#### Method A:

- Use only commercial cleaning agents that have a water basis.
- Alternatively, add two tablespoons of ammonia to 1 litre. Dip a cloth into this solution and gently sponge the spot. Turn the cloth over so that you are using a clean cloth to touch the spot.

This method is particularly suitable for removing:

- wine, milk, lemonade
- blood
- biro, ink
- urine, sweat
- mud
- vomit

#### Method B:

- Use only mild, water-free solvents for dry cleaning.
- Dampen the cloth and proceed as described in method A.

This method is particularly suitable for removing:

- wax, candles
- pencil

Chocolate or coffee should only be washed out with luke-warm water.

#### FIAT's specifications for dealing with plastic parts

FIAT recommends that normal cleaning of plastic parts inside the vehicle is carried out using a cloth that has been wet with a solution of water and a neutral detergent. To remove greasy or stubborn stains, use special products for cleaning plastic parts which do not contain any solvents and were developed so as not to change the appearance and colour of the components.



Never use alcohol, gasoline or products derived from them to clean the glass on the dashboard.

When disinfecting the steering wheel, ensure that the alcohol-based solution does not come into contact with the instrument cluster. You could first spray the disinfectant on a suitable cloth to avoid spraying it on the instrument cluster.

#### The following applies for carpeted floors\*:

- Clean with a Hoover or brush.
- If necessary, treat with carpet shampoo or a shampooing machine.

#### The following applies for the PVC flooring:



Sand and dust can damage the surface of the PVC flooring if it is tread on regularly. When in use, clean the floor daily with a Hoover or a broom.

- Use cleansing agents for PVC floors and clean water when washing the floor. Do not place fitted carpets on a wet PVC floor, as the fitted carpet and the PVC flooring could become glued together.
- Never use chemical cleansing agents or steel wool, because this will damage the PVC flooring.

### The following applies for furniture surfaces

- Clean the surface of wooden furniture with a damp cloth or sponge.
- Rub dry with a soft, dust-free cloth.
- Use mild furniture polish.

### The following applies for the toilet

- Clean with a neutral liquid cleanser and a cloth that does not scratch.
- Do not use a vinegar concentrate to clean the toilet and the water system or to decalcify the water system. Vinegar concentrate can damage gaskets or parts of the system.
- The rubber seals of the toilet should be cleaned regularly with plain water and a lubricant for seals (not Vaseline or any other vegetable fats) should be applied. Applying this regularly to the washer of the valve and other seals in the toilet will ensure that they stay flexible and function longer.



Do not pour any corrosive substances down the drains. Do not pour boiling water down the drains. Corrosive substances and boiling water damage drain pipes and syphons.

### The following applies for the sink and the cooker



Using chemical substances for cleaning can cause rust deposits to build up.  
Please also observe the manufacturer's cleaning instructions.

### The following applies for the fresh water tank



Fresh water tank

- Rinse it regularly with clean, clear water.
- If necessary, clean the sealing surfaces in the tank and grease them with Vaseline.

### Cleaning the fresh water tank

- After emptying the water from the fresh water tank, use a cloth to remove the remaining liquid that has collected in the groove.

### The following applies for built-in equipment

- **Truma Combi heating system:**
  - The boiler must be descaled regularly (at least twice a year). We recommend using suitable commercial agents for cleaning, disinfecting and taking care of the boiler. Products that contain chlorine are unsuitable.
  - The chemical method used to control microorganisms in the device can also be supplemented by regularly heating the water in the boiler to 70° C.
  - The safety / outlet valve (FrostControl) must be operated regularly (at least twice a year) to remove lime deposits and to ensure that it is not blocked.

- **Truma 6 D:**

- The double pipe for the exhaust fumes (exhaust gas silencer pipe and intake pipe) must be checked regularly, especially after longer drives, to ensure that it is intact and firmly attached.
- The exhaust gas system must be checked regularly, but at least once every two years.

- **Refrigerator:**

- Keep the ventilation grille clean. The door seal should be rubbed once a year with talcum powder to keep it supple and the expandable fold should be checked for tears.
- Check the drain-off of the condensation regularly. If necessary, clean the condensation drain-off. If this is clogged, the condensation will collect on the floor of the refrigerator.
- The space behind the refrigerator should be hoovered and cleaned regularly.
- The filter in the fume hood\* must be cleaned occasionally, because cooking fat collects there. We recommend that you use warm water with a bit of dishwashing liquid to clean it.



Remove all spray cans with cleaners and polishes from the vehicle after finishing the upkeep! Otherwise, there is a danger of explosion at temperatures over 50° C!

## 12.7 Winter Lay Up for the Motor home

For many people, the camping season ends when the temperature starts to fall. Your motor home must be properly prepared for its winter lay up.

### The following general rules apply

- Only leave your motor home in a closed space if it is dry and well-aired. Otherwise, it is better to leave your motor home in the open.
- To protect the tyres, jack up the motor home or move it slightly to a new position every two months.
- Close all gas bottles and emergency shutoff valves.
- Disconnect (or, ideally, remove) the battery and store it safe from frost. Check it about once a month to see if it is still charged; if not, charge it.
- Check the antifreeze in the cooling system and, if necessary, top it up.
- Leave space between tarpaulins and the camper so as not to hamper ventilation.

### The following applies for the external structure

- Wash the motor home thoroughly (see 12.6).
- Check the vehicle for damages to the varnish and other damages. If necessary, repair these damages and carry out any other necessary repairs.

- The exterior should be treated with wax or a special polish for varnish.
- Use a protective agent to protect the metal parts of the chassis against rust.
- Check the undercarriage for damage and, if necessary, repair it. In case of severe damages, contact your dealer.
- Ensure that no water can get into the venting on the floor, heating system and refrigerator venting (mount winter covers\*).

#### The following applies for tanks and containers:

- Clean, disinfect, descale and completely empty all water pipes and faucets. Leave faucets open.
- Clean and empty the fresh water tank (see Chapter 8 Water).
- Clean and empty the waste water tank.
- Clean and empty the toilet flushing tank and the excrement tank. Clean the toilet valve, apply a lubricant for seals and leave it open.
- Completely empty the therme/boiler.

#### The following applies for the interior fittings

- Clean the interior of your motor home. Hoover carpets, cushions and mattresses. If possible, store them outside the motor home. Otherwise, place them in such a way inside the vehicle that they do not come into contact with condensation.

- Use soapy water to clean linoleum and smooth surfaces.
- Leave the refrigerator door open or in the ventilation position (see Chap. 10.3 Refrigerator).
- After cleaning them, leave stowage spaces, cupboards, drawers and furniture flaps open to facilitate air circulation.
- Leave vents for forced ventilation open. If the motor home is kept in a closed space, you can leave the skylight open.
- Air the motor home thoroughly every four to six weeks when the weather is dry.
- Set up a dehumidifier (such as salt) inside the motor home and dry the granulate or change it regularly.
- Open the battery's circuit breaker.
- If necessary, heat the camper to prevent the build-up of mould from condensation.
- Switch off the 12 V main switch.

## 12.8 Winter Operation



### Preparations

Your motor home has been designed to allow you to use it to a certain extent in winter. If you really wish to camp in winter, we recommend that you optimize your motor home to meet your personal requirements. Your dealer will be pleased to advise you.

**The following applies for your preparations:**

- Check the vehicle for damage to the paintwork or from rust and, if necessary, repair it.
- Ensure that water cannot run into the ventilation and de-aerating and heating systems.
- Use a wax-based protective agent to protect the metal parts of the undercarriage against rust.
- Preserve varnished external surfaces with suitable agents.
- Fill the petrol tank with winter diesel; check the antifreezer in the windshield cleaning unit and the coolant.



Please also refer to the information given by the manufacturers of built-in devices regarding winter.

**The following applies for ventilation**

During operation in winter, condensation is caused when using the motor home in low temperatures. Sufficient ventilation is extremely important to ensure that the quality of the air inside the motor home is good and to avoid damages to the vehicle caused by condensation.

- Do not shut vents for forced ventilation.
- Set the heating to maximum power when heating up the motor home. Open stowage spaces, cupboards, drawers, furniture flaps, curtains, shades and plissés. This enables you to achieve optimum ventilation and de-aerating.
- Only heat the motor home when the recirculation air system is switched on.

- Every morning, air all of the cushions, mattresses and stowage spaces and dry any damp spots.
- Air thoroughly with fully opened doors and windows several times a day.
- If the outside temperature is under 8° C, winter covers\* should be mounted over the ventilation grilles of the refrigerator.



If, despite all of these measures, condensation forms, simply wipe it away.

Before entering the vehicle, remove the snow from your clothes and shoes to prevent an increase in humidity.

**The following applies for heating**

- Both the air intake as well as the exhaust gas openings of the heating system must be kept free of snow and ice.
- It takes longer to heat the vehicle in the winter.
- Avoid continuous airing during the heating period. Open windows cause a considerably greater loss of heat than brief airing.
- Turn down the heating when airing. Be careful when there is frost outside! The heating system may only be turned off when briefly airing the motor home; otherwise, there is a danger than the water may freeze.
- Do not let the interior cool down completely when you are away or at night; set the heating to low and leave it on.



Continue to heat the vehicle while you are sleeping!



- The motor home uses considerably more gas in winter than in summer. Two 11 kg bottles of gas will be used up in just under one week.
- Therefore, should you stay longer in one place, it is worthwhile to set up an outer tent. It will help to acclimatise the motor home and keep the dirt out.

#### **The following applies for tanks and containers**

- If the interior is sufficiently heated, the fresh water tank, water pipes and therme/boiler should not freeze. Fill all of the water containers only after the interior has been thoroughly heated.
- When the heating is on, the waste water tank is heated. In severe frost, also add an anti-freezing compound or table salt to the waste water. If the vehicle is not being used, the waste water tank must be emptied completely.
- The toilet can be used normally, even in cold weather, as long as the interior of the motor home is heated. The excrement tank should be emptied if there is danger of frost.
- Switch the refrigerator off, defrost and then clean it. Leave the refrigerator door open to prevent mould.



Mount both winter panels in AC and DC operation. Mount only the lower winter panel in gas operation or automatic mode. This will prevent heat build-up and the exhaust fumes from the refrigerator can be correctly drawn off.

## **At the end of the winter season**

### **The following applies for the care of the vehicle**

- Thoroughly wash the underbody and the motor. This removes corrosive thawing agents (salts, alkali).
- Clean the exterior and use normal car wax to preserve metal parts.
- Do not forget to remove flue extensions, cover panels on refrigerators, etc.

## **Saving energy in winter**

It is very easy to save energy inside your motor home. This applies especially to heating in winter.

### **The following applies for saving energy**

- Meter the exact use of ventilation in the vehicle and the heating valve.
- Install winter mats on the inner sides of the driver's cabin and the windscreen (e.g. thermal curtain\*, see 6.10).
- Attach the insulating mat between the driver's cab and the interior of the motor home (not included in scope of delivery).
- Open the outside door as seldom and briefly as possible.
- If you are camping in winter, attach a small outer tent. This will offer protection against the cold.

## Chapter 13: Sanitation and Environmental Protection

### 13.1 The environment and traveling

#### Environmentally fair use

Naturally, motor home, caravan and van owners and users are especially responsible for the environment. Always use your vehicle in an environmentally friendly way.



#### The following applies for environmentally fair use:

- If you plan on spending a longer period of time in cities and communities, find out in advance about special campsites for motor homes and use them.
- Do not spoil the peace and cleanliness of nature.
- Dispose of waste water and rubbish in the proper way.
- Act in an exemplary manner so that motor home, caravan and van users are not generally regarded as environmental polluters.



#### The following applies for waste water:

- Collect waste water on board only in built-in waste water tanks or, if necessary, in suitable containers!
- Never empty waste water in open spaces or down manholes! Generally, the public waste water system does not run through clarification plants.
- Empty your waste water tank as often as possible, even if it is not completely full (hygiene). If possible, rinse out the waste water tank with fresh water after emptying.



Only empty your waste water tank in special places for waste water disposal, but never in open spaces! Generally, waste water stations are found in motorway service areas, campsites or petrol stations.



#### The following applies for wastes:

- Only use approved sanitary cleansing products in the waste tank.



You may be able to avoid the use of sanitary liquids by installing an activated carbon filter system (sold as an accessory)!

Use sanitary liquids very sparingly. An overdose is no guarantee of preventing odours!

## Sanitation

- Never allow the waste tank to become too full. Empty the tank immediately as soon as the level indicator lights up.
- Never empty wastes down manholes! Generally, the public waste water system does not run through clarification plants.



Empty the waste tank in special places for sanitary disposal, but never in open spaces!



### The following applies for waste:

- Separate your waste and put appropriate materials in the recycling bins.

- Empty waste bins as often as possible in the appropriate bins or containers. This prevents unpleasant odours and the problem of collecting rubbish on board.

### The following applies for picnic spots:

- Always leave picnic spots clean and tidy, even if you dispose of someone else's waste.
- Never dispose of your household trash in the containers provided in rest areas.
- Do not let the vehicle's engine run unnecessarily while the vehicle is standing still. When the transmission is in neutral, a cold engine generates more harmful emissions. The quickest way for the engine to reach its operating temperature is while driving.



Protecting the environment is not only in the interest of nature, but also in the interest of all motor home, van and caravan users!

## 13.2 Returning the vehicle

If you should ever have to give up your motor home and have it recycled, the manufacturer of the basic vehicle is responsible for taking it back (status at the time of printing).

This means that your Hobby motor home must be taken back free of charge by a member of the nationwide Fiat or Citroën dealers' network and disposed of professionally.

Please note that you are required by law to hand over your end-of-life vehicle to an authorised collection point, an authorised disposal point or an authorised treatment facility.

Information on where to find the next treatment facility can be obtained directly from the manufacturer of the base vehicle.

Contact in Great Britain:

Fiat: [www.fiat.co.uk](http://www.fiat.co.uk)

Citroën: [www.citroen.co.uk](http://www.citroen.co.uk)

To deregister an end-of-life vehicle, a so-called 'Certificate of Destruction' is required which confirms that the vehicle was duly accepted by the facility for treatment. This certificate may only be issued by certified, authorised treatment facilities.

Conditions for taking back and treating a vehicle free of charge:

- The vehicle contains essential components such as the engine, transmission, etc., coachwork, chassis, catalytic converter or electronic control devices.
- There is no foreign waste in the vehicle.
- The vehicle is or was registered in a member country of the European Union for at least one month before it is immobilised.
- The registration documents are handed in together with the vehicle.

# Chapter 14: Technical Data

## 14.1 Chassis Data

| Hobby Model  | Model      | Type | Base vehicle      | Motorisation Model | exhaust gas emissions | Chassis           | Frame extension (FE) |            |                   | Belt system Aguti        |
|--------------|------------|------|-------------------|--------------------|-----------------------|-------------------|----------------------|------------|-------------------|--------------------------|
|              |            |      |                   |                    |                       |                   | Type                 | Art.-No.   | Kind              |                          |
| C 680 GE     | Ontour C   | C3   | Jumper Light Duty | 140 PS (103 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT030i               | 40P2300000 | lowered           | G2000 ASBC (Art. 121977) |
| C 700 GQ     | Ontour C   | C3   | Jumper Light Duty | 140 PS (103 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT030i               | 40P2700000 | lowered           | G2000 ASBC (Art. 121977) |
| C 680 GE "F" | Ontour C   | F3   | Ducato Light Duty | 140 PS (103 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT030i               | 40P2300000 | lowered           | G2000 ASBC (Art. 121977) |
| T 710 GE     | Ontour T   | F3   | Ducato Light Duty | 140 PS (103 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT030i               | 40P2200000 | lowered           | G2000 ASBC (Art. 121977) |
| T 700 FH "L" | Ontour T   | F3   | Ducato Light Duty | 140 PS (103 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT030i               | 40P2300000 | lowered           | G2000 ASBC (Art. 121977) |
| T 700 FH     | Ontour T   | F3   | Ducato Heavy Duty | 180 PS (132 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT030i               | 40P2300000 | lowered           | G2000 ASBC (Art. 121977) |
| T 700 F      | Ontour T   | F3   | Ducato Light Duty | 140 PS (103 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT030i               | 40P2300000 | lowered           | G2000 ASBC (Art. 121977) |
| A 720 GFM    | Ontour A   | F3   | Ducato Heavy Duty | 140 PS (103 kW)    | Euro VI-E             | Serien-Tiefrahmen | MT030i               | 40P2800000 | lowered           | G2000 ASBC (Art. 122087) |
| T 710 GE     | Prestige T | F3   | Ducato Heavy Duty | 180 PS (132 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT030i               | 40P2800000 | lowered           | G2000 ASBC (Art. 121977) |
| T 710 GE     | Maxia T    | F3   | Ducato Heavy Duty | 180 PS (132 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT030i               | 40P2400000 | lowered           | G2000 ASBC (Art. 121977) |
| T 740 WE     | Maxia T    | F3   | Ducato Heavy Duty | 180 PS (132 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT026Gi              | 40P01      | without reduction | G2000 ASBC (Art. 121977) |
| T 740 WF     | Maxia T    | F3   | Ducato Heavy Duty | 180 PS (132 kW)    | Euro 6 EB             | Serien-Tiefrahmen | MT026Gi              | 40P01      | without reduction | G2000 ASBC (Art. 121977) |

All measurements in [mm]

all weights in [kg]

2) without wing mirror

3) tow coupling is a special accessory

- 1) The trailer load for a technically permitted gross vehicle weight of 3,650 kg is reduced to 1,900 kg;  
 for a technically permitted gross vehicle weight of 4,250 kg to 1,800 kg;  
 for a technically permitted gross vehicle weight of 4,400 kg to 1,750 kg

| Seats | t.p.o.w. <sup>6)</sup><br>[kg] | Permiss.<br>front axle<br>load | Permiss.<br>rear axle<br>load | Unbraked<br>trailer<br>load <sup>3)</sup> | Braked<br>trailer<br>load <sup>3)</sup> | Max.<br>permissible<br>drawbar load <sup>3)</sup> | Maximum<br>towing<br>weight | Total<br>length | Height | Width<br><sup>2)</sup> | Front<br>tread<br>width | Rear<br>tread<br>width | Wheel<br>base | ÜV <sup>4)</sup> | ÜH <sup>5)</sup> |
|-------|--------------------------------|--------------------------------|-------------------------------|-------------------------------------------|-----------------------------------------|---------------------------------------------------|-----------------------------|-----------------|--------|------------------------|-------------------------|------------------------|---------------|------------------|------------------|
| 4     | 3500                           | 1850                           | 2000                          | 750                                       | 2000 <sup>1)</sup>                      | 80                                                | 5500                        | 6759            | 2820   | 2230                   | 1810                    | 1790                   | 3800          | 948              | 2011             |
| 4     | 3500                           | 1850                           | 2000                          | 750                                       | 2000 <sup>1)</sup>                      | 80                                                | 5500                        | 6979            | 2820   | 2230                   | 1810                    | 1790                   | 3800          | 948              | 2231             |
| 4     | 3500                           | 1850                           | 2000                          | 750                                       | 2000 <sup>1)</sup>                      | 80                                                | 5500                        | 6759            | 2820   | 2230                   | 1810                    | 1790                   | 3800          | 948              | 2011             |
| 4     | 3500                           | 1850                           | 2000                          | 750                                       | 2000 <sup>1)</sup>                      | 80                                                | 5500                        | 7059            | 2883   | 2400                   | 1810                    | 1980                   | 4035          | 948              | 2076             |
| 4     | 3500                           | 1850                           | 2000                          | 750                                       | 2000 <sup>1)</sup>                      | 80                                                | 5500                        | 7009            | 2883   | 2400                   | 1810                    | 1980                   | 4035          | 948              | 2026             |
| 4     | 4400                           | 2100                           | 2500                          | 750                                       | 1750                                    | 80                                                | 6150                        | 7009            | 2883   | 2400                   | 1810                    | 1980                   | 4035          | 948              | 2026             |
| 4     | 3500                           | 1850                           | 2000                          | 750                                       | 2000 <sup>1)</sup>                      | 80                                                | 5500                        | 7009            | 2883   | 2400                   | 1810                    | 1980                   | 4035          | 948              | 2026             |
| 6     | 4250                           | 2100                           | 2500                          | ---                                       | ---                                     | 80                                                | 6050                        | 7168            | 3030   | 2400                   | 1810                    | 1980                   | 3800          | 948              | 2420             |
| 4     | 4400                           | 2100                           | 2500                          | 750                                       | 1750                                    | 80                                                | 6150                        | 7059            | 2883   | 2400                   | 1810                    | 1980                   | 4035          | 948              | 2076             |
| 4     | 4400                           | 2100                           | 2500                          | 750                                       | 1750                                    | 80                                                | 6150                        | 7148            | 2883   | 2400                   | 1810                    | 1980                   | 4035          | 948              | 2165             |
| 4     | 4400                           | 2100                           | 2500                          | 750                                       | 1750                                    | 80                                                | 6150                        | 7406            | 2883   | 2400                   | 1810                    | 1980                   | 4035          | 948              | 2423             |
| 4     | 4400                           | 2100                           | 2500                          | 750                                       | 1750                                    | 80                                                | 6150                        | 7406            | 2883   | 2400                   | 1810                    | 1980                   | 4035          | 948              | 2423             |

4) front overhang

5) rear overhang

6) Technically permissible maximum weight

## 14.2 Load increased

| Hobby Model                                      | Model    | Type | Base vehicle             | t.p.o.w. [kg] | Permissible front axle load | Permiss. rear axle load | Unbraked trailer load | Braked trailer load | Max. permissible drawbar load | Maximum towing weight |
|--------------------------------------------------|----------|------|--------------------------|---------------|-----------------------------|-------------------------|-----------------------|---------------------|-------------------------------|-----------------------|
| Load increased to 3650 kg                        |          |      |                          |               |                             |                         |                       |                     |                               |                       |
| C 680 GE                                         | Ontour C | C3   | Jumper Light Duty        | 3650          | 1850 <sup>1)</sup>          | 2000                    | 750                   | 1900                | 80                            | 5550                  |
| C 700 GQ                                         | Ontour C | C3   | Jumper Light Duty        | 3650          | 1850 <sup>1)</sup>          | 2000                    | 750                   | 1900                | 80                            | 5550                  |
| C 680 GE "F"                                     | Ontour C | F3   | Ducato Light Duty        | 3650          | 1850 <sup>1)</sup>          | 2000                    | 750                   | 1900                | 80                            | 5550                  |
| T 710 GE                                         | Ontour T | F3   | Ducato Light Duty        | 3650          | 1850 <sup>1)</sup>          | 2000                    | 750                   | 1900                | 80                            | 5550                  |
| T 700 FH "L"                                     | Ontour T | F3   | Ducato Light Duty        | 3650          | 1850 <sup>1)</sup>          | 2000                    | 750                   | 1900                | 80                            | 5550                  |
| T 700 F                                          | Ontour T | F3   | Ducato Light Duty        | 3650          | 1850 <sup>1)</sup>          | 2000                    | 750                   | 1900                | 80                            | 5550                  |
| Increased load in connection with a maxi chassis |          |      |                          |               |                             |                         |                       |                     |                               |                       |
| T 710 GE                                         | Ontour T | F3   | Ducato Light Duty (Maxi) | 4400          | 2100                        | 2500                    | 750                   | 1750                | 80                            | 6150                  |
| T 700 F                                          | Ontour T | F3   | Ducato Light Duty (Maxi) | 4400          | 2100                        | 2500                    | 750                   | 1750                | 80                            | 6150                  |

All measurements in [mm] all weights in [kg]

Load increased for Fiat Ducato/Jumper to 3650 kg without technical changes.

<sup>1)</sup> Front axle load in vehicles with automatic transmission 1,960 kg

Load increased for Fiat Ducato with low-frame chassis to 4400 kg by means of maxi chassis 1st stage (only available ex works)



### 14.3 Vehicle and equipment weights

| Model        | Series     | Weight of basic vehicle 2026 | Driver | Diesel [kg] | Basic equipment | Mass when vehicle is ready to start | Mass when vehicle is ready to start -5% | Mass when vehicle is ready to start +5% | t.p.o.w. <sup>1)</sup> [kg] |
|--------------|------------|------------------------------|--------|-------------|-----------------|-------------------------------------|-----------------------------------------|-----------------------------------------|-----------------------------|
| C 680 GE     | Ontour C   | 2796                         | 75     | 69          | 37              | 2977                                | 2828                                    | 3126                                    | 3500                        |
| C 700 GQ     | Ontour C   | 2851                         | 75     | 69          | 37              | 3032                                | 2880                                    | 3184                                    | 3500                        |
| C 680 GE "F" | Ontour C   | 2796                         | 75     | 69          | 37              | 2977                                | 2828                                    | 3126                                    | 3500                        |
| T 710 GE     | Ontour T   | 2918                         | 75     | 69          | 37              | 3099                                | 2944                                    | 3254                                    | 3500                        |
| T 700 FH "L" | Ontour T   | 2910                         | 75     | 69          | 37              | 3091                                | 2936                                    | 3246                                    | 3500                        |
| T 700 FH     | Ontour T   | 2963                         | 75     | 69          | 37              | 3144                                | 2987                                    | 3301                                    | 4400                        |
| T 700 F      | Ontour T   | 2843                         | 75     | 69          | 37              | 3024                                | 2873                                    | 3175                                    | 3500                        |
| A720 GFM     | Ontour A   | 3094                         | 75     | 69          | 37              | 3275                                | 3111                                    | 3439                                    | 4250                        |
| T 710 GE     | Prestige T | 2996                         | 75     | 69          | 37              | 3177                                | 3018                                    | 3336                                    | 4400                        |
| T 710 GE     | Maxia T    | 3008                         | 75     | 69          | 37              | 3189                                | 3030                                    | 3348                                    | 4400                        |
| T 740 WE     | Maxia T    | 3031                         | 75     | 69          | 37              | 3212                                | 3051                                    | 3373                                    | 4400                        |
| T 740 WF     | Maxia T    | 3029                         | 75     | 69          | 37              | 3210                                | 3050                                    | 3371                                    | 4400                        |

<sup>1)</sup> Technically permissible maximum weight

## 14.4 Tyres and rims for motor homes

| Hobby Model  | Series             | Lightchassis  |                       |                      | Series             |                 |                 | Wheel attachment*          |
|--------------|--------------------|---------------|-----------------------|----------------------|--------------------|-----------------|-----------------|----------------------------|
|              |                    | t.p.o.w. [kg] | Perm. axle load front | Perm. axle load rear | Tyre size          | Metal wheel rim | Alloy wheel rim |                            |
| C 680 GE     | Ontour C (Citroën) | 3500 / 3650   | 1850 <sup>1)</sup>    | 2000                 | 225/75 R 16 CP M+S | ---             | 6 J x 16, ET 68 | 5 / 71 / 118 <sup>2)</sup> |
| C 700 GQ     | Ontour C (Citroën) | 3500 / 3650   | 1850 <sup>1)</sup>    | 2000                 | 225/75 R 16 CP M+S | ---             | 6 J x 16, ET 68 | 5 / 71 / 118 <sup>2)</sup> |
| C 680 GE "F" | Ontour C (Citroën) | 3500 / 3650   | 1850 <sup>1)</sup>    | 2000                 | 225/75 R 16 CP M+S | ---             | 6 J x 16, ET 68 | 5 / 71 / 118 <sup>2)</sup> |
| T 710 GE     | Ontour T (Fiat)    | 3500 / 3650   | 1850 <sup>1)</sup>    | 2000                 | 225/75 R 16 CP M+S | ---             | 6 J x 16, ET 68 | 5 / 71 / 118 <sup>2)</sup> |
| T 700 F      | Ontour T (Fiat)    | 3500 / 3650   | 1850 <sup>1)</sup>    | 2000                 | 225/75 R 16 CP M+S | ---             | 6 J x 16, ET 68 | 5 / 71 / 118 <sup>2)</sup> |
| T 700 FH "L" | Ontour T (Fiat)    | 3500 / 3650   | 1850 <sup>1)</sup>    | 2000                 | 225/75 R 16 CP M+S | ---             | 6 J x 16, ET 68 | 5 / 71 / 118 <sup>2)</sup> |
| T 700 FH     | Ontour T (Fiat)    | ---           | ---                   | ---                  | ---                | ---             | ---             | ---                        |
| A 720 GFM    | Ontour A (Fiat)    | ---           | ---                   | ---                  | ---                | ---             | ---             | ---                        |
| T 710 GE     | Prestige T (Fiat)  | ---           | ---                   | ---                  | ---                | ---             | ---             | ---                        |
| T 710 GE     | Maxia T (Fiat)     | ---           | ---                   | ---                  | ---                | ---             | ---             | ---                        |
| T 740 WE     | Maxia T (Fiat)     | ---           | ---                   | ---                  | ---                | ---             | ---             | ---                        |
| T 740 WF     | Maxia T (Fiat)     | ---           | ---                   | ---                  | ---                | ---             | ---             | ---                        |

1) Front axle load 1,960 kg in vehicles with automatic transmission.

2) Vehicles with automatic transmission have the brake system used for the maxi chassis (wheel mounting: 5/78/130)

\* No. of tyre bolts / centralising collars / bolt circle

## Tyres and rims for loaded motor homes

| Maxichassis      |                             |                            |                    |                                                   |                      |
|------------------|-----------------------------|----------------------------|--------------------|---------------------------------------------------|----------------------|
| t.p.o.w.<br>[kg] | Perm.<br>axle load<br>front | Perm.<br>axle load<br>rear | Tyre size          | Metal wheel rim,<br>optionally alloy<br>wheel rim | Wheel<br>attachment* |
| ---              | ---                         | ---                        | ---                | ---                                               | ---                  |
| ---              | ---                         | ---                        | ---                | ---                                               | ---                  |
| ---              | ---                         | ---                        | ---                | ---                                               | ---                  |
| 4400             | 2100                        | 2500                       | 225/75 R 16 CP M+S | 6 J x 16, ET 68                                   | 5 / 78 / 130         |
| 4400             | 2100                        | 2500                       | 225/75 R 16 CP M+S | 6 J x 16, ET 68                                   | 5 / 78 / 130         |
| ---              | ---                         | ---                        | ---                | ---                                               | ---                  |
| 4400             | 2100                        | 2500                       | 225/75 R 16 CP M+S | 6 J x 16, ET 68                                   | 5 / 78 / 130         |
| 4250             | 2100                        | 2500                       | 225/75 R 16 CP M+S | 6 J x 16, ET 68                                   | 5 / 78 / 130         |
| 4400             | 2100                        | 2500                       | 225/75 R 16 CP M+S | 6 J x 16, ET 68                                   | 5 / 78 / 130         |
| 4400             | 2100                        | 2500                       | 225/75 R 16 CP M+S | 6 J x 16, ET 68                                   | 5 / 78 / 130         |
| 4400             | 2100                        | 2500                       | 225/75 R 16 CP M+S | 6 J x 16, ET 68                                   | 5 / 78 / 130         |
| 4400             | 2100                        | 2500                       | 225/75 R 16 CP M+S | 6 J x 16, ET 68                                   | 5 / 78 / 130         |

\* No. of tyre bolts / centralising collars / bolt circle

## 14.5 Tyre pressure values

| Motor homes    |                                    |                 |                     |      |
|----------------|------------------------------------|-----------------|---------------------|------|
| Series         | Tyres                              | Rim             | Tyre pressure (bar) |      |
|                |                                    |                 | front               | rear |
|                | Camping all weather tyres (CP) M+S |                 |                     |      |
| Ontour C       | 225/75 R 16 CP M+S                 | 6 J x 16, ET 68 | 5,5                 | 5,5  |
| Ontour T       |                                    |                 |                     |      |
| Presige T      |                                    |                 |                     |      |
| Ontour Alkoven |                                    |                 |                     |      |
| Maxia T        |                                    |                 |                     |      |



Always observe the information given for tyre pressure values which you will find on the label attached to the vehicle.

# Index

## A

Access ladder  
 garage bed/alcoves 62  
 Accessory weights 194  
 Airing 200  
 Alcove bed 62  
 Ancillary battery 116  
 changing the battery 116  
 position 117  
 Awning 44

## B

Battery circuit breaker 120  
 Bed conversion 59  
 Brakes 16

## C

CAMPERNET 185  
 Changeover valve 153  
 Changing the tyre 30  
 Charging process  
 when engine is running 116  
 Chassis 18  
 Checking the gas system 146  
 Choosing a parking space 17  
 Clothesline 69  
 Combined charger/charge  
 booster  
 place of installation 121  
 Condensation 200  
 Control panel 86

Converting the transverse seat  
 55  
 Cover flaps 40  
 Cushion arrangements 66

## D

Darkening system  
 driver's cab 74  
 Doors and lockers  
 interior 49  
 Doors  
 opening and closing 46  
 Driving 15  
 in curves 15  
 in reverse 16  
 sparing the tyres 26  
 Driving economically 16  
 Driving in curves 15  
 Driving in reverse 16

## E

Electric power supply 113  
 Electrical devices, installation  
 safety tips 84  
 Electrical system  
 fuse protection 114  
 Elevating table 53  
 Emergency equipment 10  
 first-aid kit 10  
 vehicle tool kit 11  
 warning triangle 10  
 Entrance door 35  
 Entrance step 41  
 Environment 210  
 disposal 212

excrements 211  
 picnic spots 212  
 rubbish 212  
 waste water 211  
 Environmental protection 210  
 Extendible flat screen TV 51  
 External cleaning 201  
 polishing 202  
 waxing 202  
 External socket 130

## F

Fire protection 8  
 First aid kit 10  
 Fittings 45  
 Flush toilet 142  
 Freezer compartment 177  
 Fresh water tank 137  
 to empty 139  
 Frost Control 172  
 Fume hood 182  
 Furniture doors 46  
 Furniture surfaces  
 upkeep 204  
 Fuse protection of electrical  
 system 104  
 Fuses, assignment of 124

## G

Gas 146  
 Gas alarm 157  
 Gas bottle, to change 150  
 Gas box 39  
 Gas cooker 180  
 to operate 182

Gas socket, external 156  
 Gas supply 148  
 Gas system  
 exhaust fumes 148  
 fixtures and changes 146  
 inspection 146  
 regulator knobs and valves 147  
 shutoff valves and valves 151  
 General inspection 11  
 Ground fault circuit interrupter  
 (GFCI) 115

## H

Hanging table 54  
 Heating 158  
 Hinged windows 70  
 HobbyConnect 99  
 Hot-water supply 138

## I

Information on vehicle weights  
 and weight-related data 20  
 Insect screen, pleated 72

## K

Keys to the vehicle 34

## L

Loading 19  
 Lockers  
 opening and closing 46  
 L-shaped seating arrangement 80

## M

Mains connection 113

Maintenance intervals 196

Mass when ready to  
drive 21

Media system 133

## O

Operating the cooker 182

## P

Petrol filler neck 40

Power saving 209

Preparing the vehicle 14

Push lock 47

## R

Rear external storage locker 20

Rear view camera 134

Redirecting electrical devices  
17

Refrigerator 173

230V operation 175

12V operation 175

air supply 32

door lock 174

operating on gas 175

types of operation 175

Refuelling 16

Registration 11

Rescue sheets 8

Resin stains 202

Rims 29

Roof bonnet 77

Roof load 43

Roof window 73

## S

Safety belts

in the superstructure 81

Satellite system 191

Seating

overview 82

Seats

in the superstructure 80

Securing the vehicle 17

Shunting 16

Smart Trailer System 111

Sunshades, pleated 72

## T

Tables 53

Tail stanchions 42

Tar stains 202

Technically permissible

maximum weight 20

Toilet cassette access door 37

Toilet

emptying the cassette 143

to use 143

Toilet

upkeep 205

Touch control panel 86

TV 192

Tyre pressure 27

Tyre pressure values 219

Tyre profile depth 28

Tyres 26

## U

Upkeep 201

chair and cushion covers,  
curtains 203

fitted carpet 204

furniture surfaces 205

PVC flooring 204

toilet 205

windows and doors 203

USB twin charger socket 128

## V

Valve for waste water tank 140

Valves 151

Vehicle Identification Number

18

Ventilation grills 33

## W

Warning triangle 10

Waste water tank 141

to empty 140

Water filler necks 39/137

Windows 69

Winter lay-up 206

base vehicle 206

containers 207

interior fittings 207

Winter operation 207

airing 208

Winter tyres 26

Worktop extension 52

**Hobby-Wohnwagenwerk**

Ing. Harald Striewski GmbH

Harald-Striewski-Straße 15

D-24787 Fockbek/Rendsburg

[www.hobby-caravan.de](http://www.hobby-caravan.de)